 
 
 
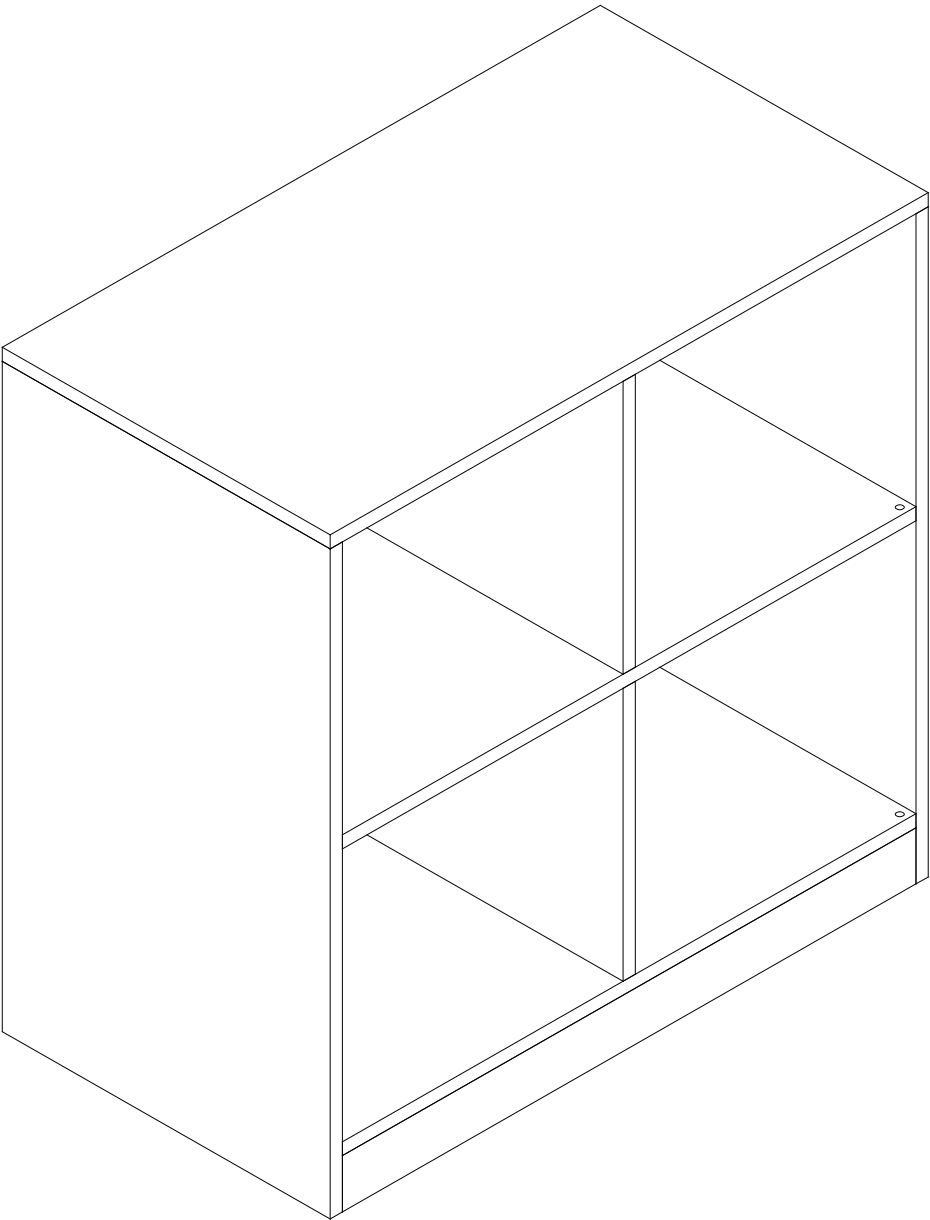 


ASSEMBLY INSTRUCTION
FLAIR LOOP CUBE UNIT

 


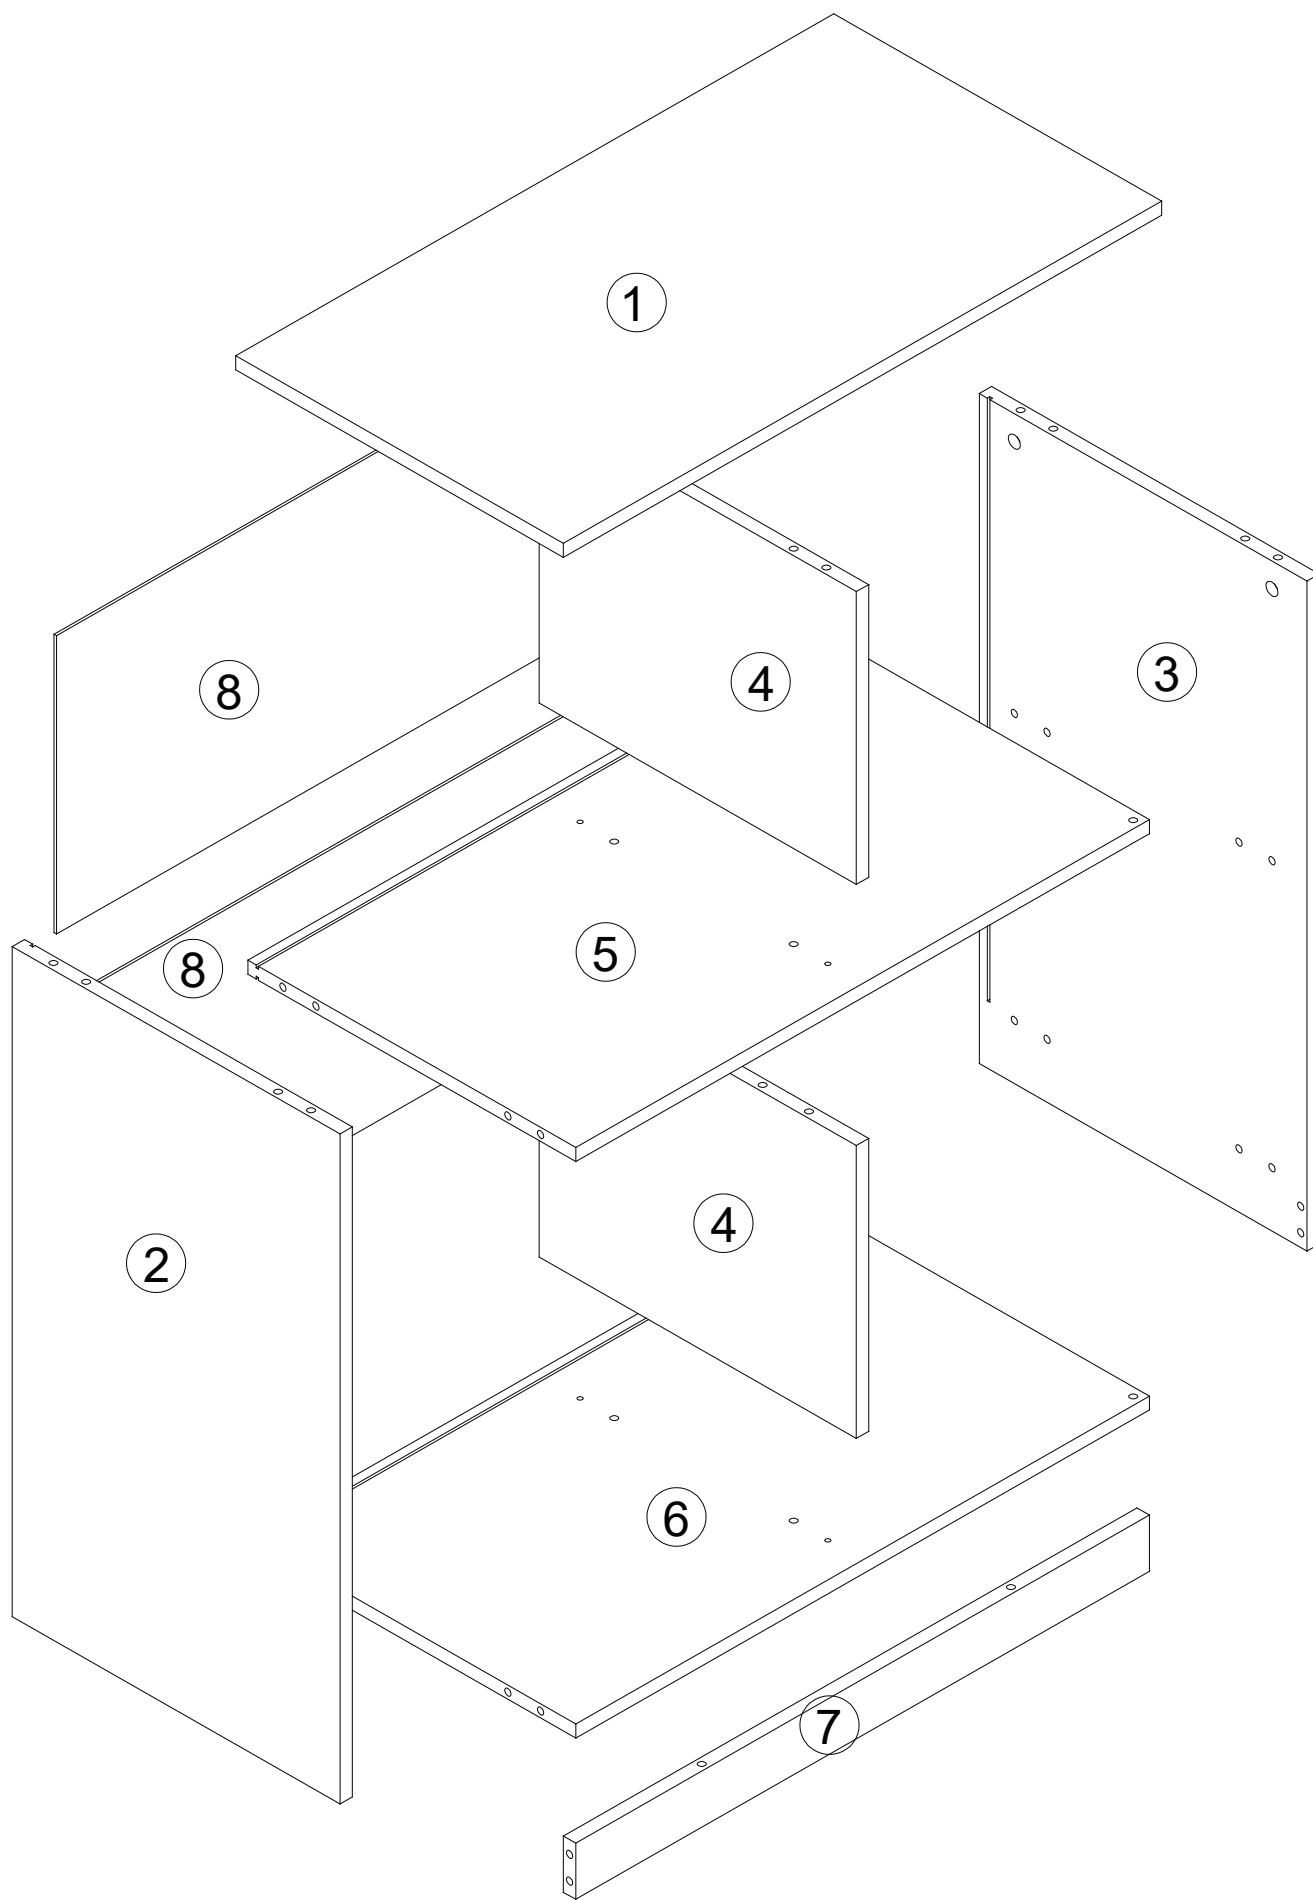


6x35mm
A x 18




B x 18



6x30mm
C x 24

 

3x14mm
D x 2

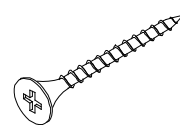 

4x35mm
E x 6



F x 2





G x 2




H x 4


STEP 1

A		2
---	---	---

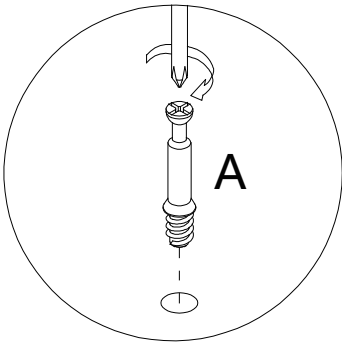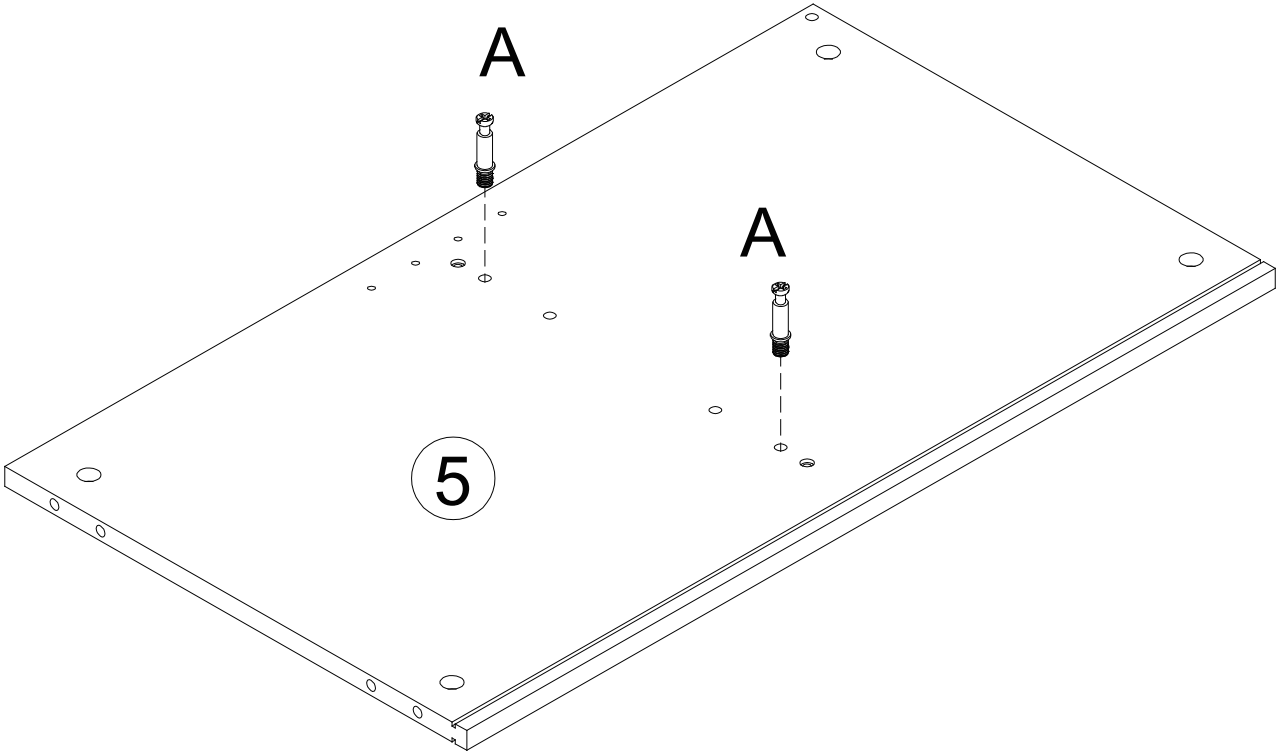  


 
STEP 2

C		2
E		2

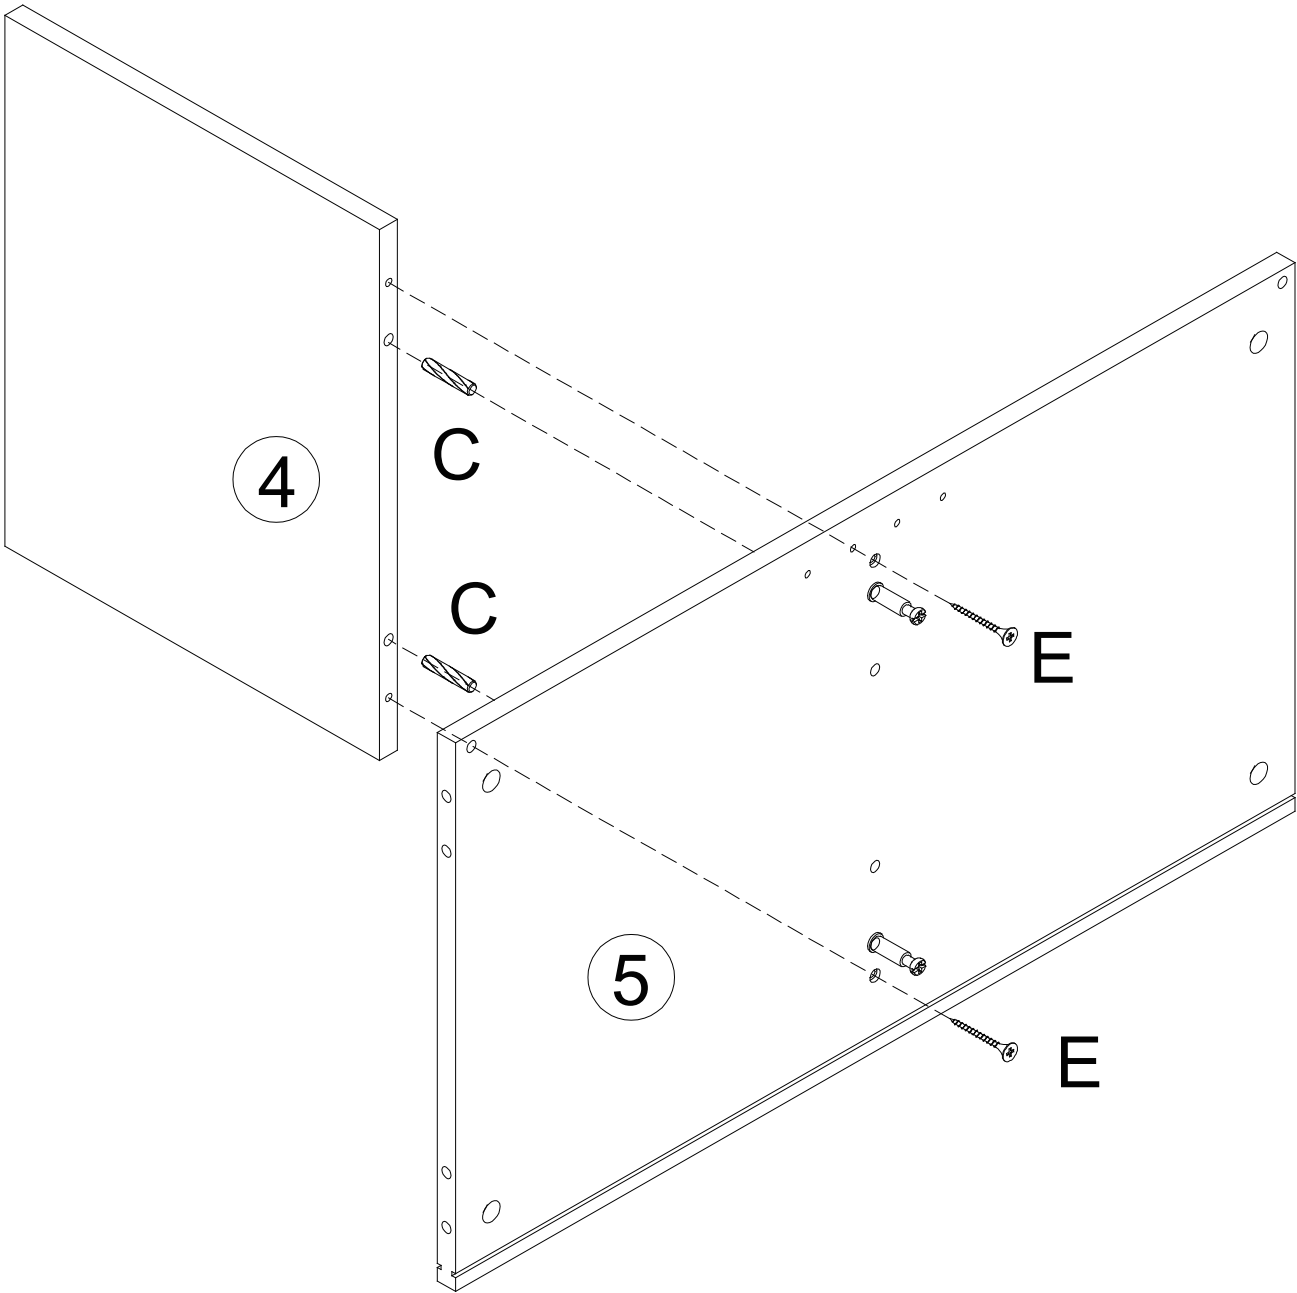 



STEP 3

B		2
C		2

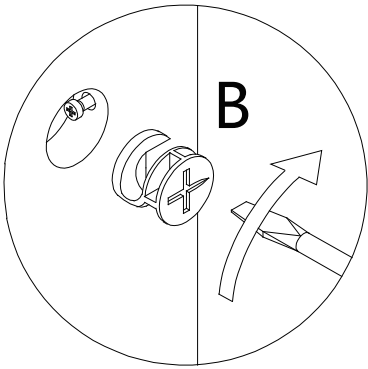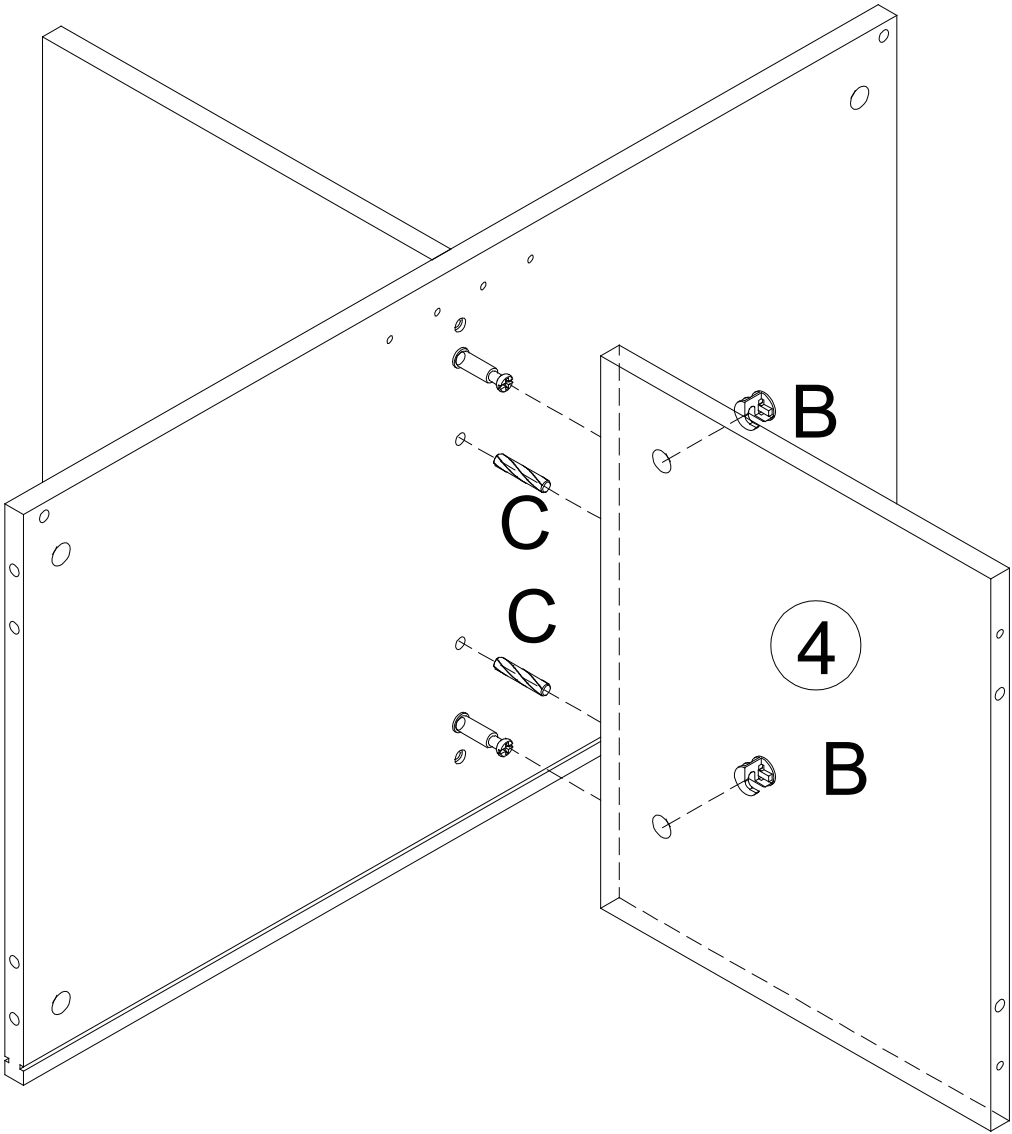  


STEP 4

C		2
E		2

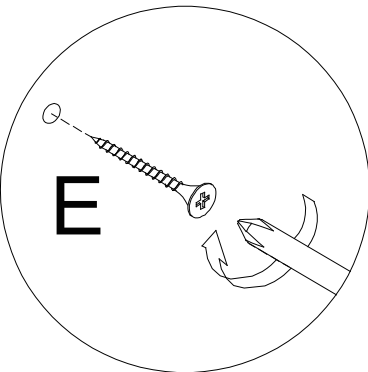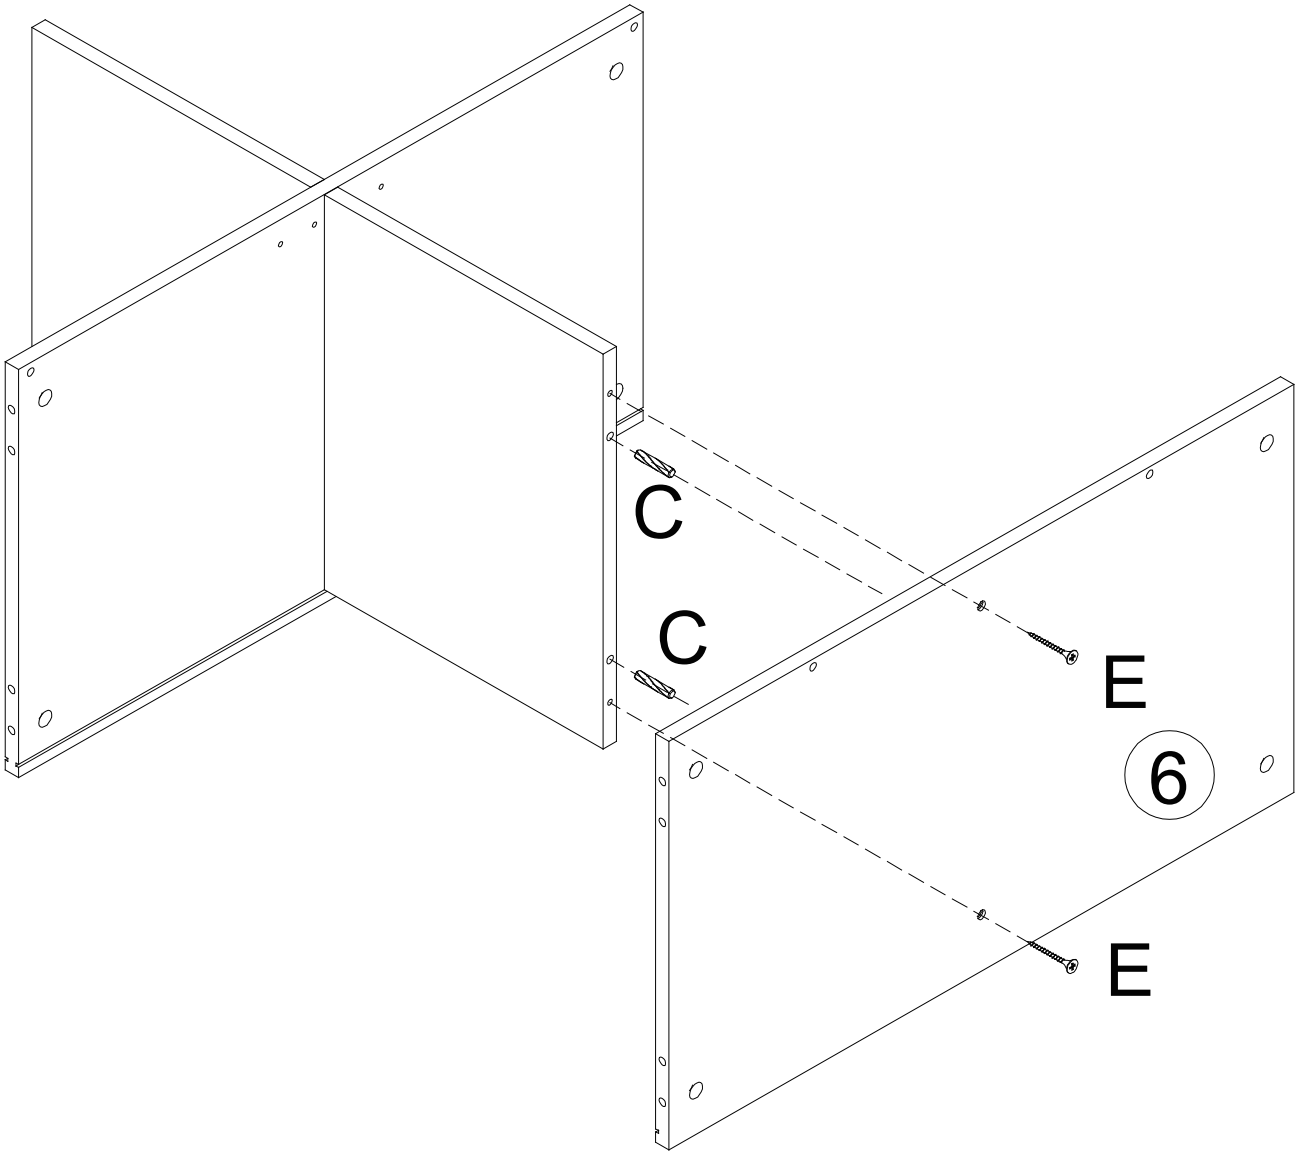  



STEP 5

C		2
---	---	---

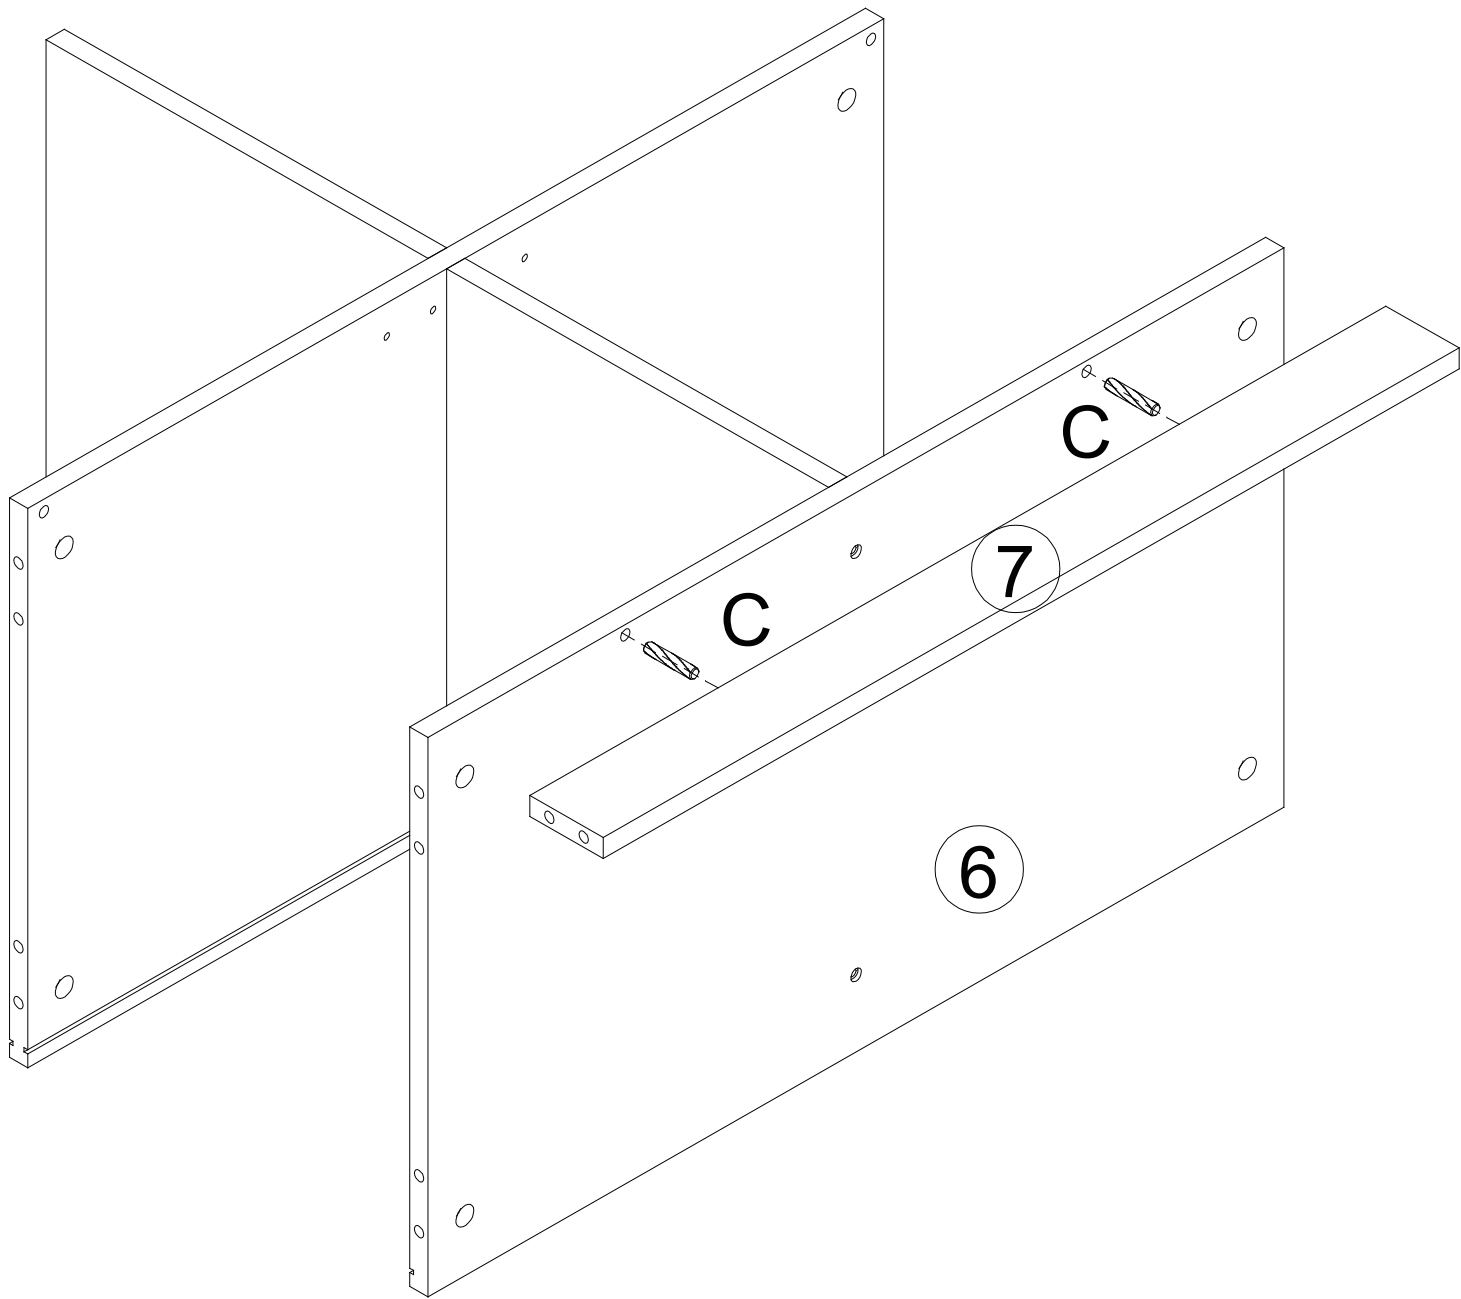 

 
STEP 6

A		10
---	---	----

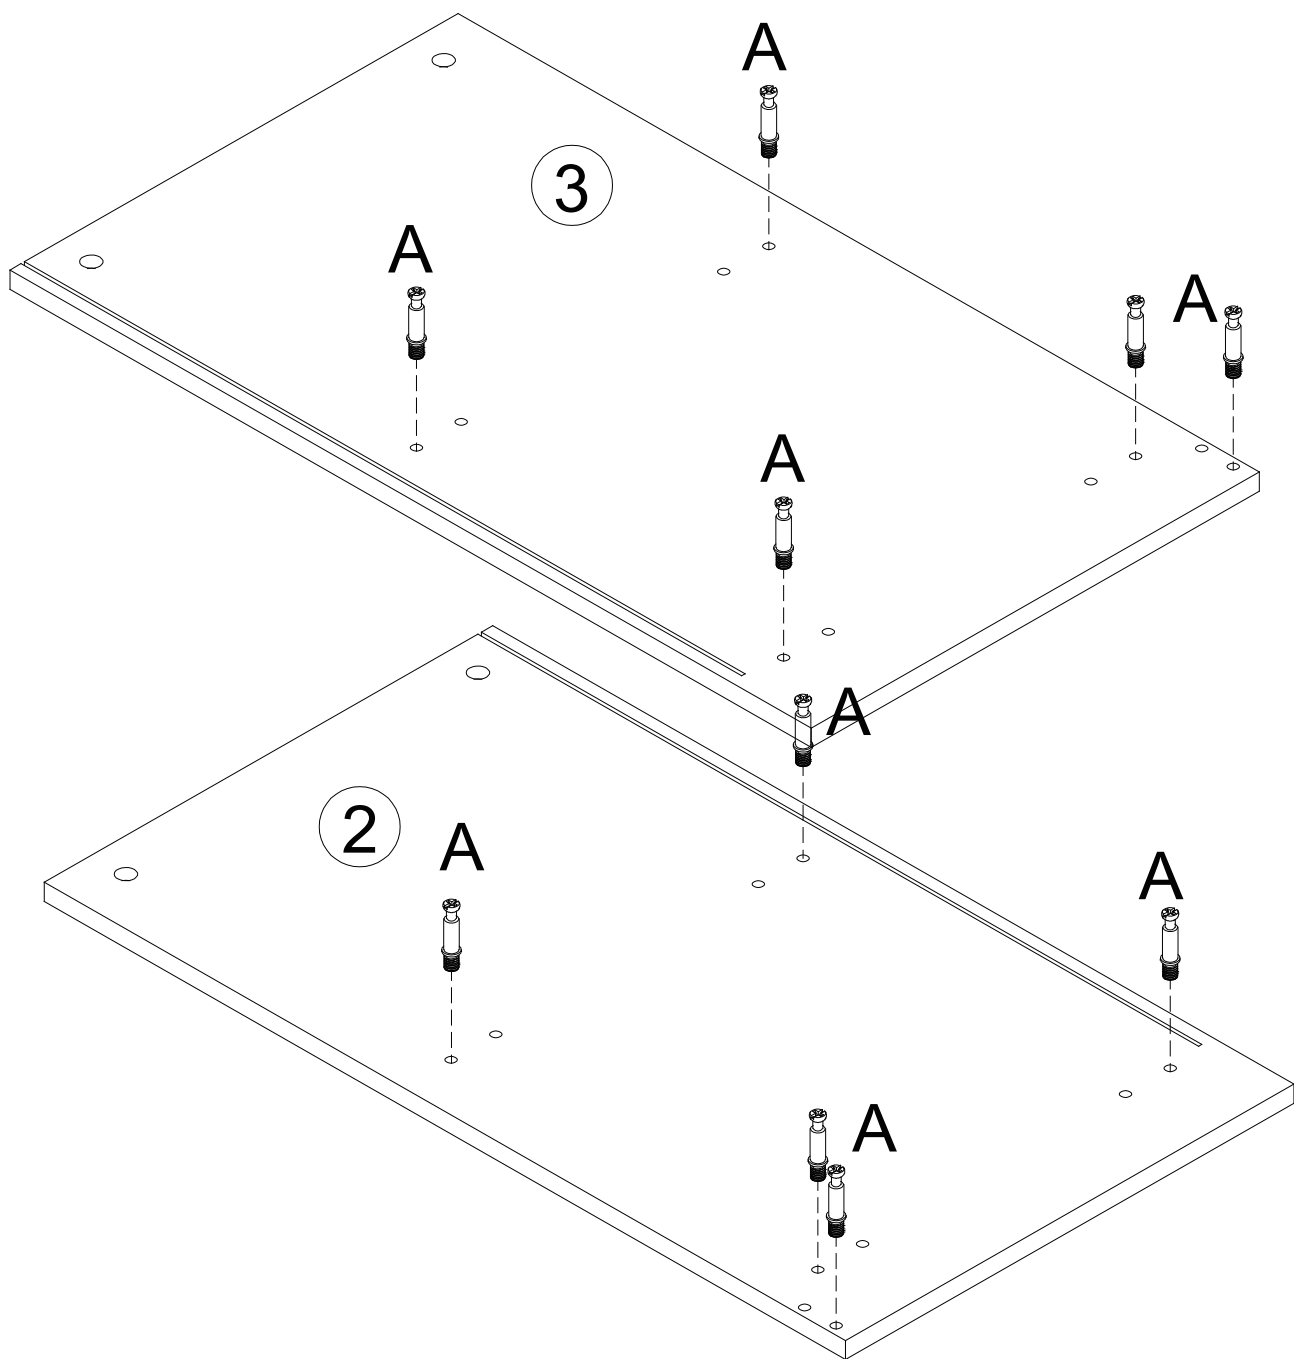 


STEP 7

B		5
C		5

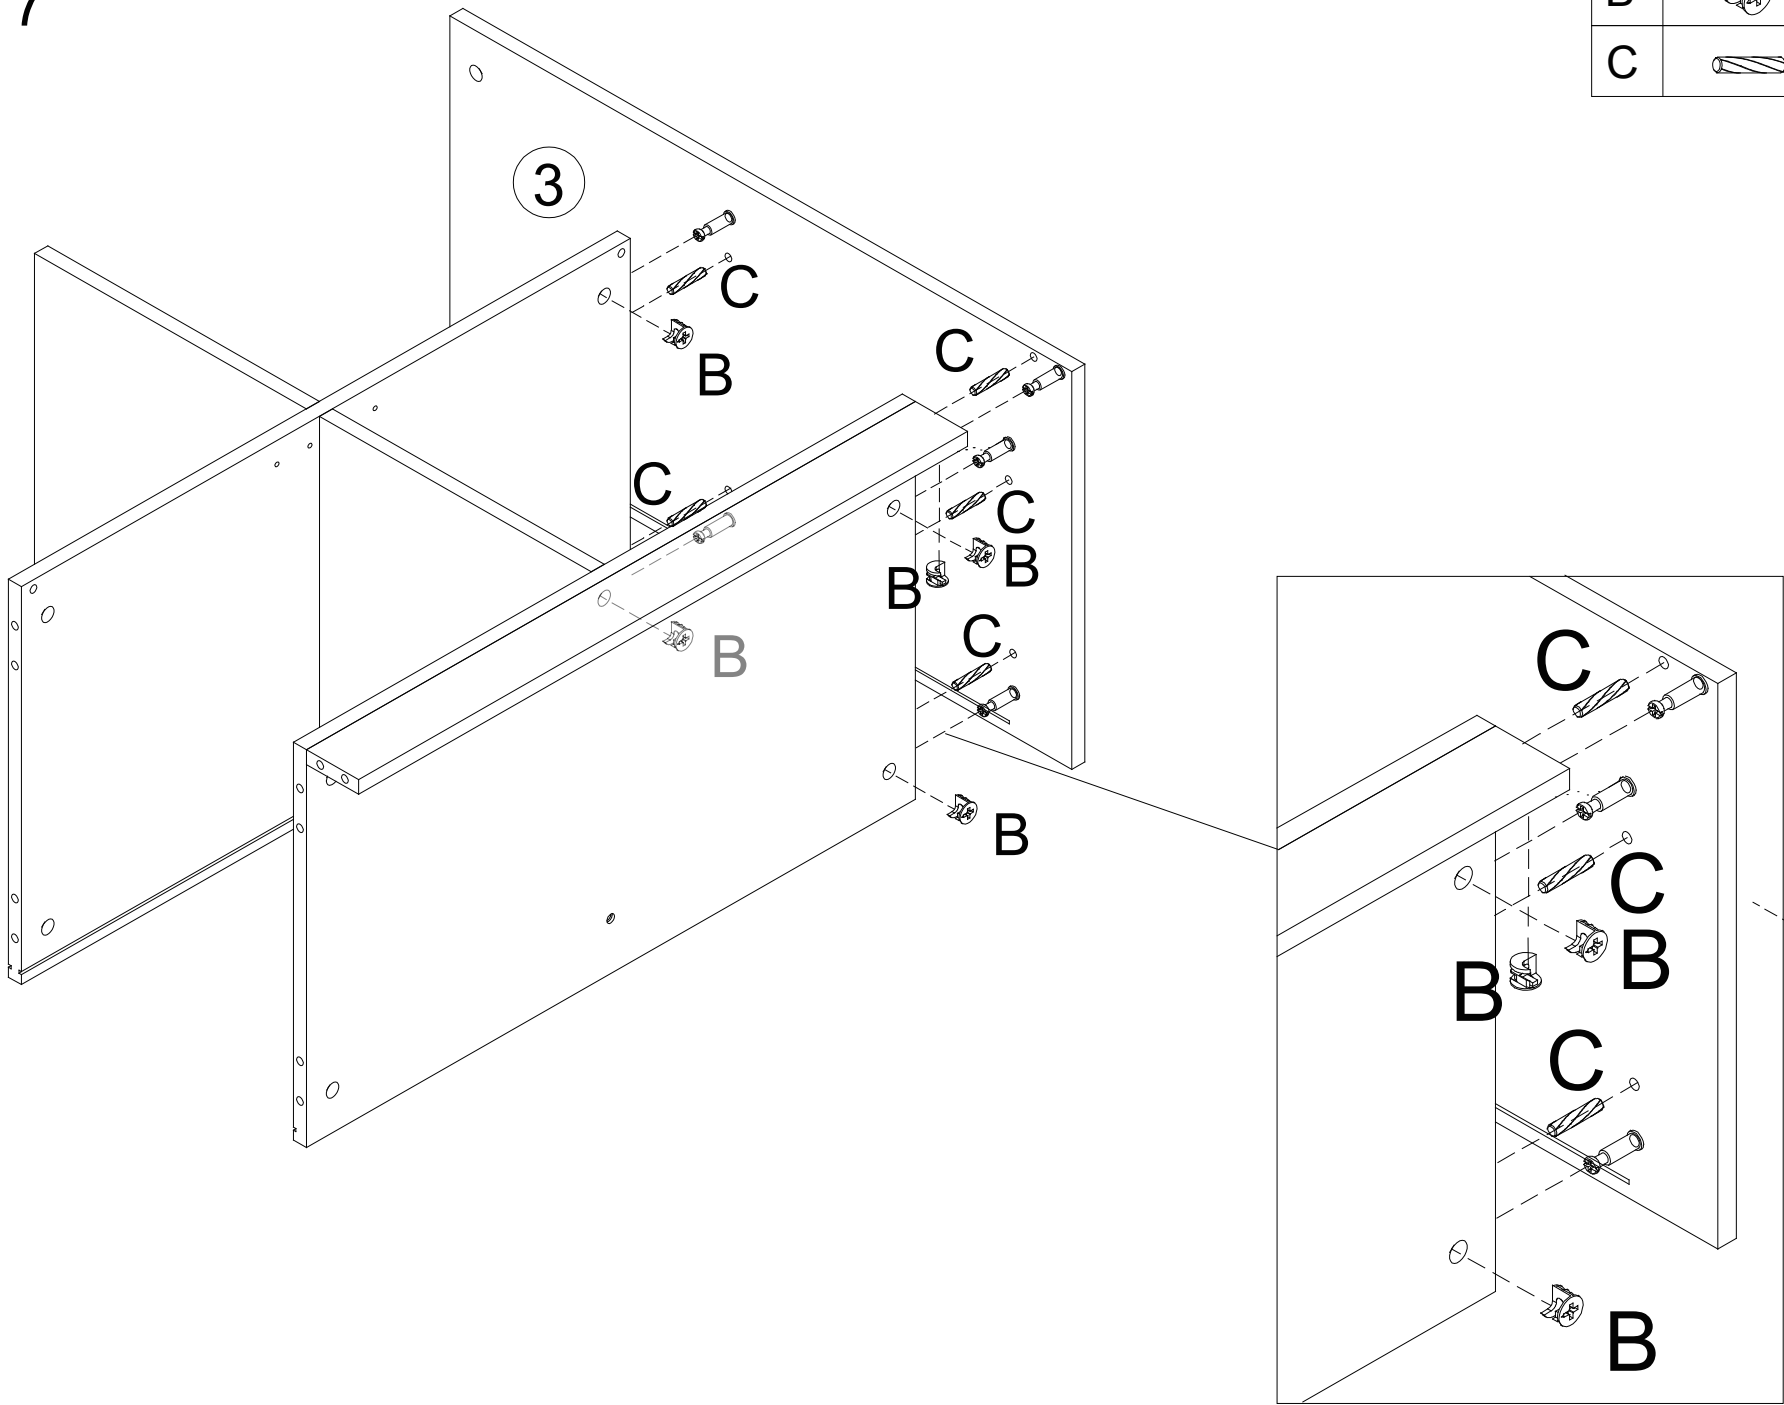 


 STEP 8

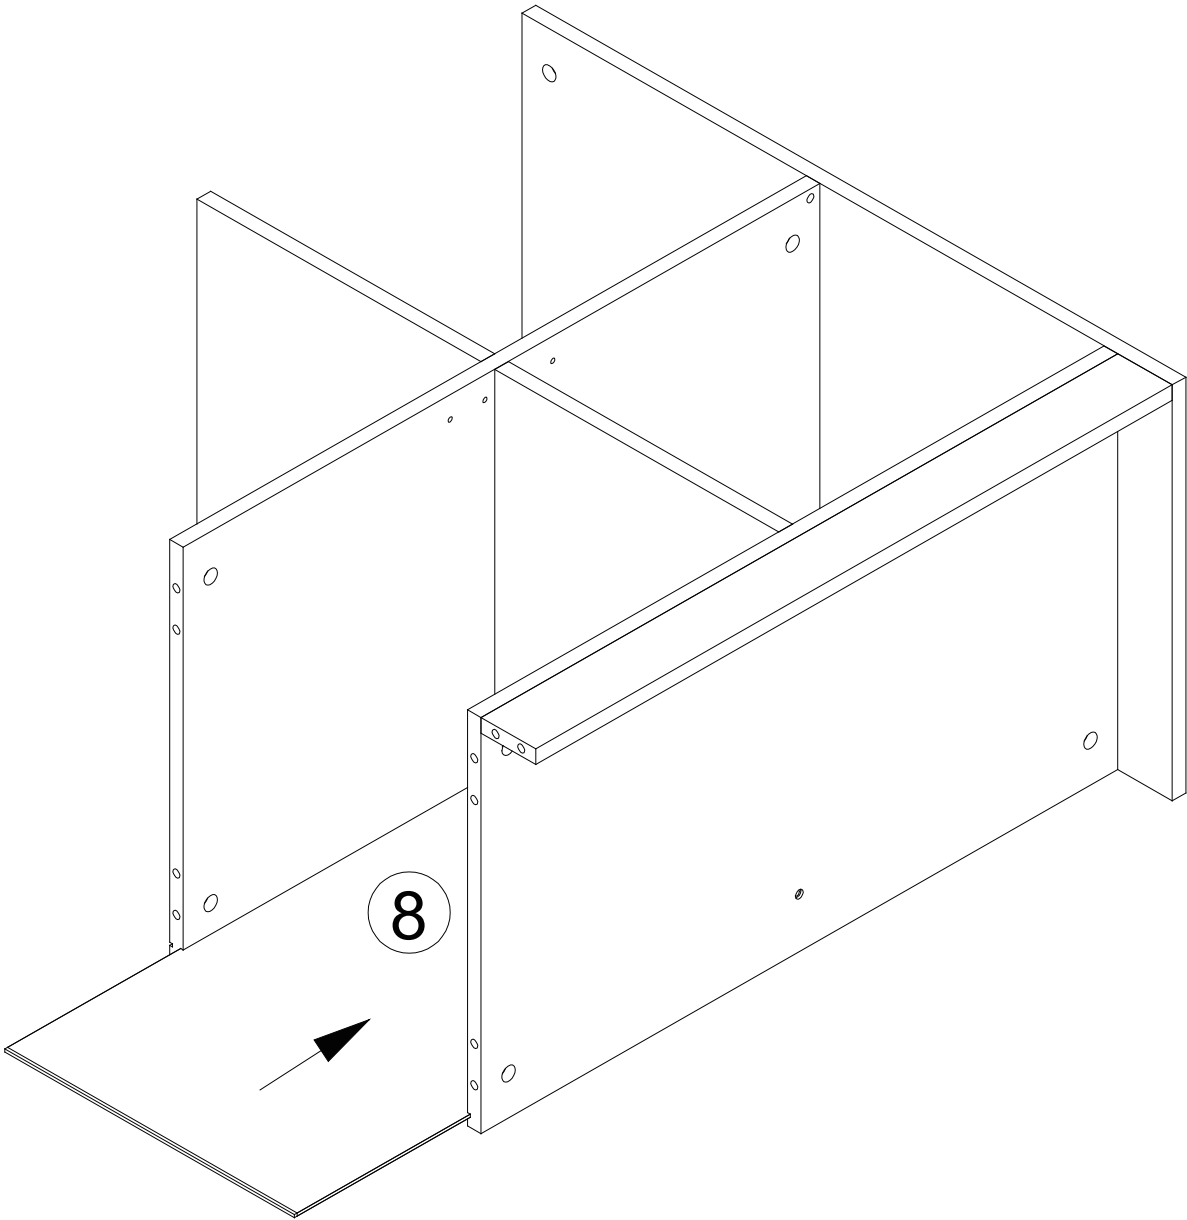



STEP 9

B		5
C		5

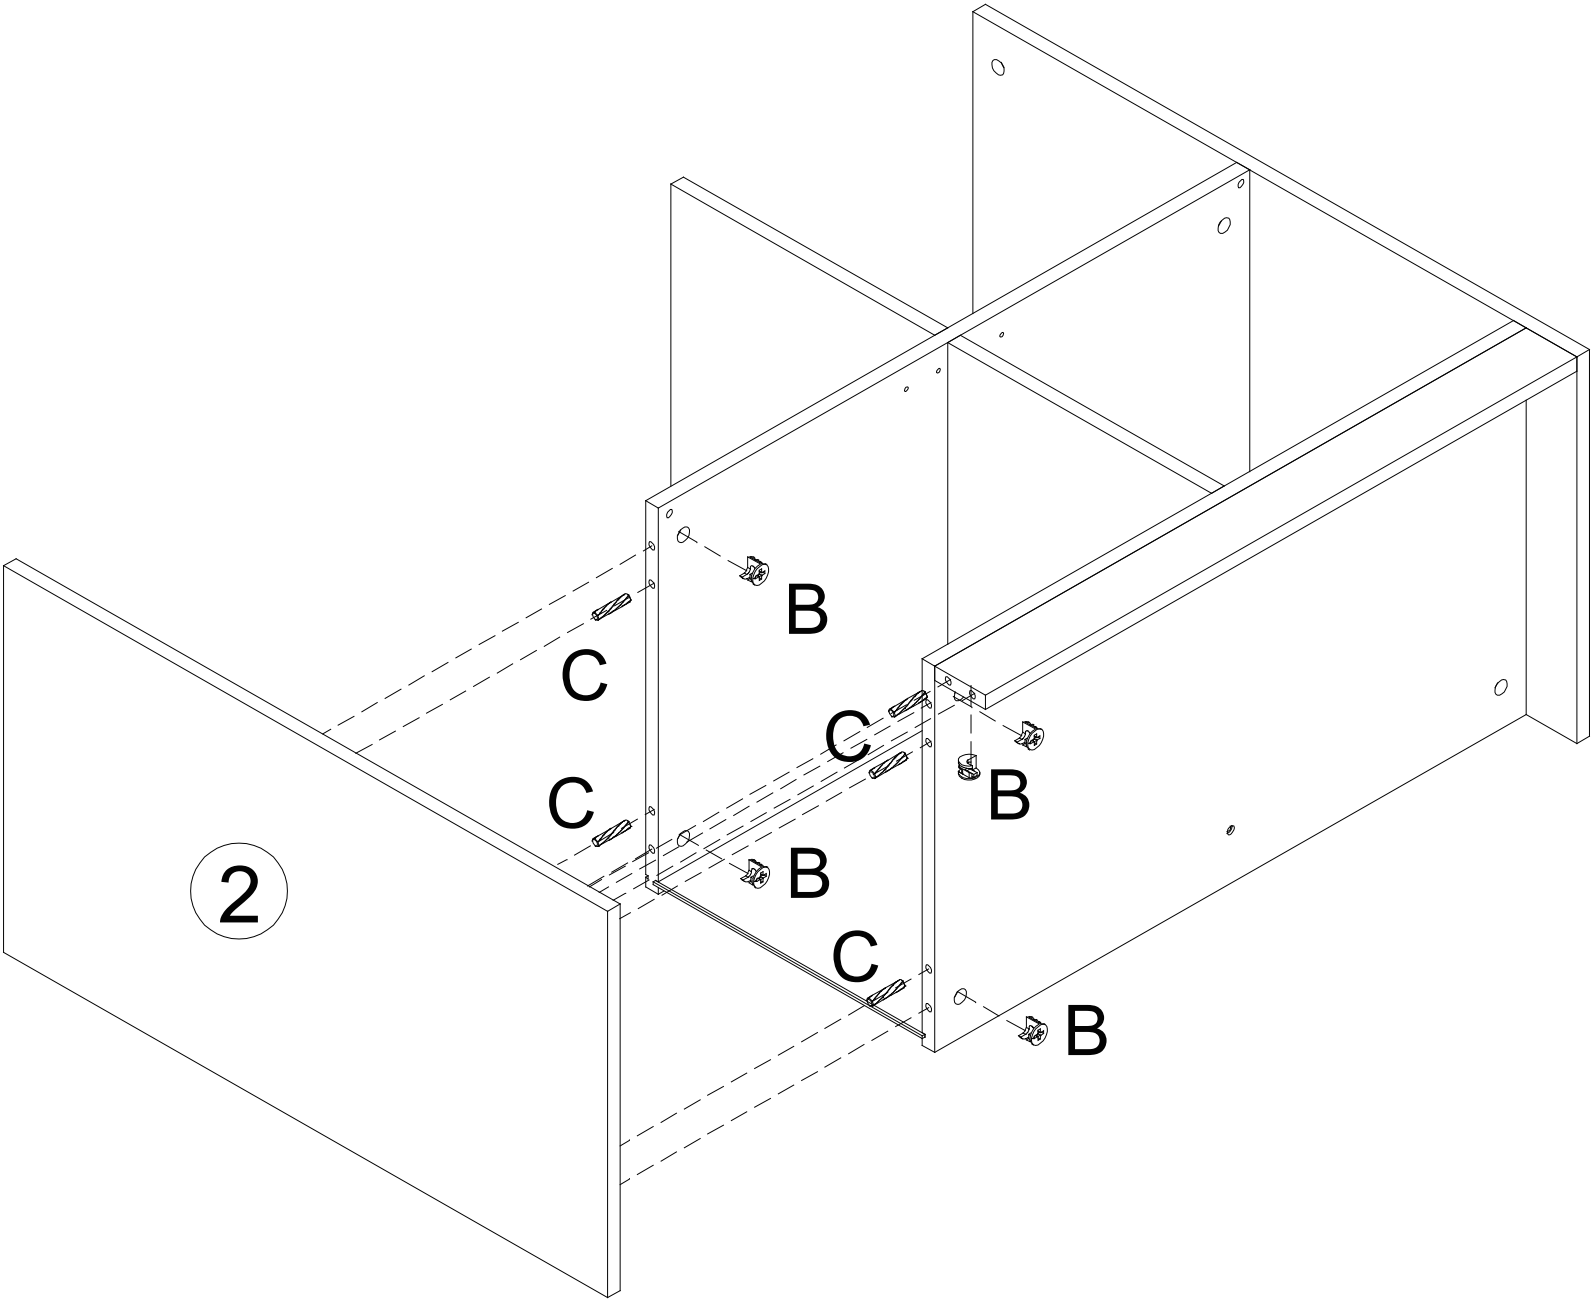 


 STEP 10


A		6
---	---	---

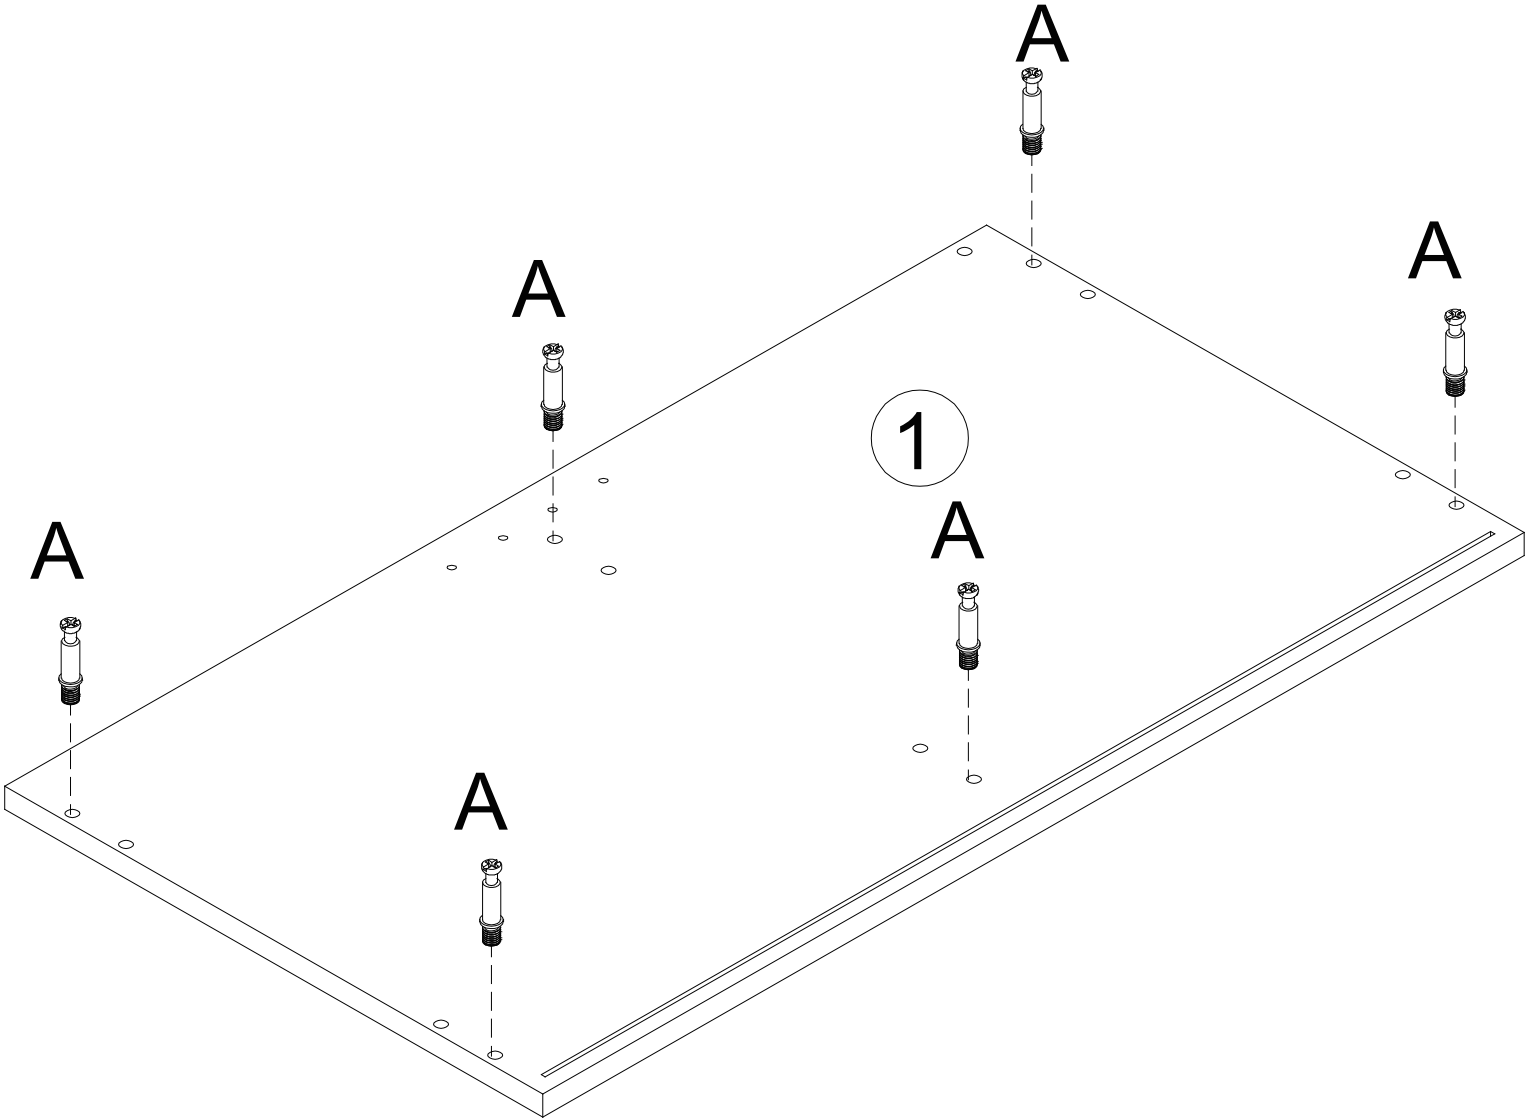 

 STEP 11

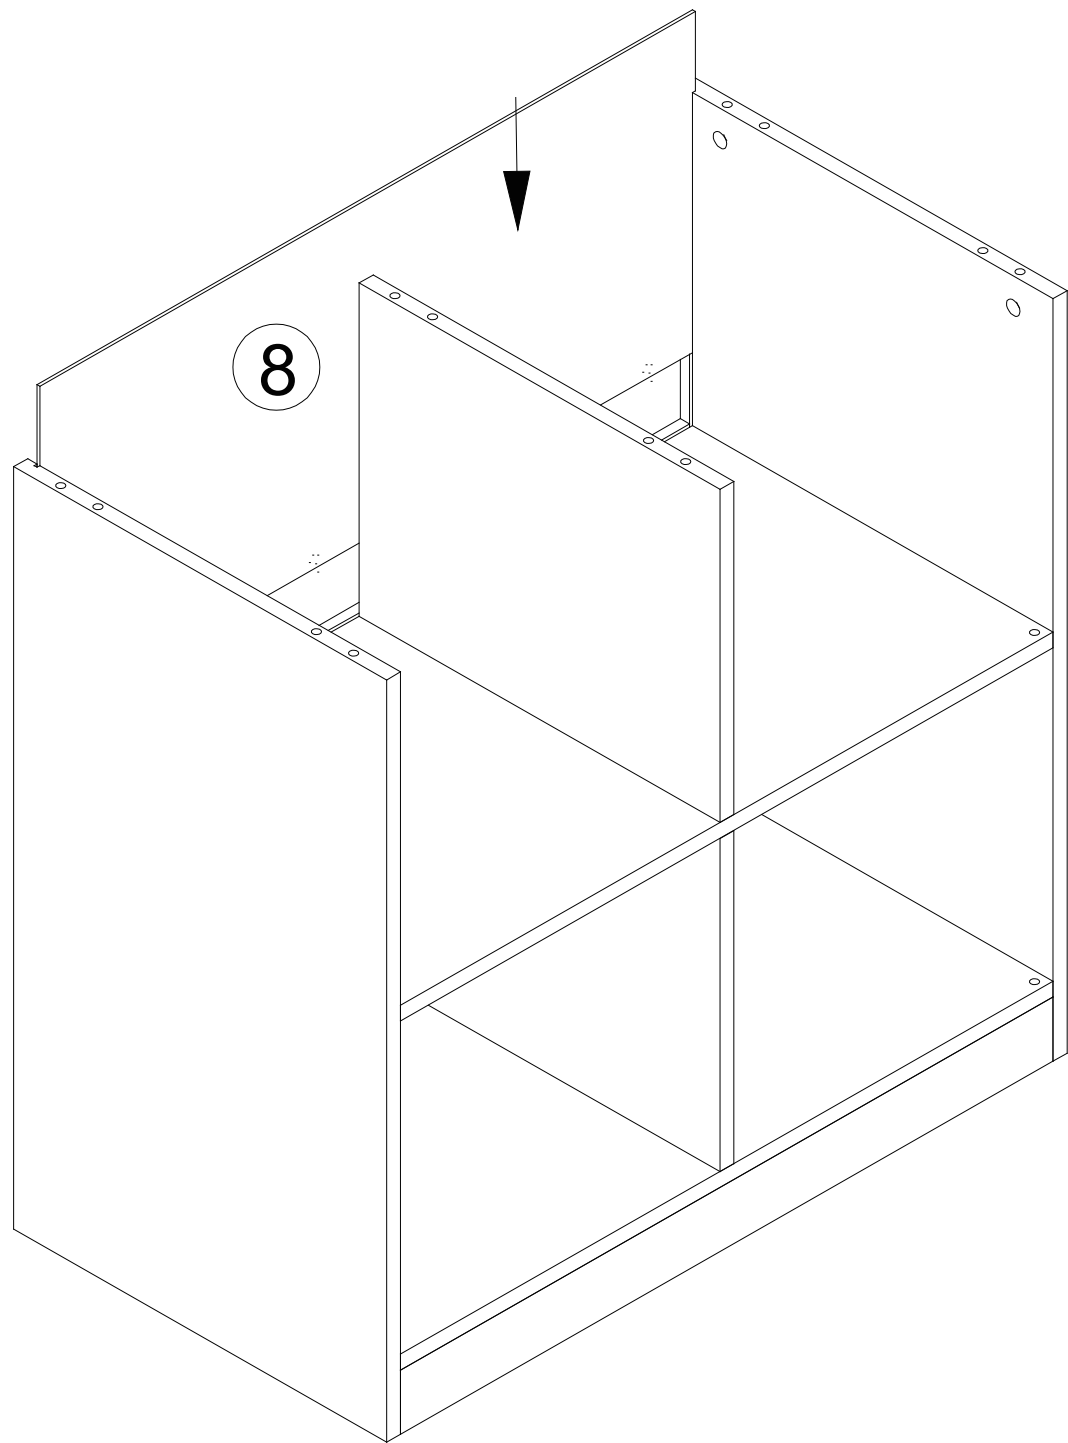

 
STEP 12

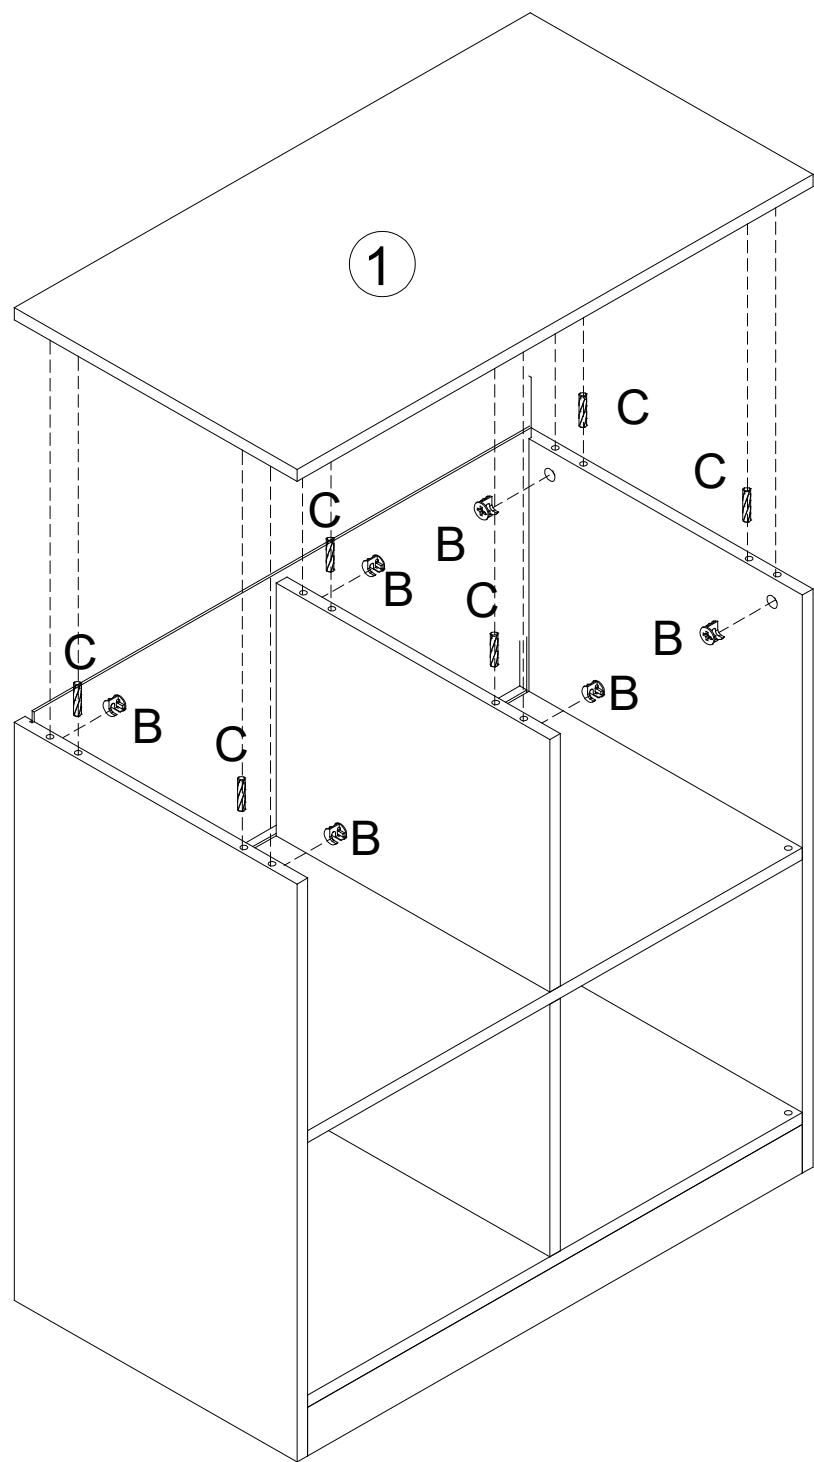


B		6
C		6


STEP 13

H		4
---	--	---

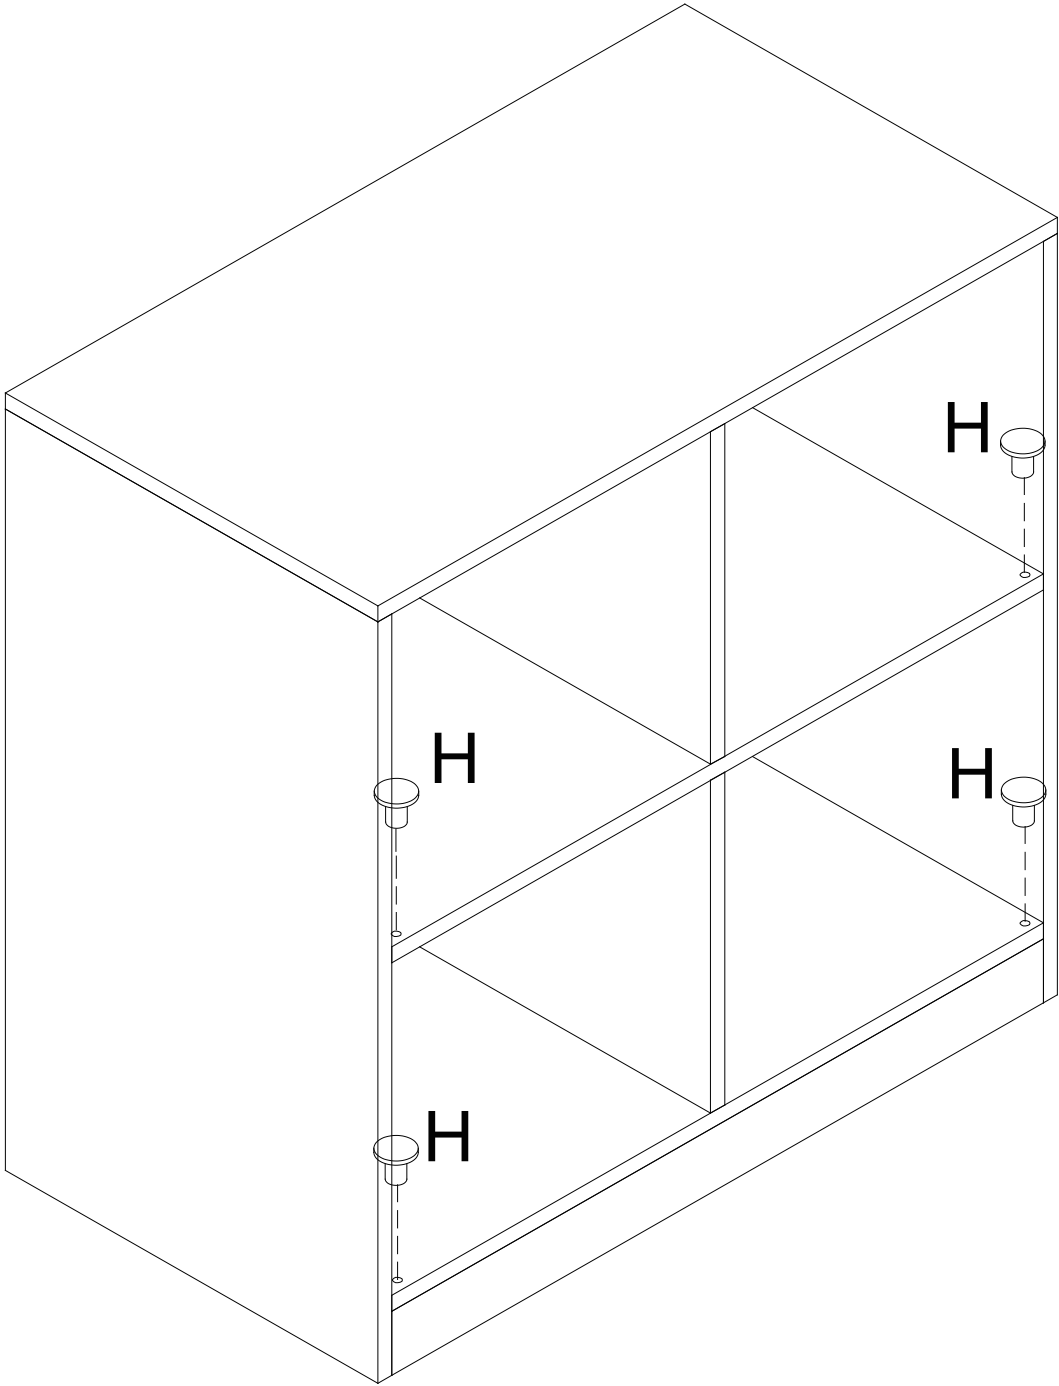 

 STEP 14

G		2
D		2

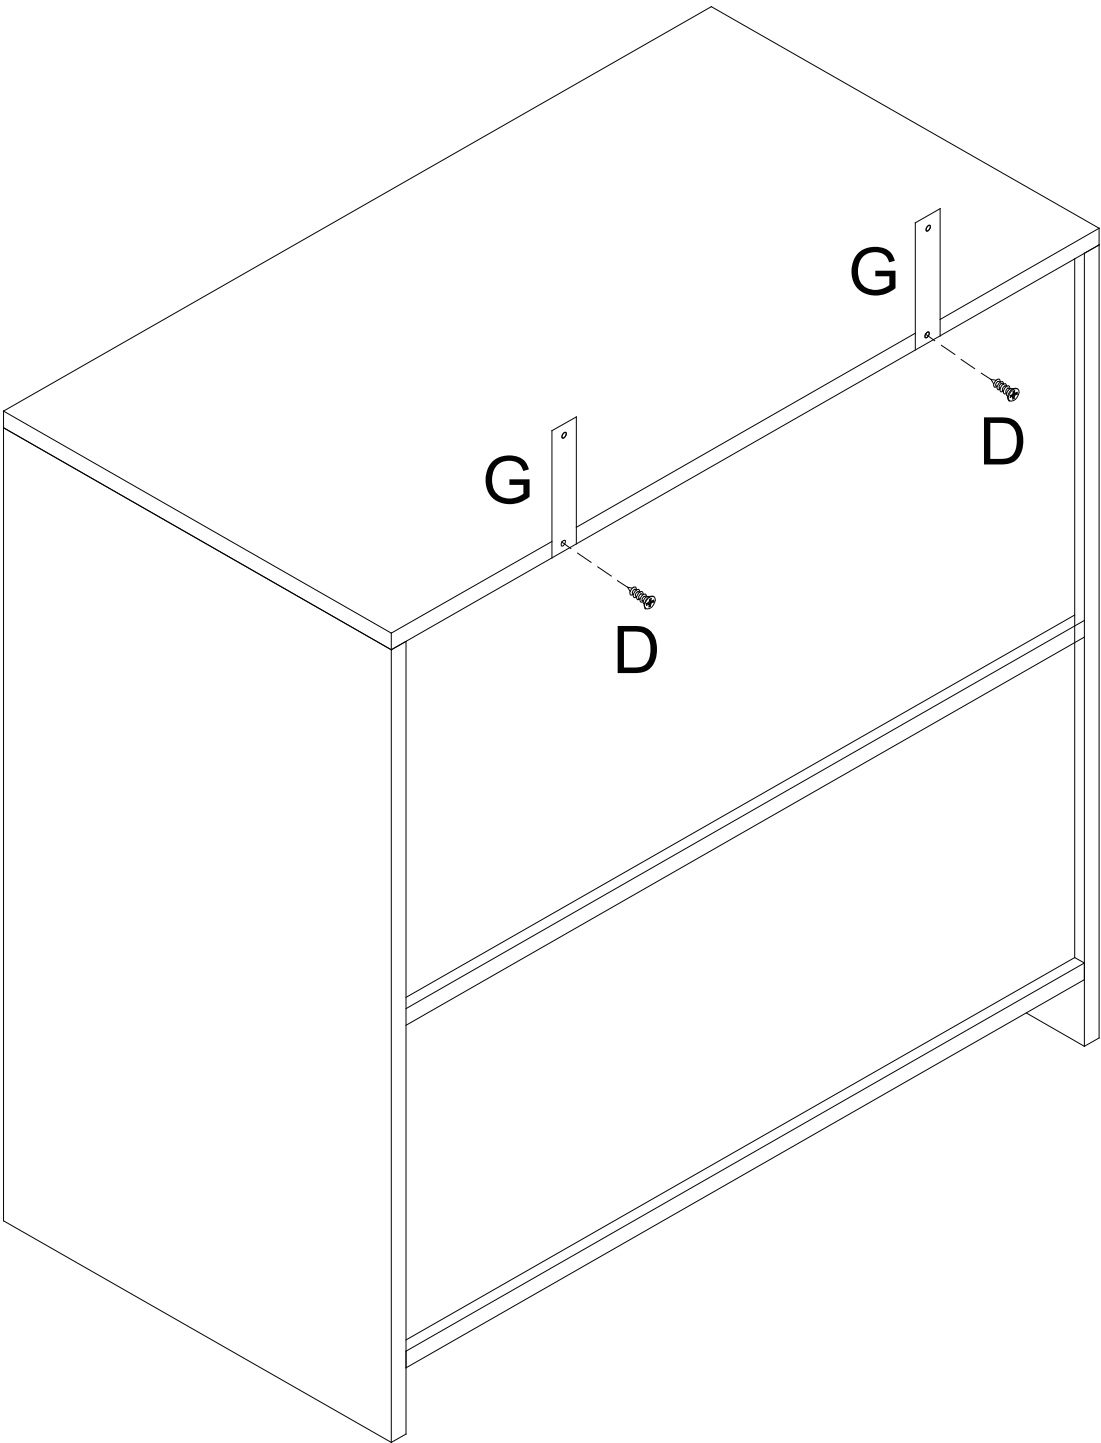 

STEP 15

E		2
F		2

