

Flair Furnishings

SONAR FABRIC OTTOMAN BED FRAME




Assembly Instructions

Important

If for any reason you need to return this item, you must return it in its original packaging. Assembled items cannot be returned.

IMPORTANT NOTE * PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE

- * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO PREVENT SCRATCHES.
- * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.



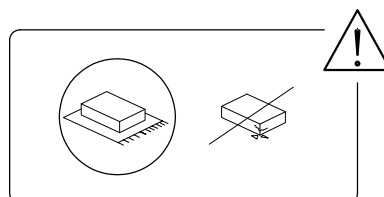
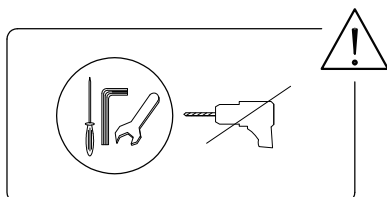
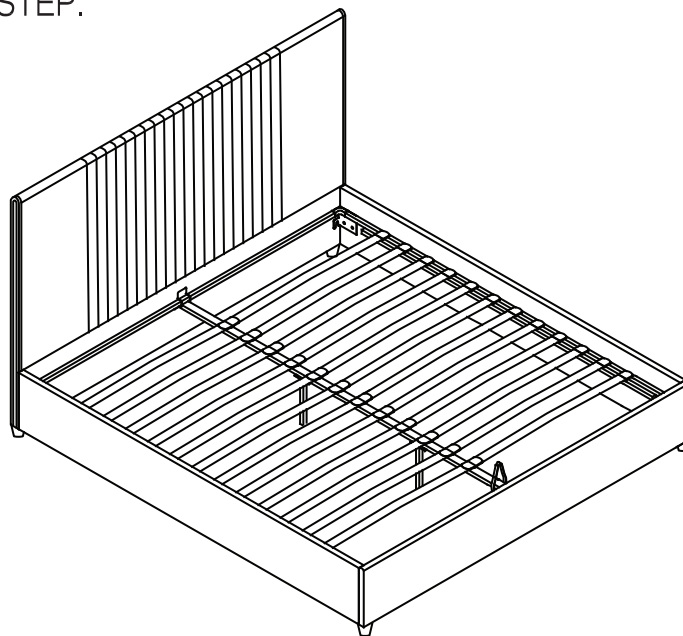






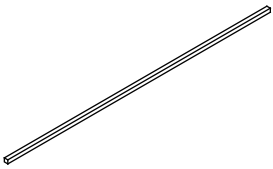
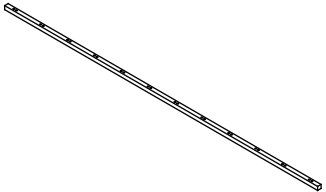


30'





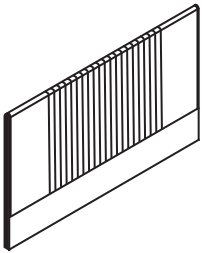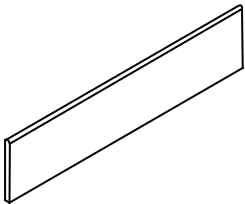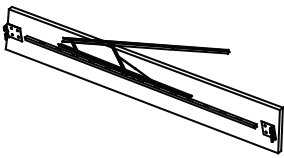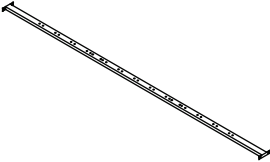

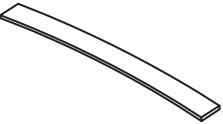







2





Parts


| | | | |
|--|---|--|--|
| ① Headboard-1PC  | ② Footboard-1PC  | ③ Sideboard-2PCS  | ④ Middle Bar-1PC  |
| ⑤ Supporting Legs-2PCS  | ⑥ Double Caps-12PCS  | ⑦ Single Caps-24PCS  | ⑧ Storage Slats-24PCS  |
| ⑨ Black non-woven fabric-1PC  | ⑩ Metal Trapezium-2PCS  | ⑪ Metal Trapezium-4PCS  | ⑫ Metal bar for metal frame-2PCS  |
| ⑬ Metal bar for metal frame-2PCS  | | | |

Fittings





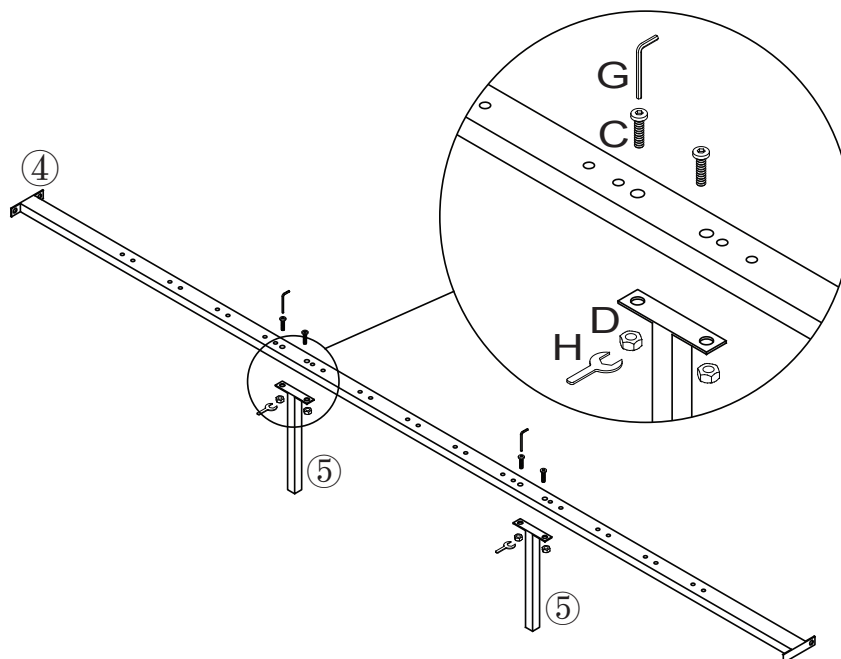

| | | | | |
|--|--|--|---|---|
| Ⓐ x16 M8x30mm Bolt  | Ⓑ x4 Screw  | Ⓒ x30 M8x40mm Bolt  | Ⓓ x30 M8 Nut  | Ⓔ x16 Spring Washer  |
| Ⓕ x16 Flat Washer  | Ⓖ x1 Allen Key  | Ⓗ x1 Spanner  | Ⓘ x1 Mattress Stopper  | Ⓙ x1 Belt  |
| Ⓚ x4 Plastic Connector  | Ⓛ x4 Plastic Legs, 2cm  | | | |


Step 1

| | | | | |
|--|--|---|---|--|
| Ⓒ x4 M8x40mm Bolt  | Ⓓ x4 M8 Nut  | Ⓖ x1 Allen Key  | Ⓗ x1 Spanner  | |
|--|--|---|---|--|







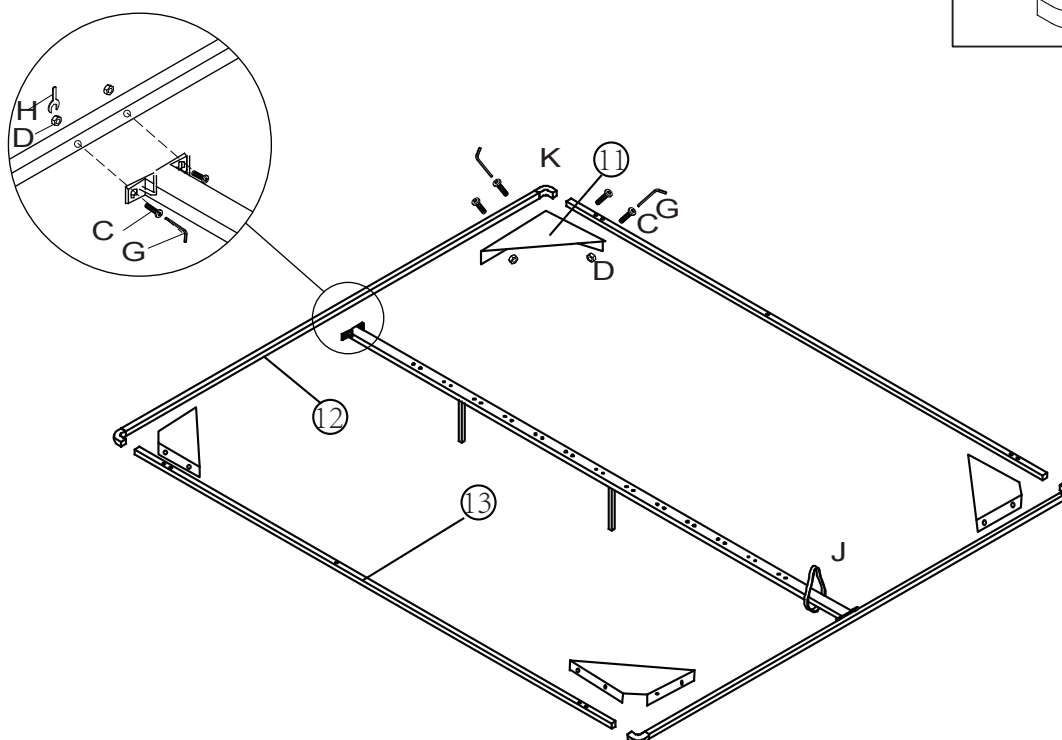


Step 2

| | | | | |
|---|---|---|---|---|
| Ⓒ x20 M8x40mm Bolt  | Ⓓ x20 M8 Nut  | Ⓖ x1 Allen Key  | Ⓗ x1 Spanner  | Ⓙ x1 Belt  |
| | | | | Ⓚ x4 Plastic Connector  |





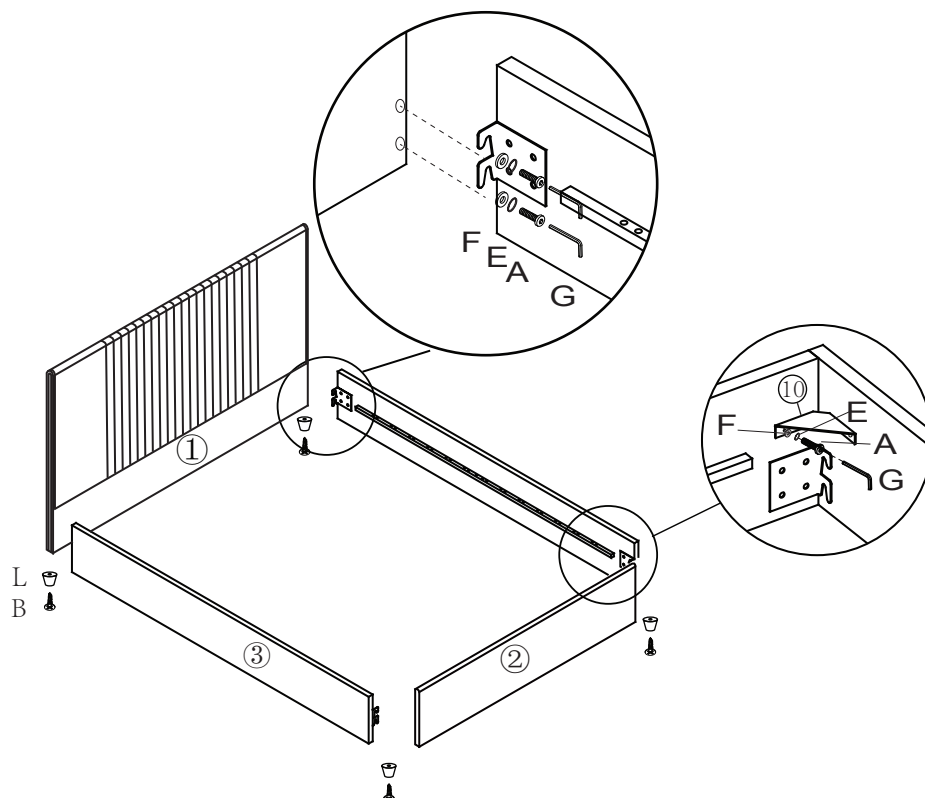


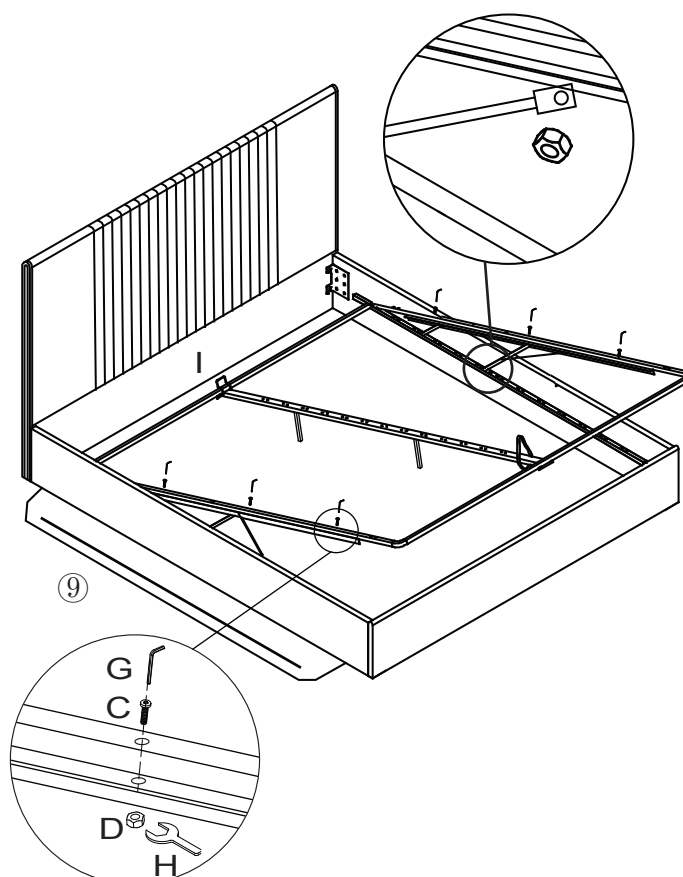
Step 3

| | | | | |
|---|---|--|--|---|
| A x16 M8x30mm Bolt  | B x4 Screw  | E x16 Spring Washer  | F x16 Flat Washer  | G x1 Allen Key  |
| L x4 Plastic Legs, 2cm  | | | | |



Step 4

| | | | | |
|--|--|---|---|--|
| C x6 M8x40mm Bolt  | D x6 M8 Nut  | G x1 Allen Key  | H x1 Spanner  | I x1 Mattress Stopper  |
|--|--|---|---|--|



Step 5

