

Flair Furnishings Nature Treehouse Bed Assembly Instructions

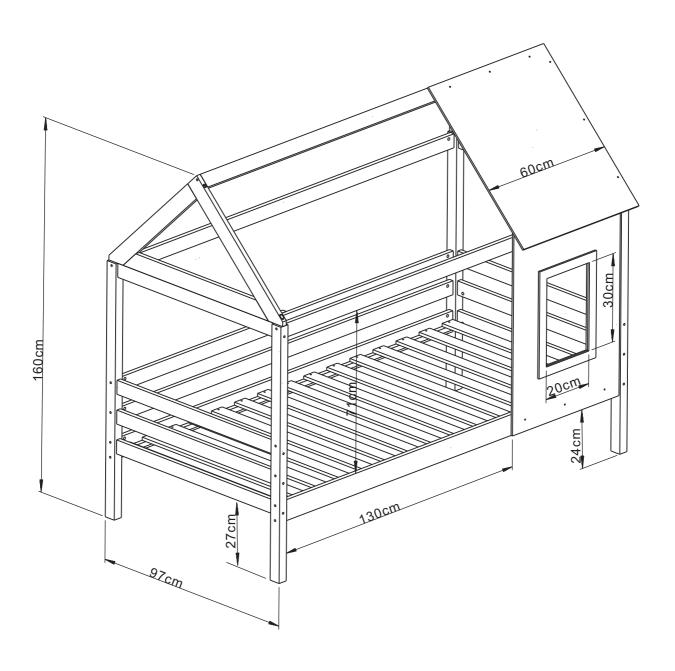

READ THE ASSEMBLY INSTRUCTIONS
CAREFULLY. IDENTIFY THE ELEMENTS
CONSTITUING YOUR PIECE OF FURNITURE.
GROUP AND CHECK THE HARDWARE
FITTINGS.GET THE TOOLS NEEDED. CLEAR
SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME.KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE.IN THE EVENT OF QUERY.

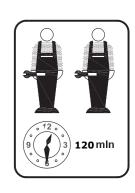

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the pages below
- * Remove all fittings from the plastic bags and separate them into their groups.
- * Keep children and animals away from the work area, small parts could choke if swallowed.
- * Make sure you have enough space to lay out the parts before starting.
- * Do not stand or put weight on the product, this could cause damage.
- * Assemble the item as close to its final position (in the same room) as possible.
- * Assemble on a soft, level surface to avoid damaging the unit or your floor.
- * We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- * Dispose of all packaging carefully and responsibly.

Safety, Care and Maintenance


- * Components Periodically check and ensure that all the components are in their proper position and free from damage. Also, make sure that all connectors are tight and secure. Do not use the bed if any structural part is broken or missing
- * Humidity Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed
- * WARNING Children can become trapped between the bed and the wall, a roof pitch, the ceiling or adjoining pieces of furniture (e.g. cupboards)

 To avoid risk of serious injury the distance between the bed and any adjoining structure shall not exceed 75mm or shall be more than 230mm.
- * Mattress Recommended mattress size for this bed is 900mm by 1900mm (UK standard 3' by 6'3") Recommended mattress depth is 150mm. A sprung or Foam mattress can be used.

Do not use power tools	No. people	Assembly Time	Tools required
	ŤŤ	120 mins (approx.)	

Components - Panels

Please check that you have all the components listed below before constructing your item.

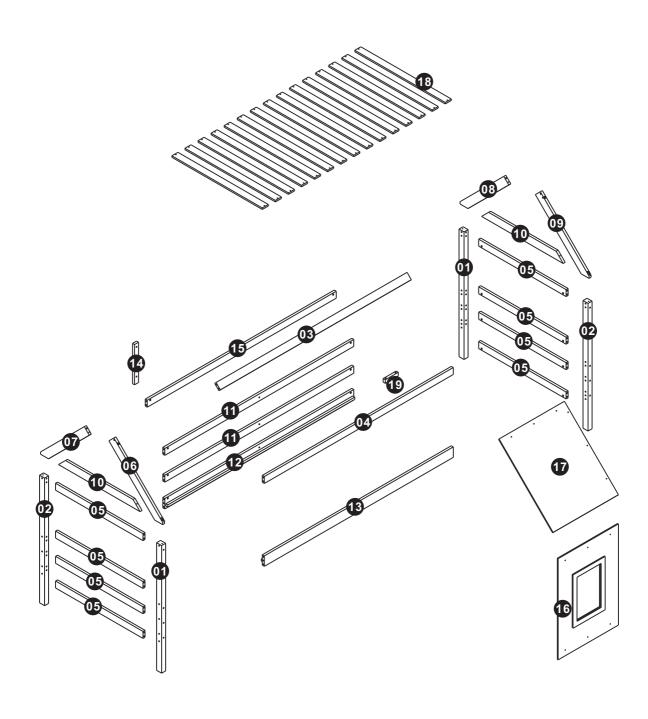

Components - Fixings

Please check that you have all the components listed below before constructing your item.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A x32	B x2	C x10	D x13	E x40
	<u> </u>		(*)cooppoon	
M6x90mm	Ø6x100mm	Ø6x60mm	Ø4x20mm	Ø8 x30mm
F x32	G x2	H x32	I x3	J x3
(*) Ø4x30mm				⊚ M6x30mm
K x12				ı mexeciiii

Please use a ruler to measure your screws & bolts in mm

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

