



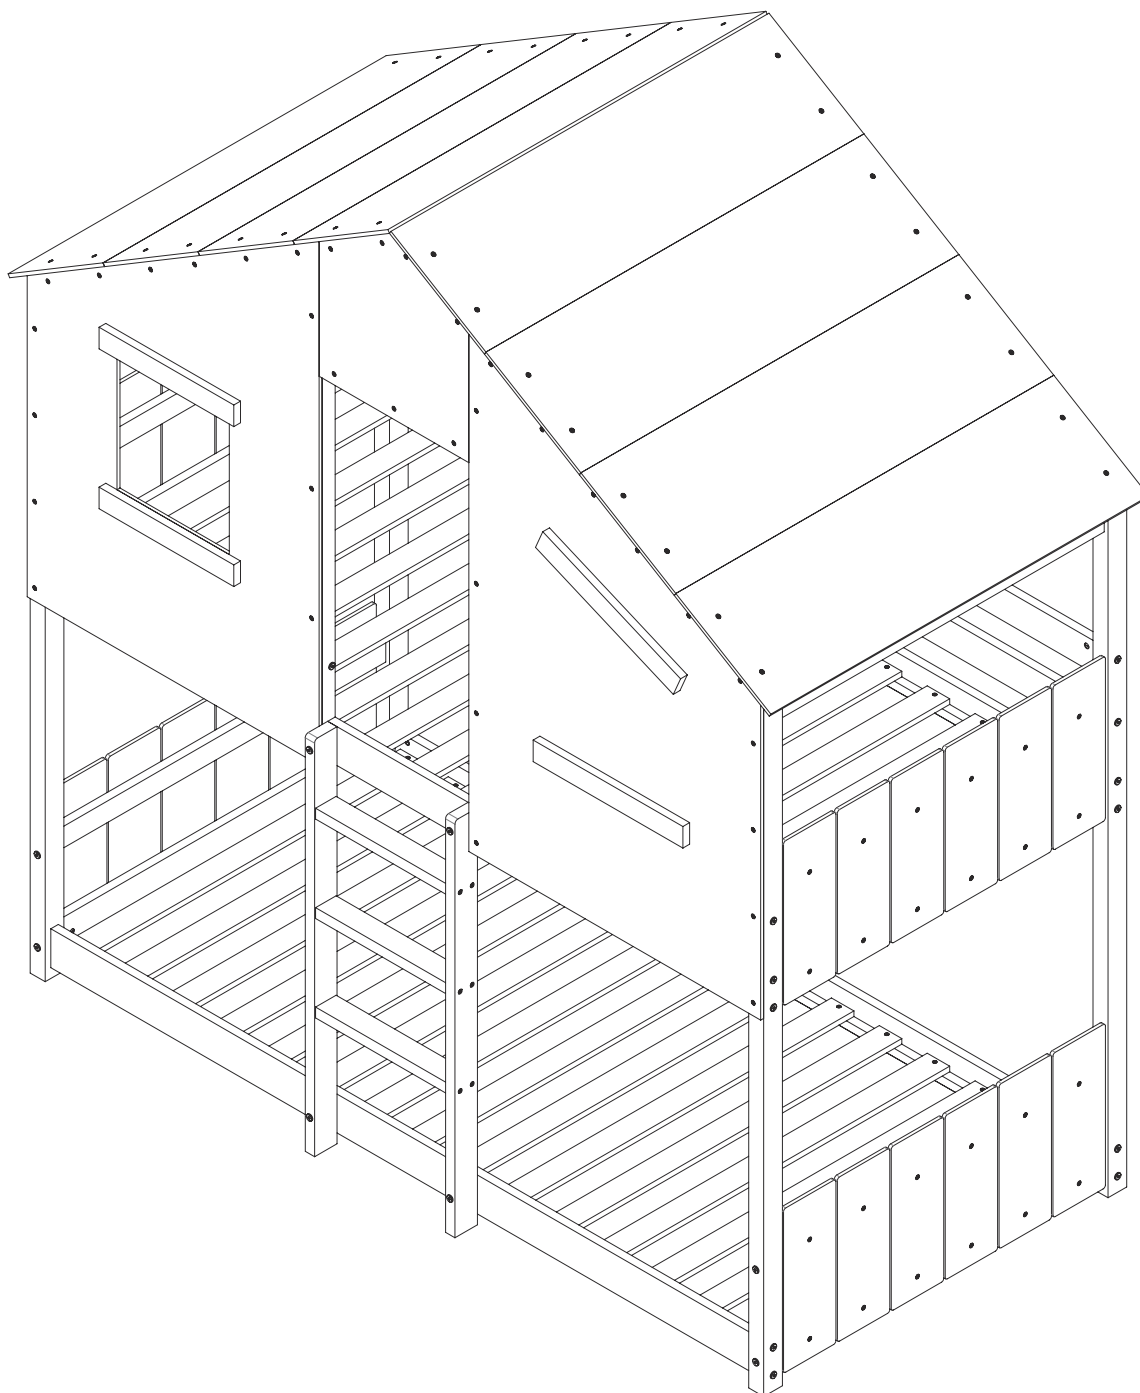


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE









NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

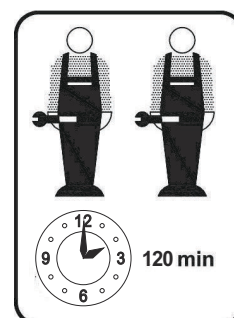




EXPLODED VIEW

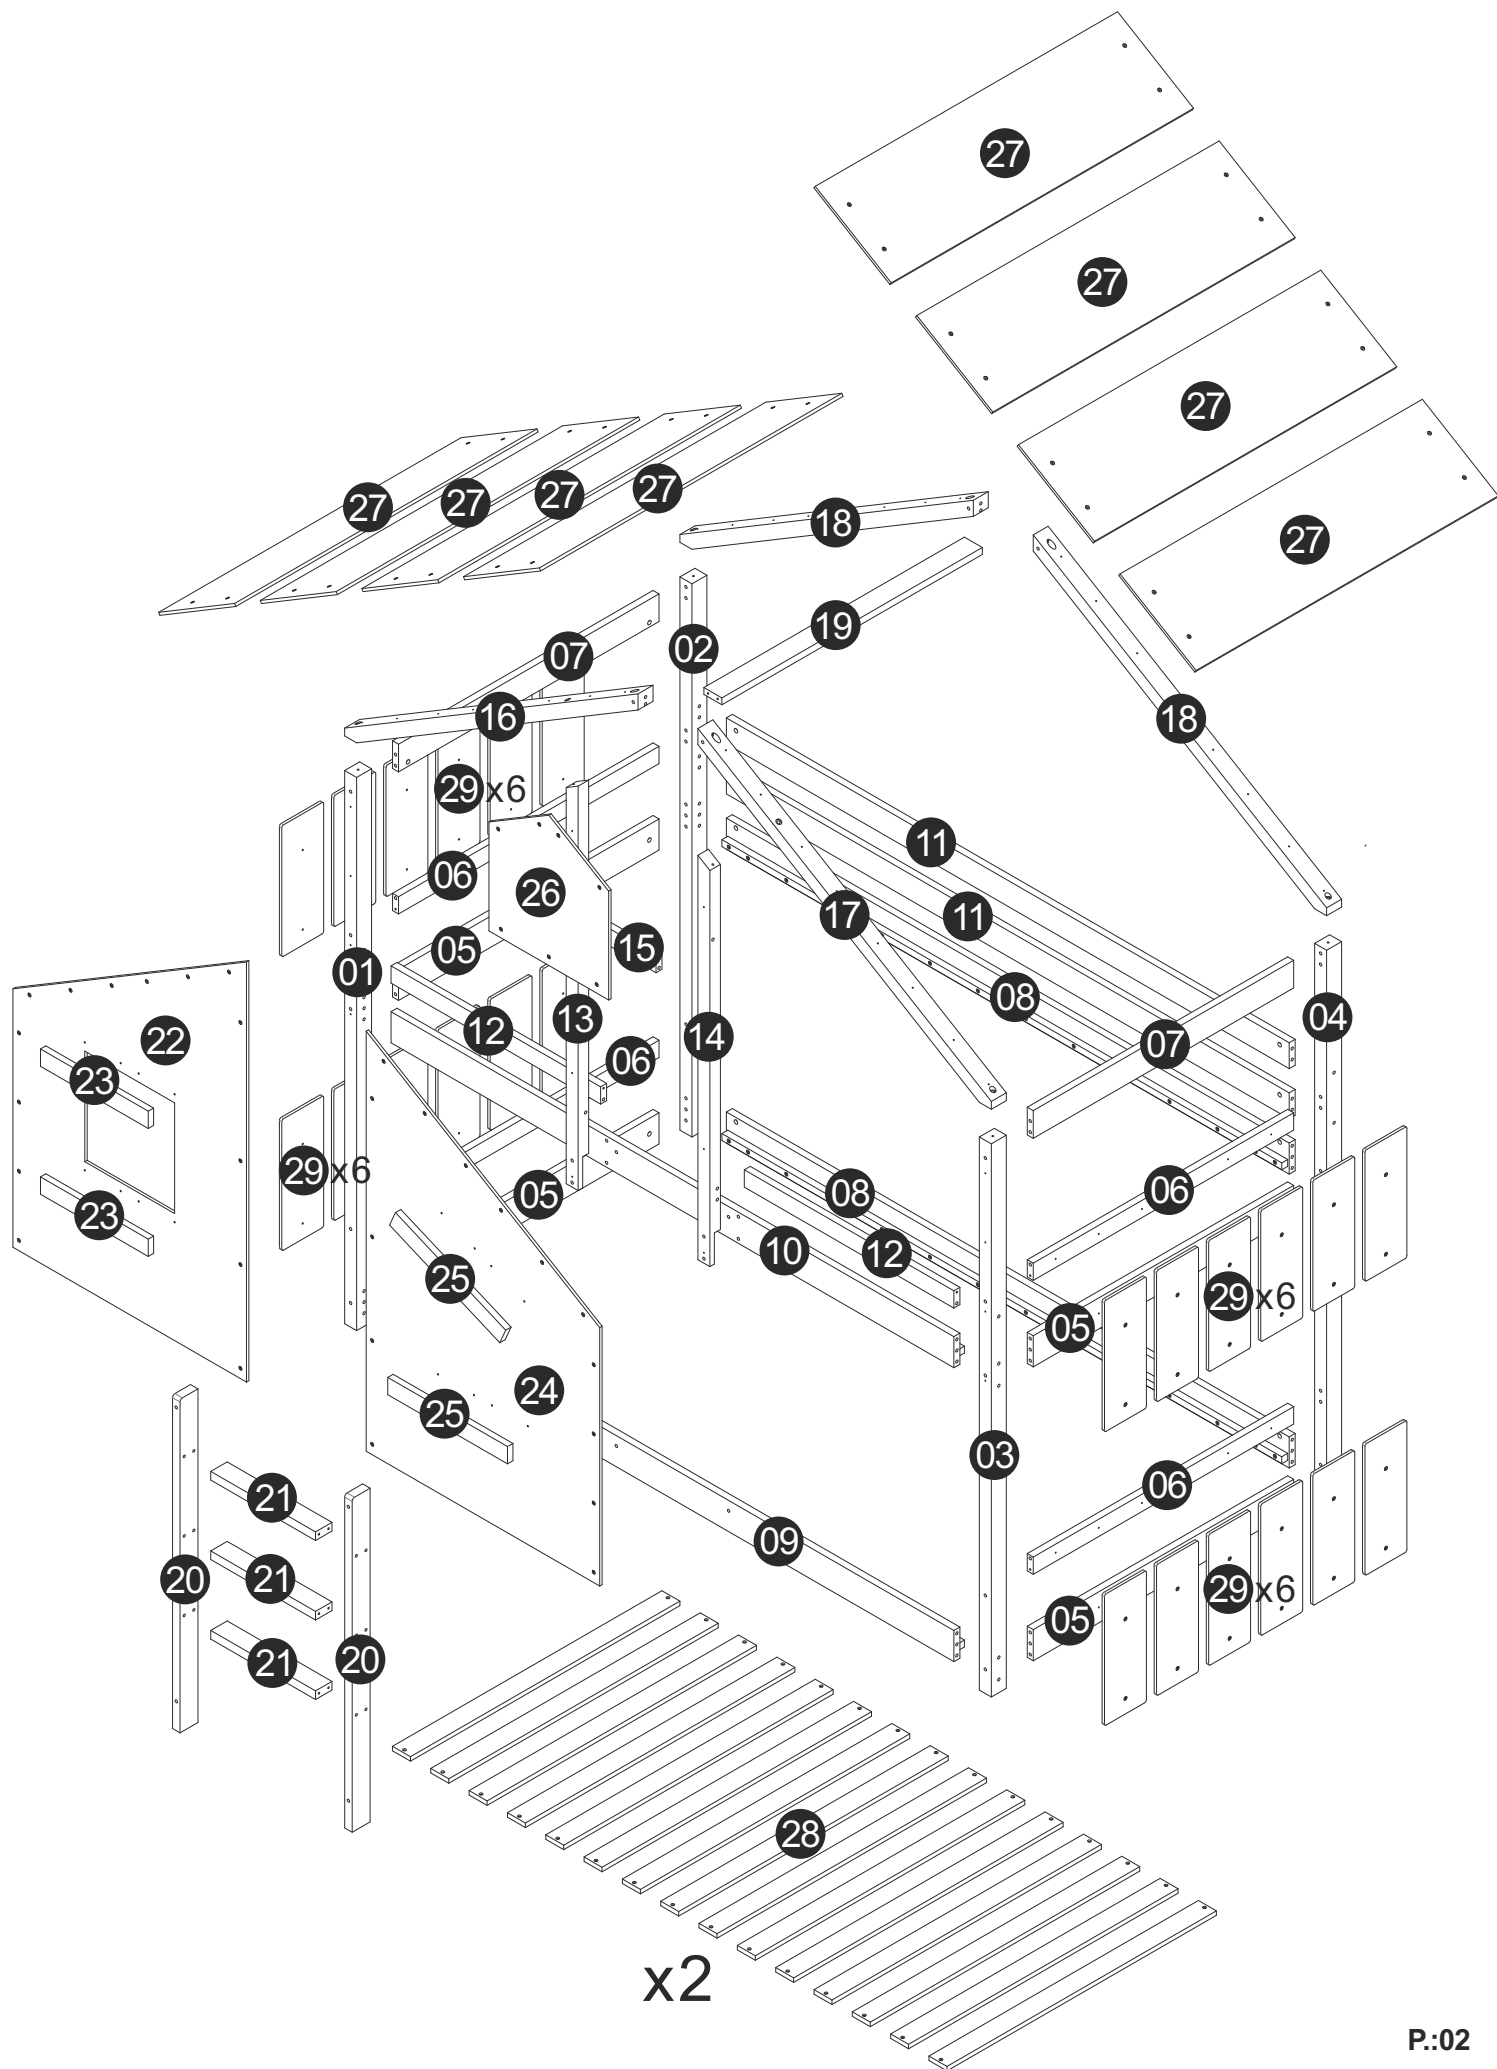




HARDWARE

A x32  M6x90	B x32  	C x48  Φ8x30	D x12  Φ6x90	E x8  Φ6x80
F x4  M6x20	G x10  	H x4  Φ6x70	J x2  M6x30	K x12  Φ7x60
L x4  M6x70	M x131  Φ4x20	N x60  Φ4x30	P x2  	


TOOLS

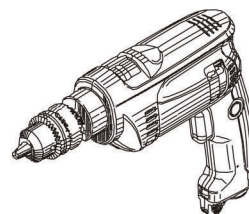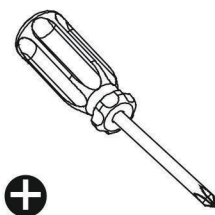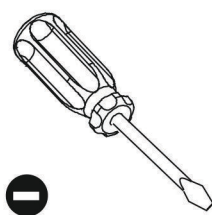

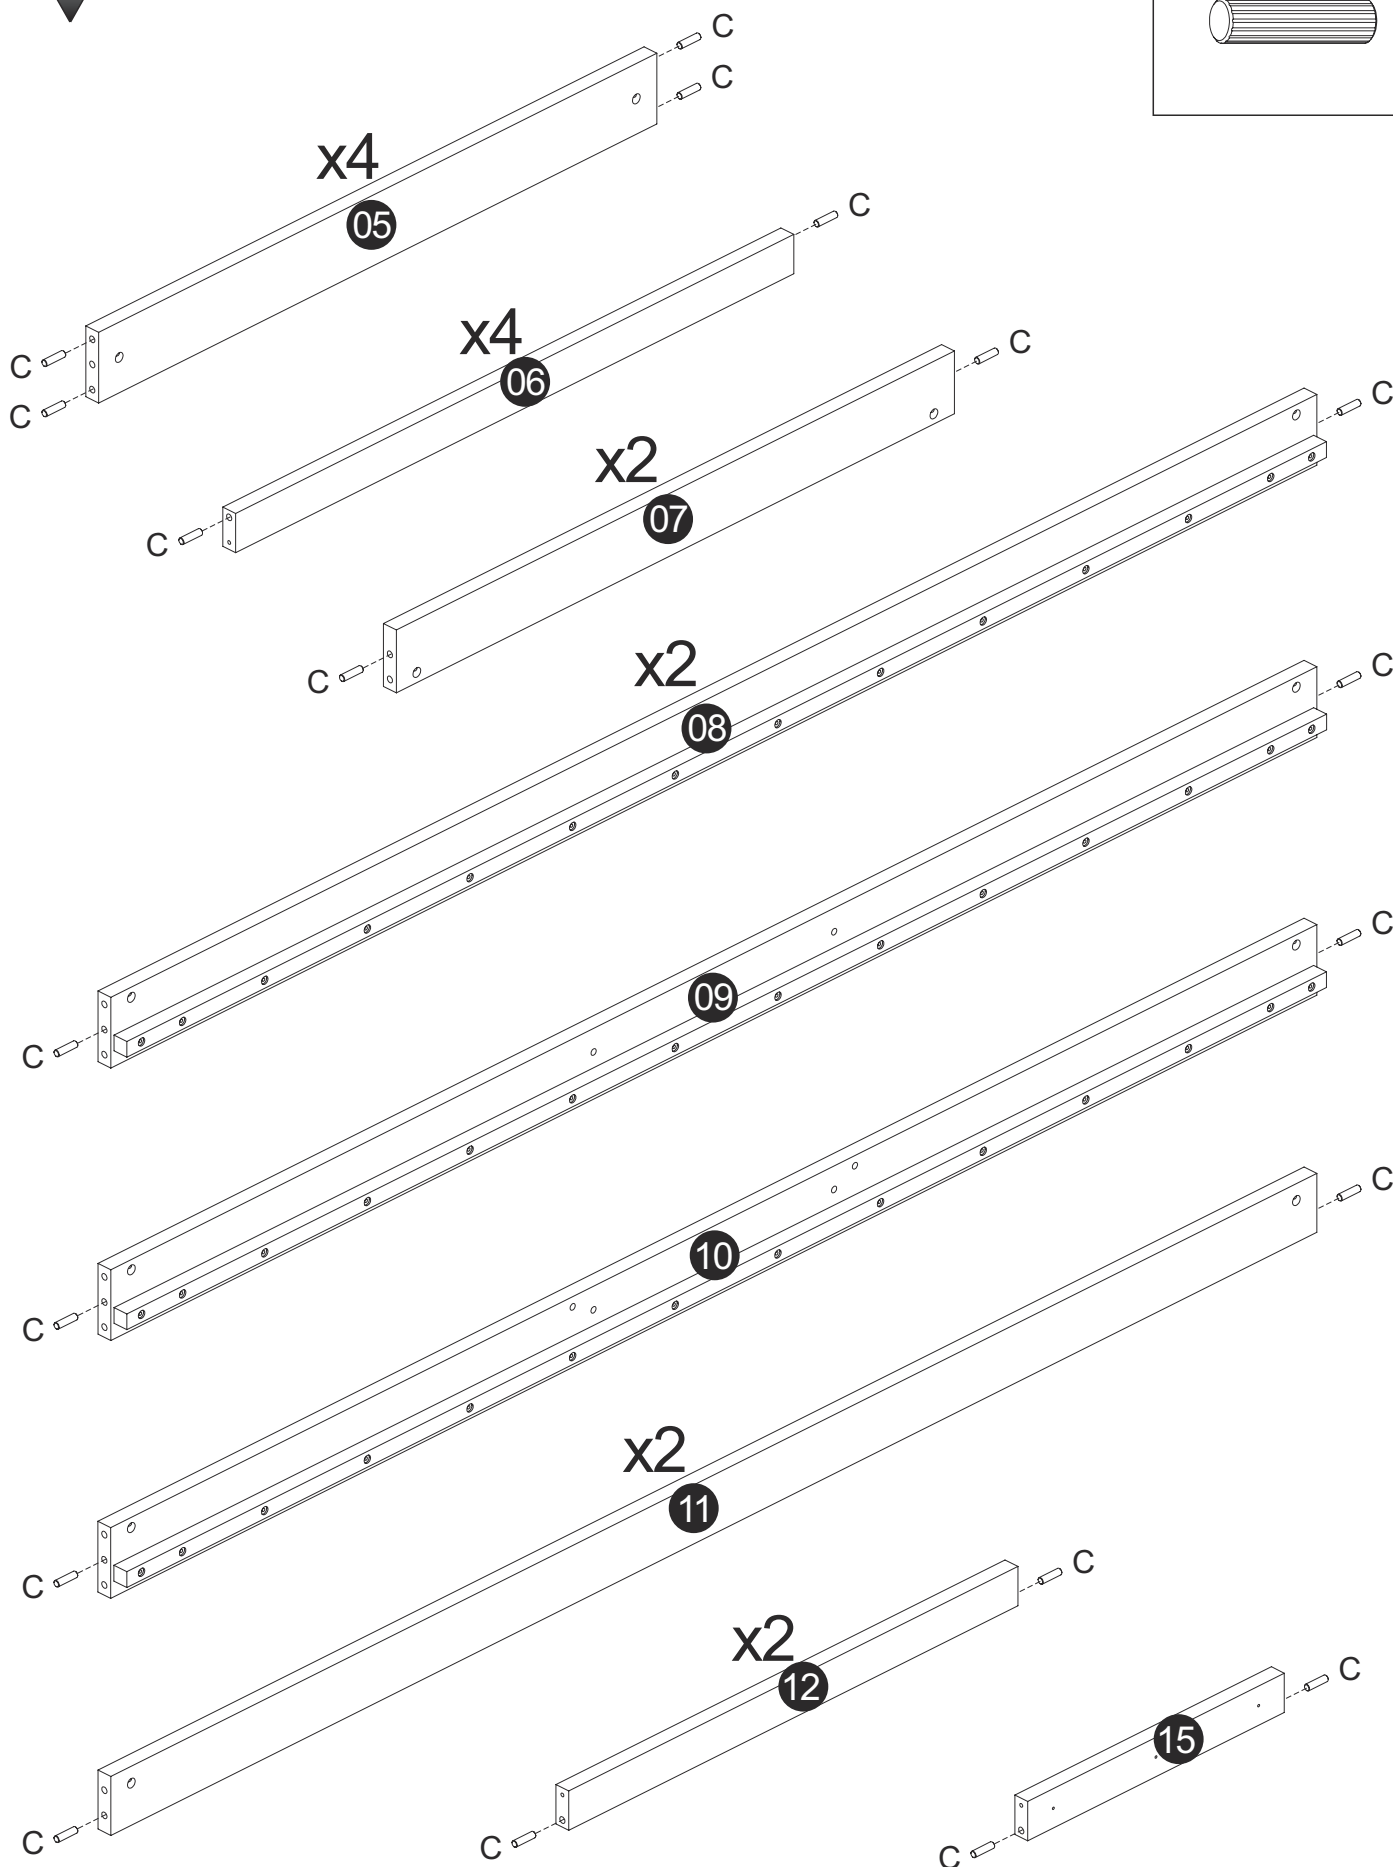

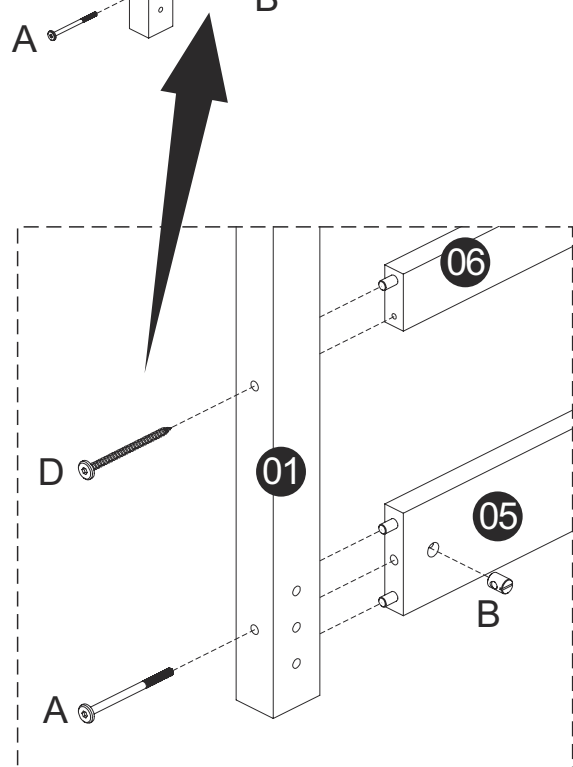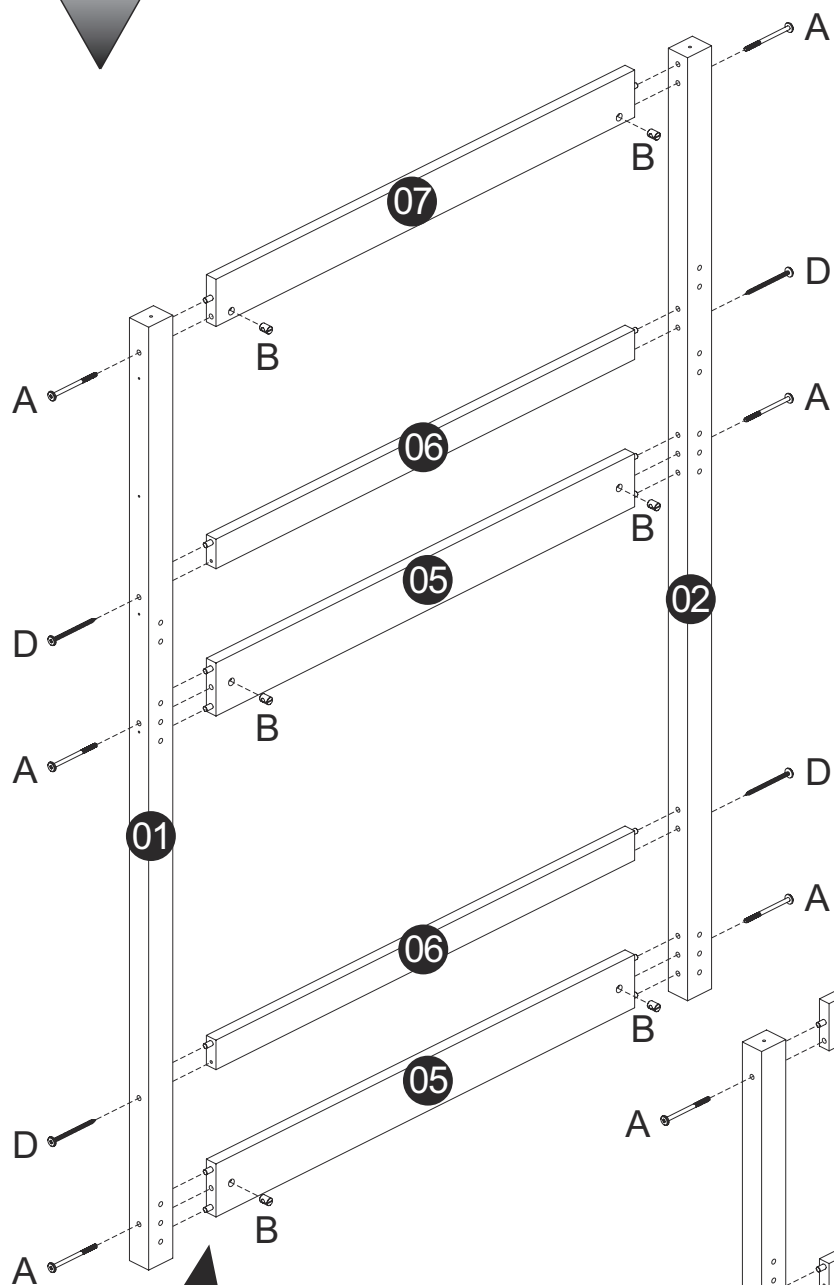

A x12




M6x90


B x12




D x8




Φ6x90

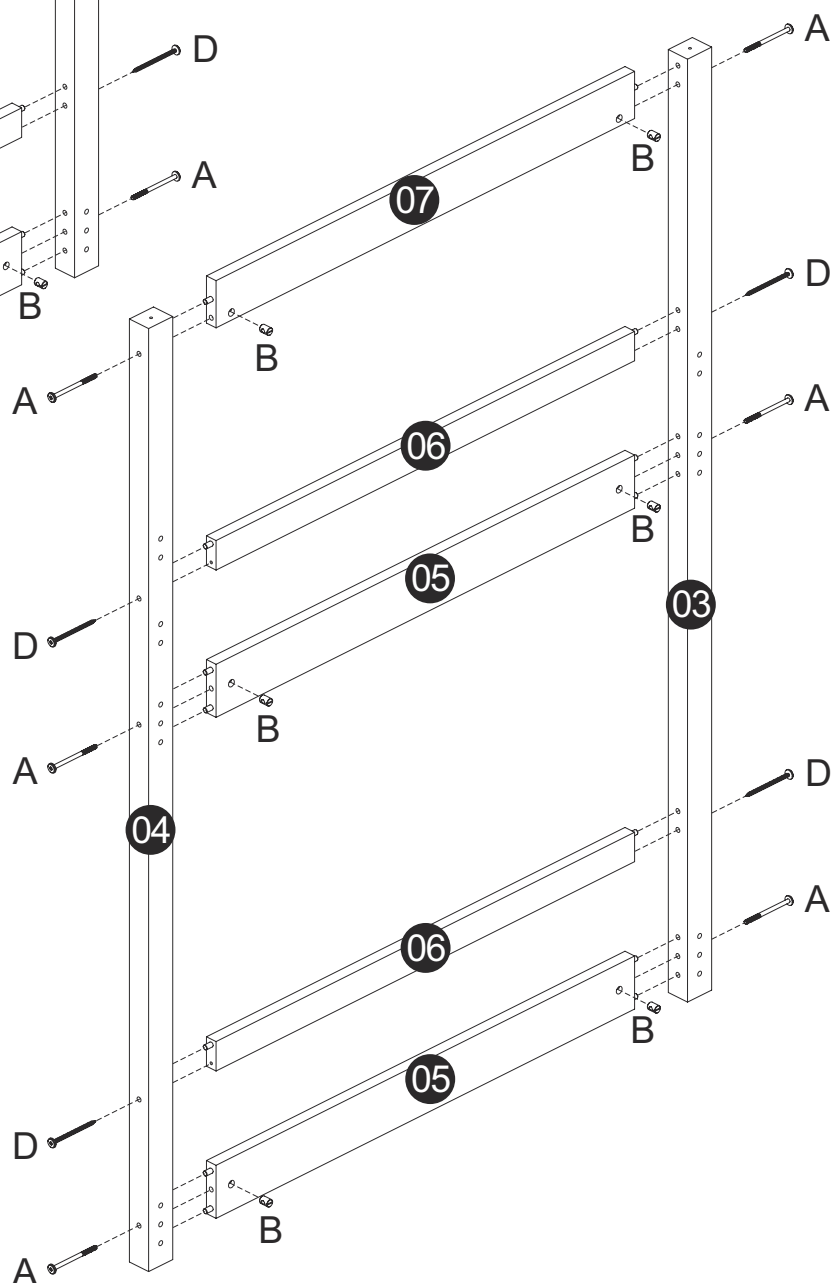

03

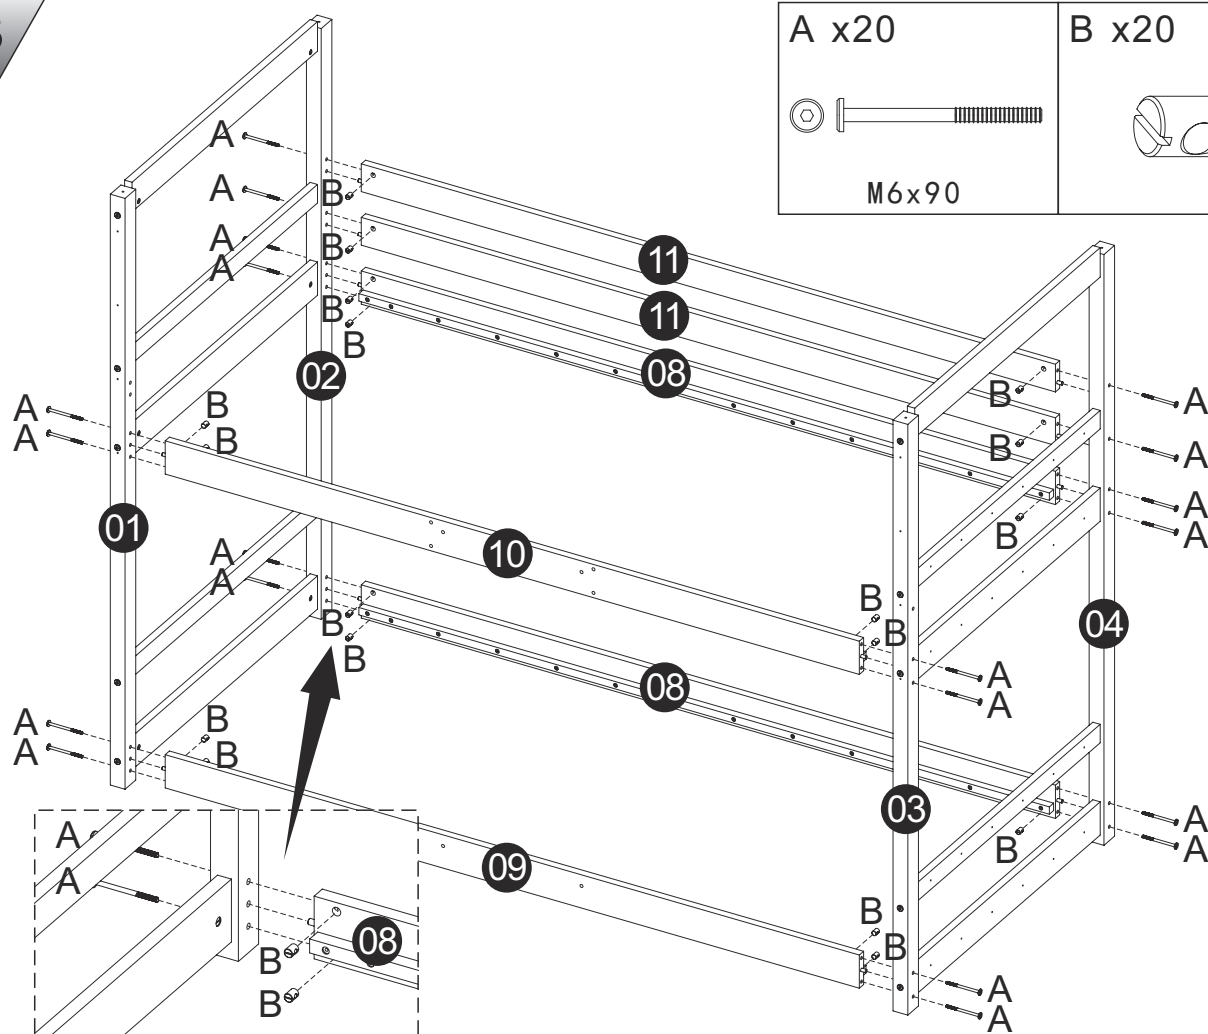

A x20




M6x90

B x20



04

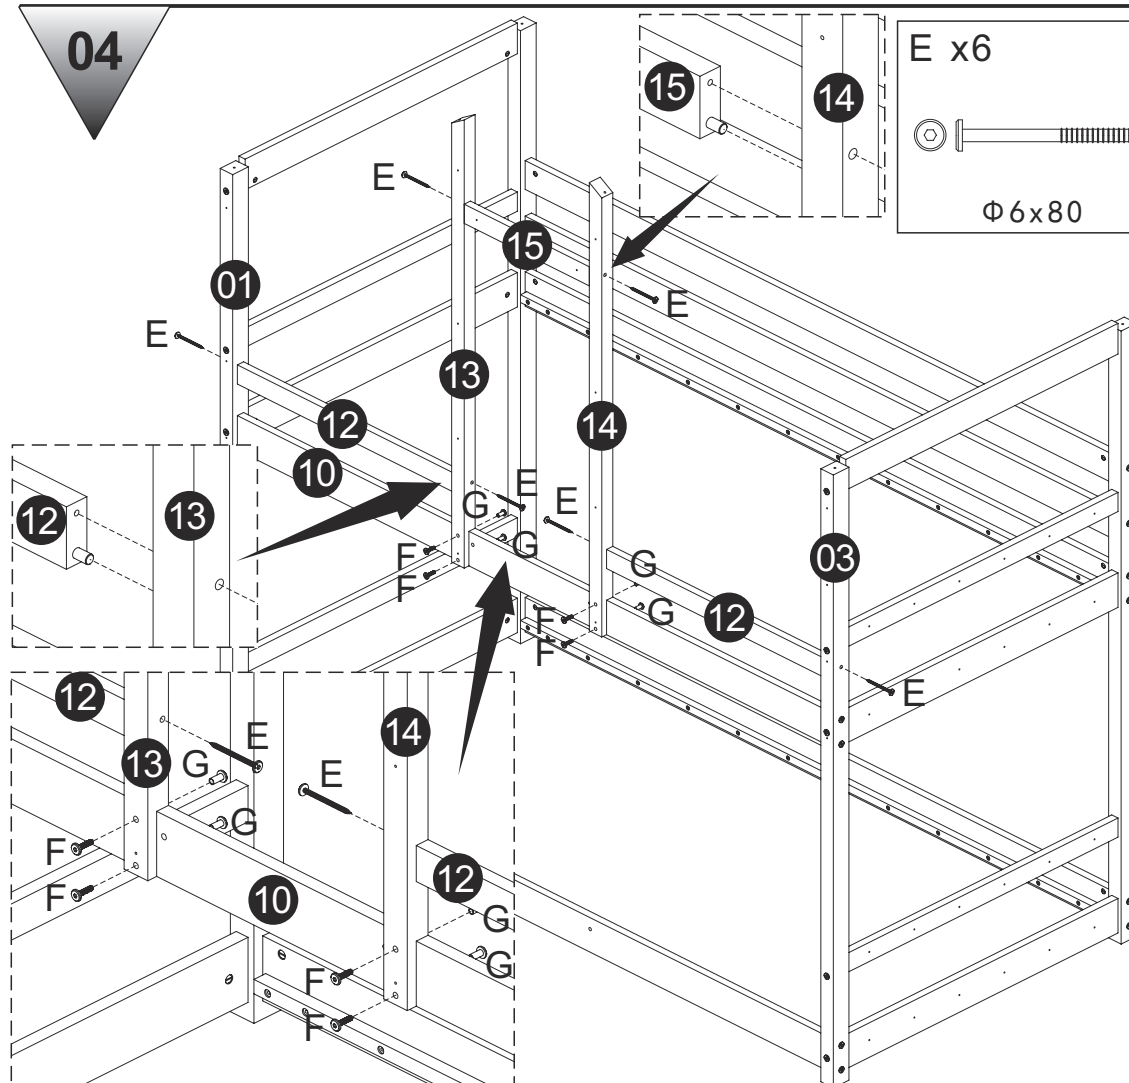

E x6




Φ6x80

F x4



M6x20

G x4



05

D x4




Φ6x90

E x2




Φ6x80

G x2



H x4




Φ6x70

C x2




Φ8x30

J x2



M6x30

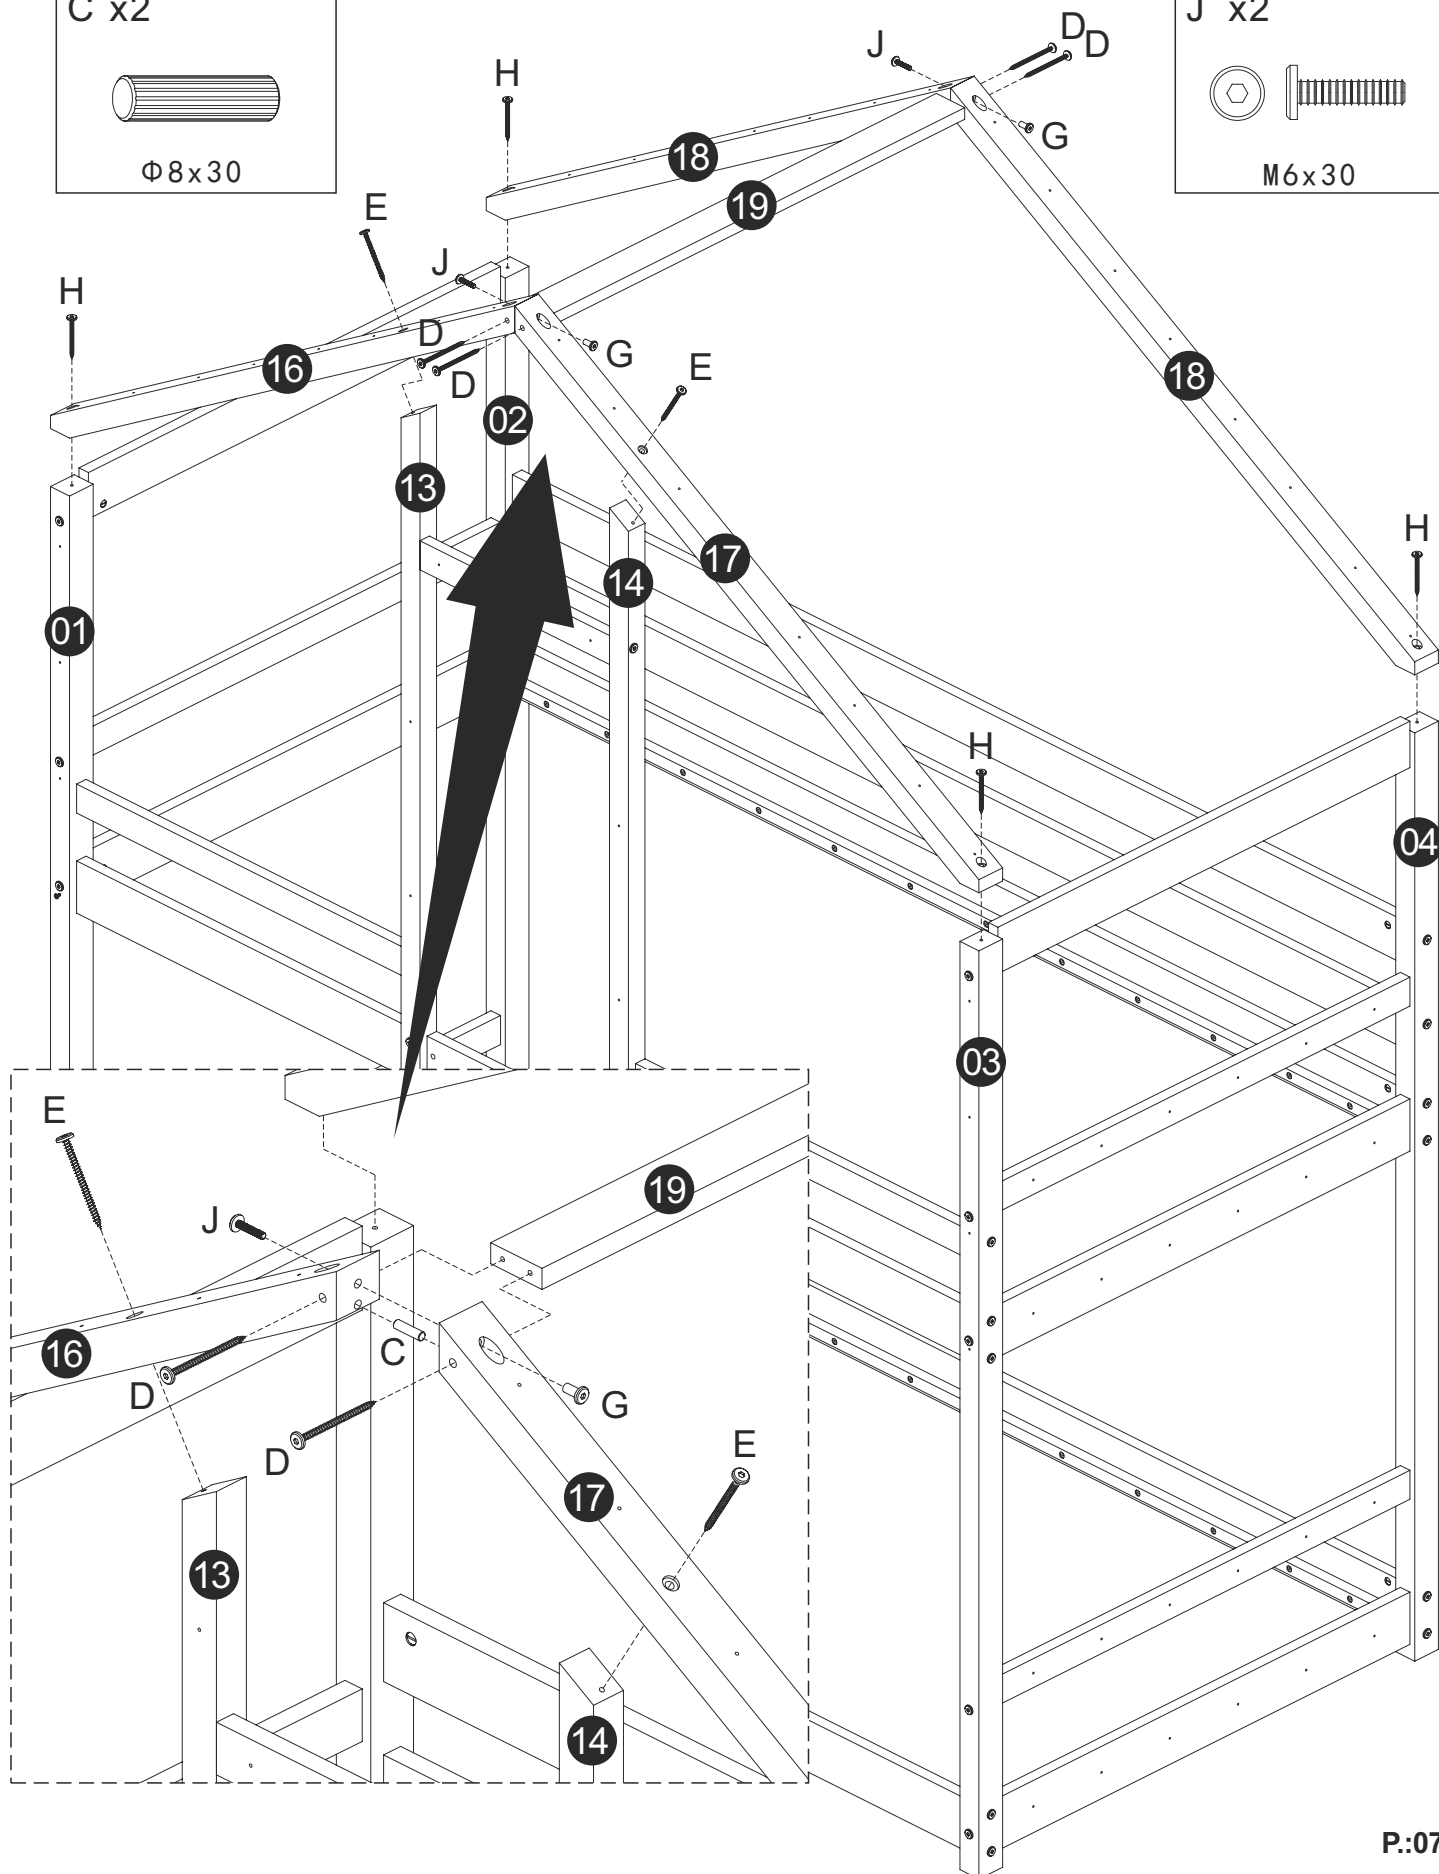




K x12



Φ7x60

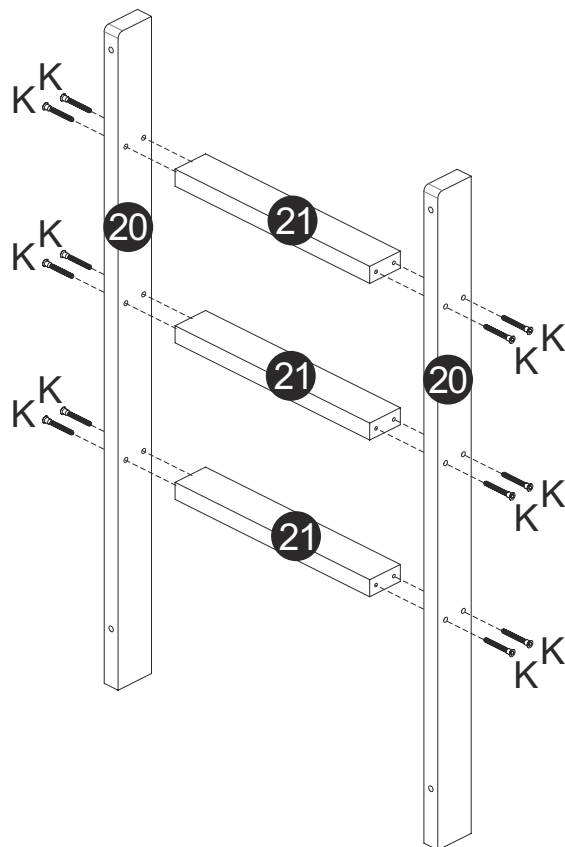

G x4



L x4



M6x70

L x4






M6x70


L x4




M6x70

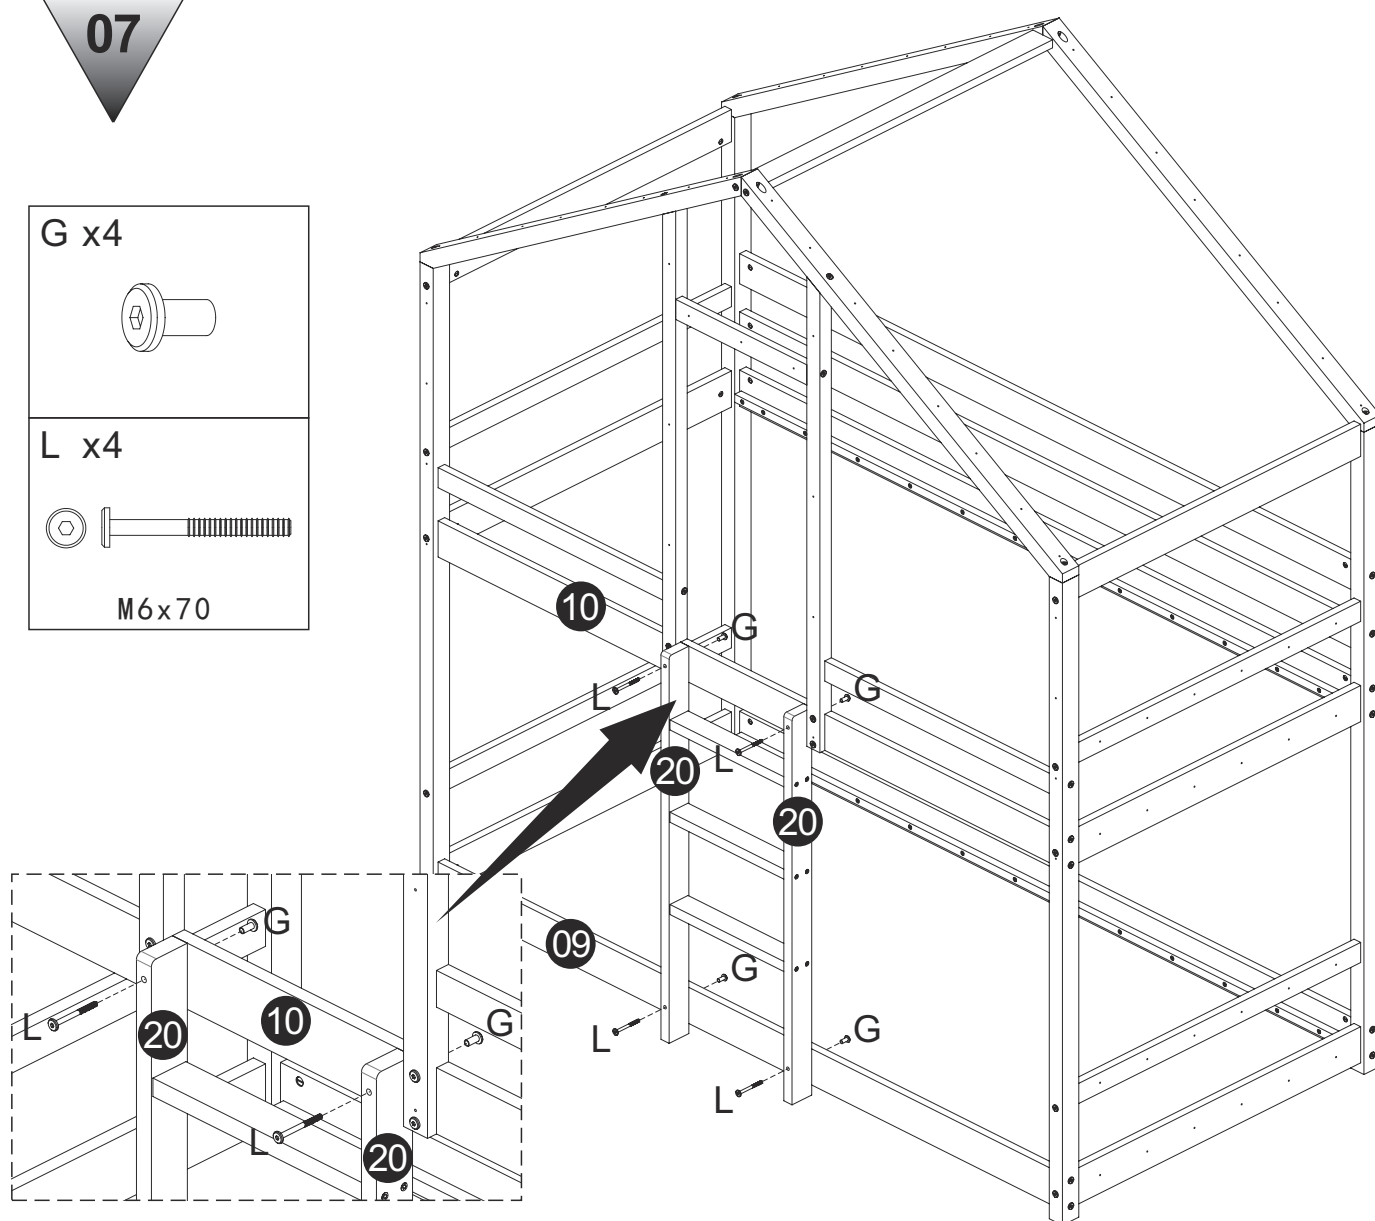

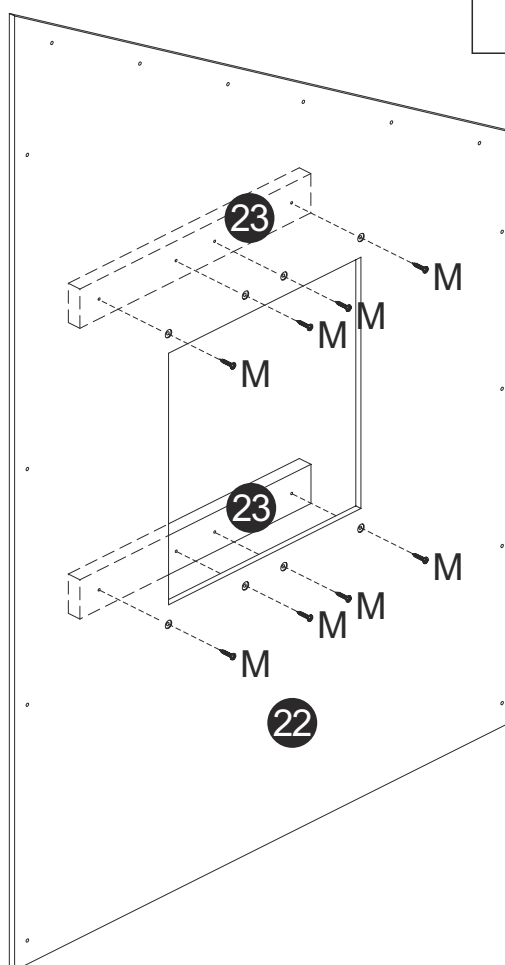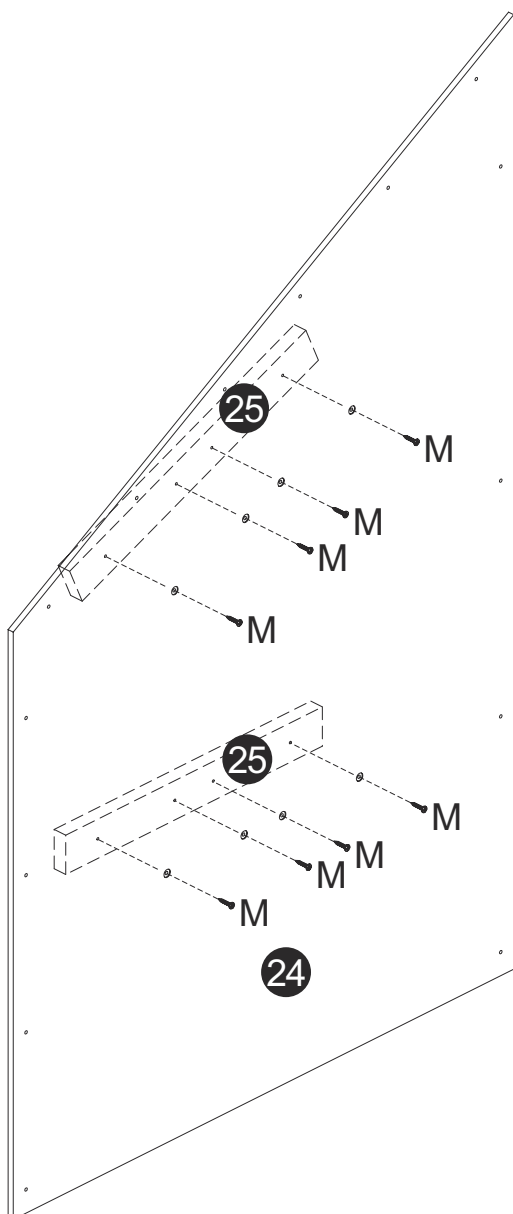

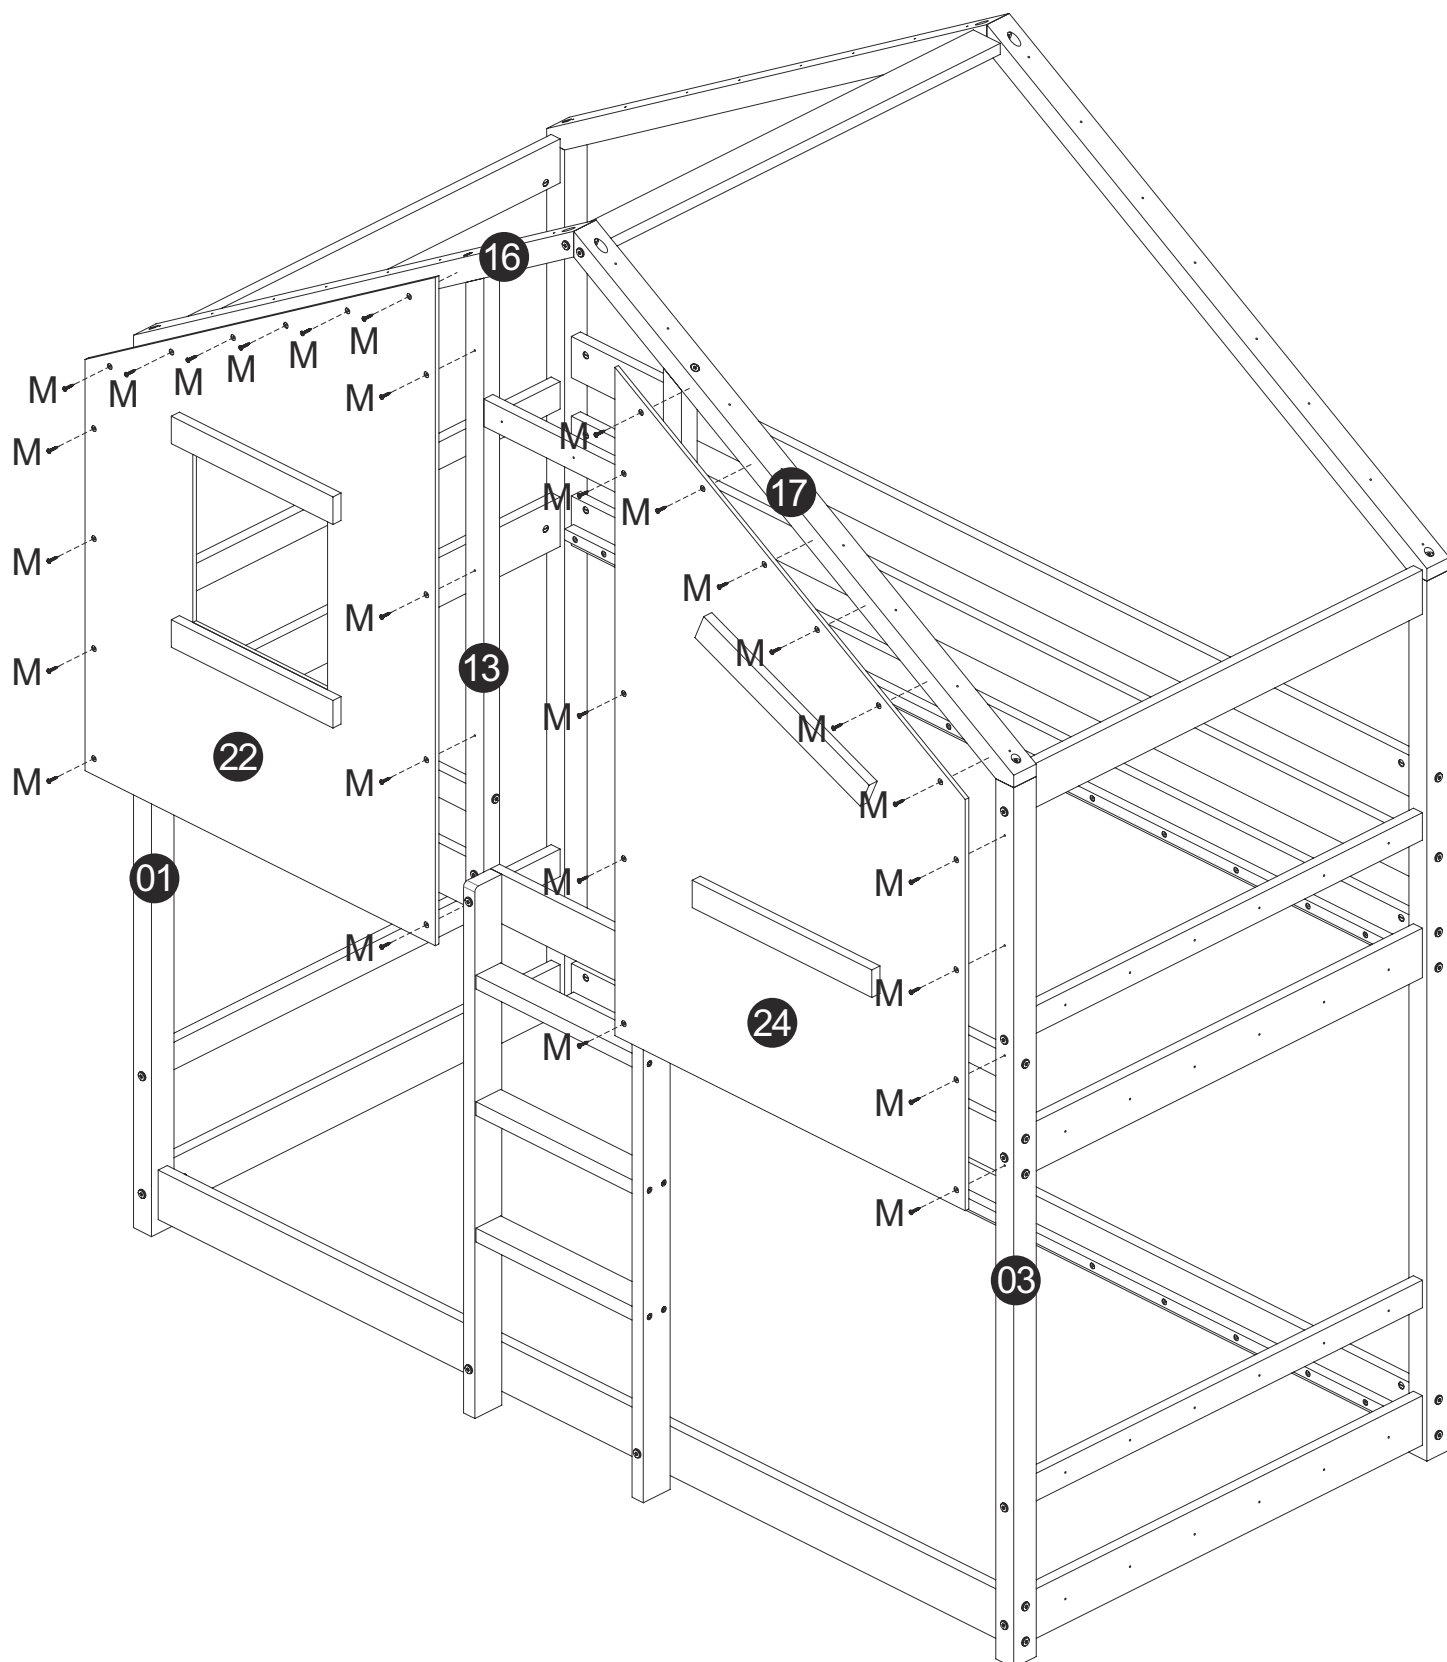


10

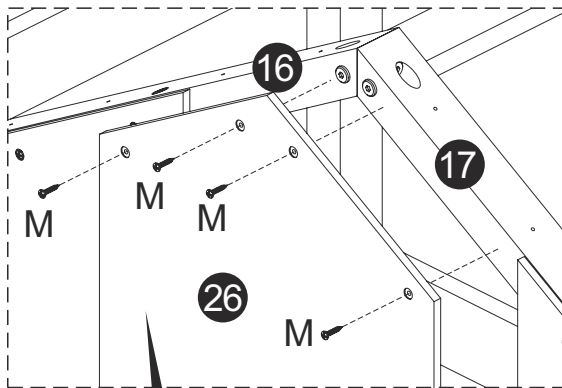


M x7





Φ4x20

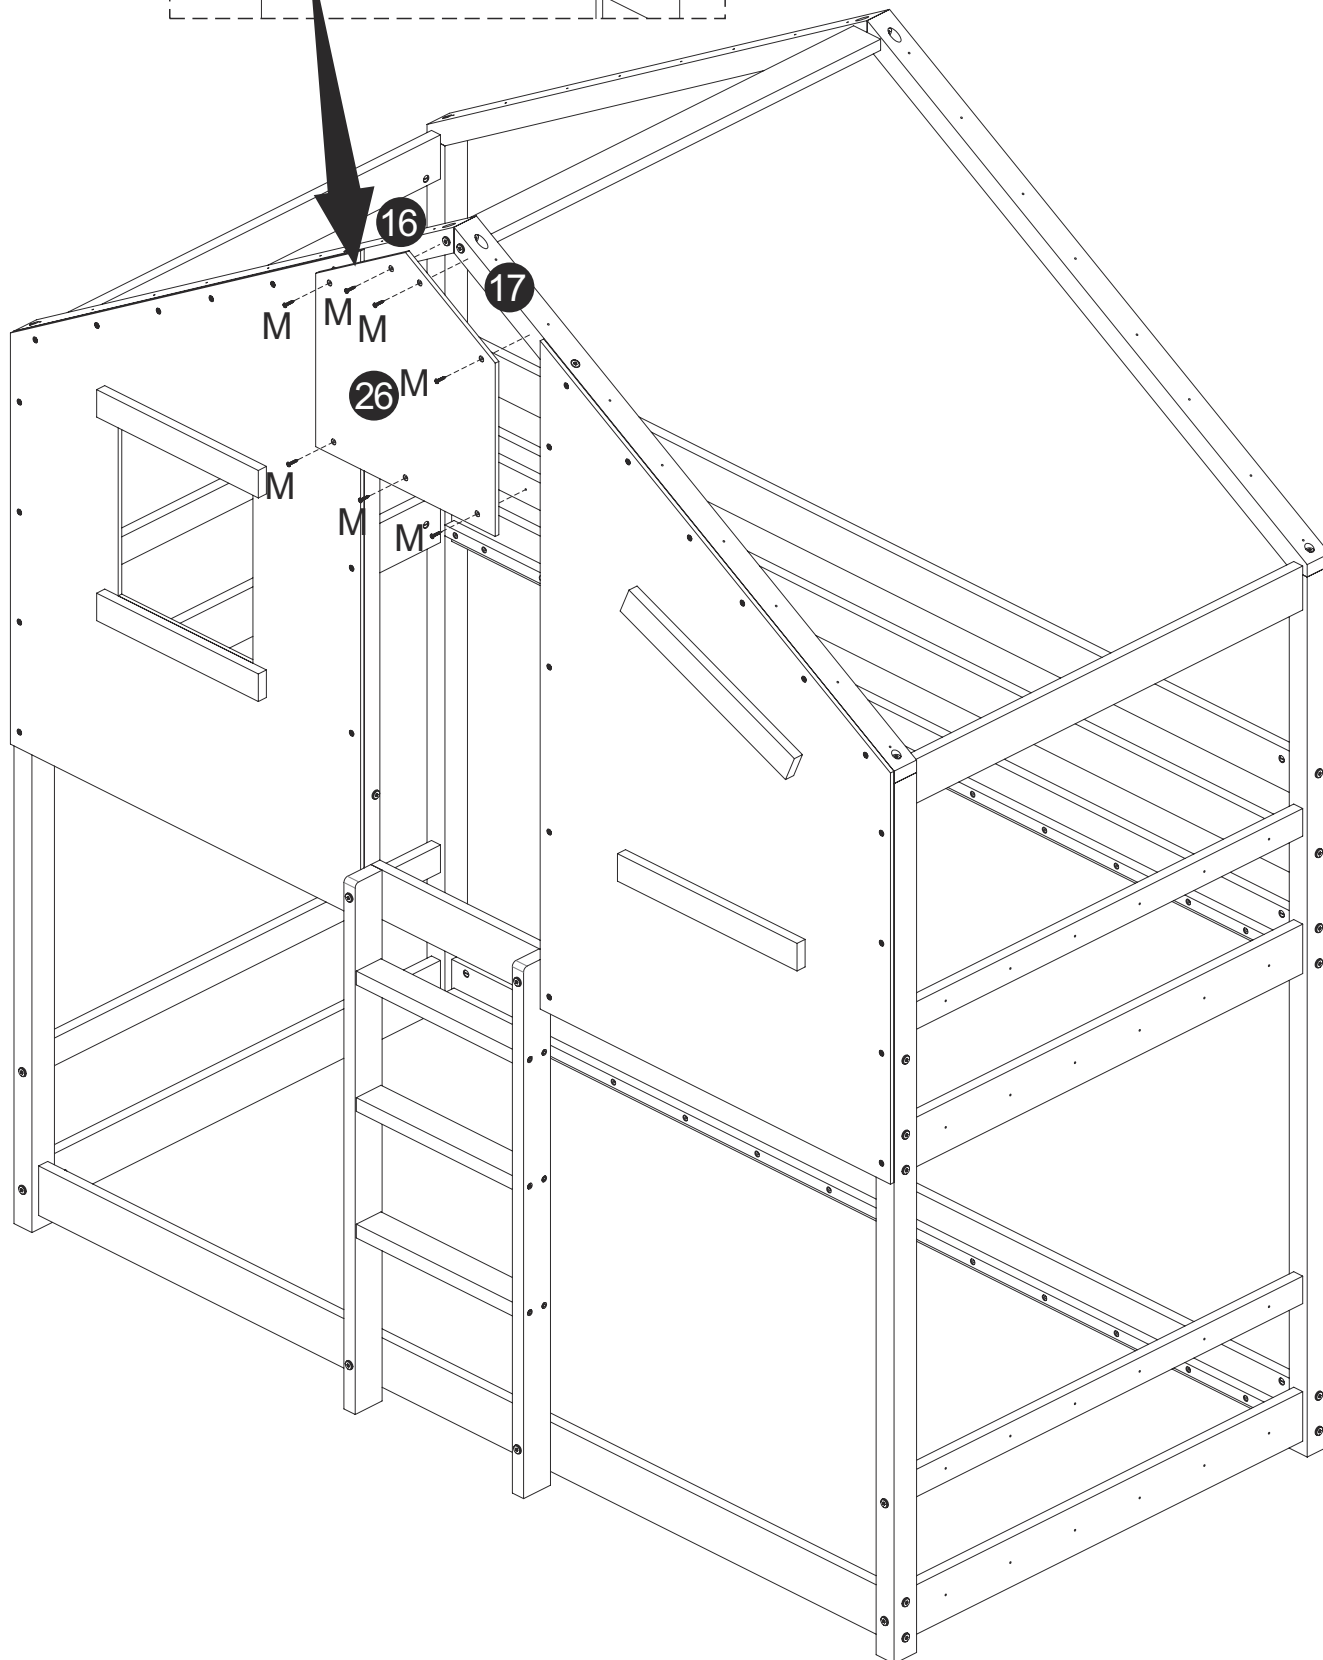

M x32

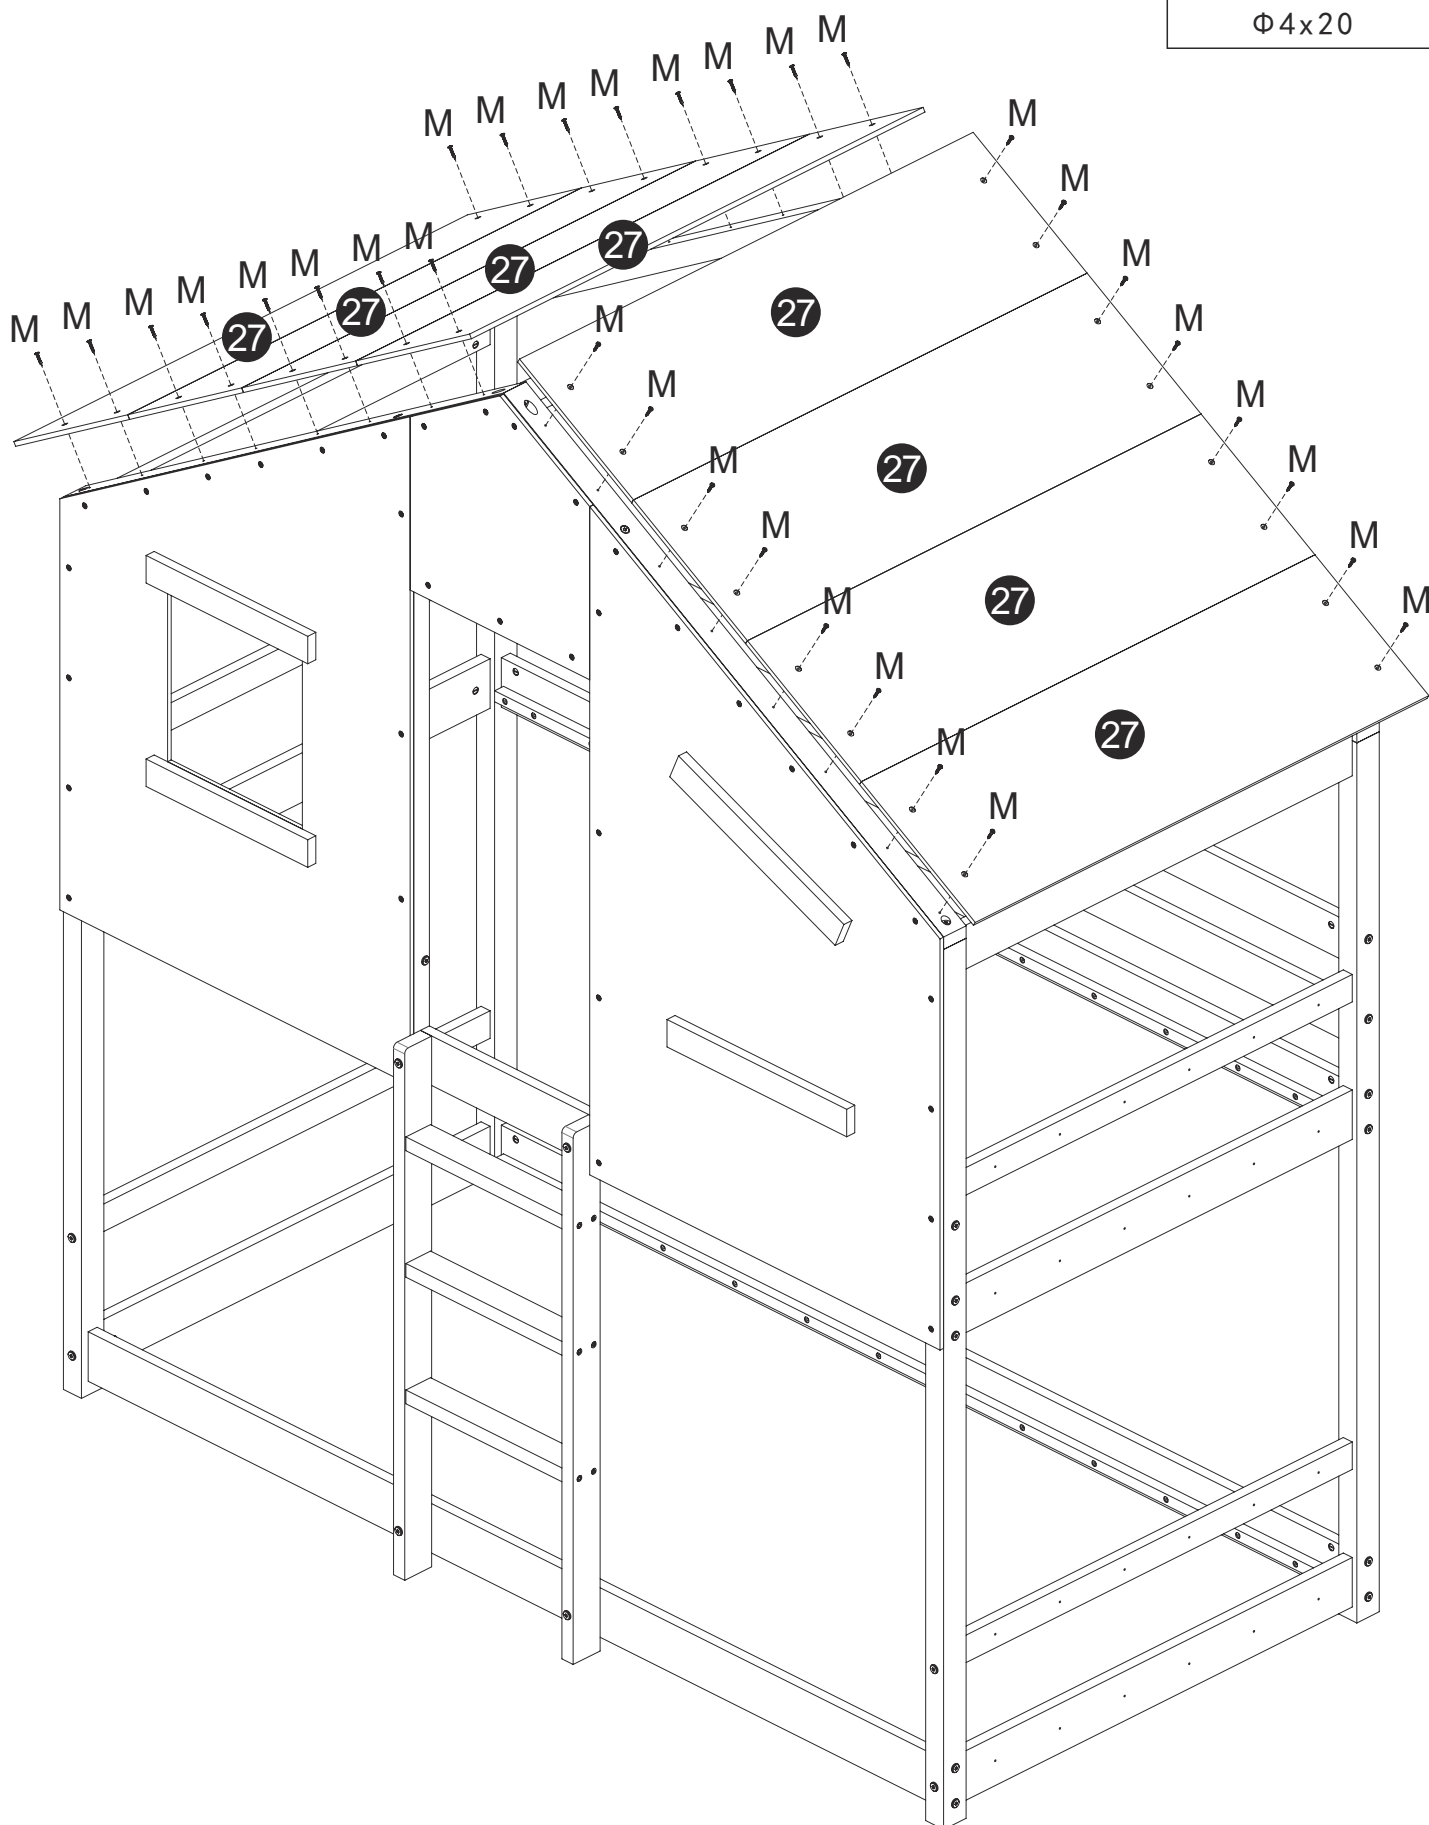 $\Phi 4 \times 20$ 

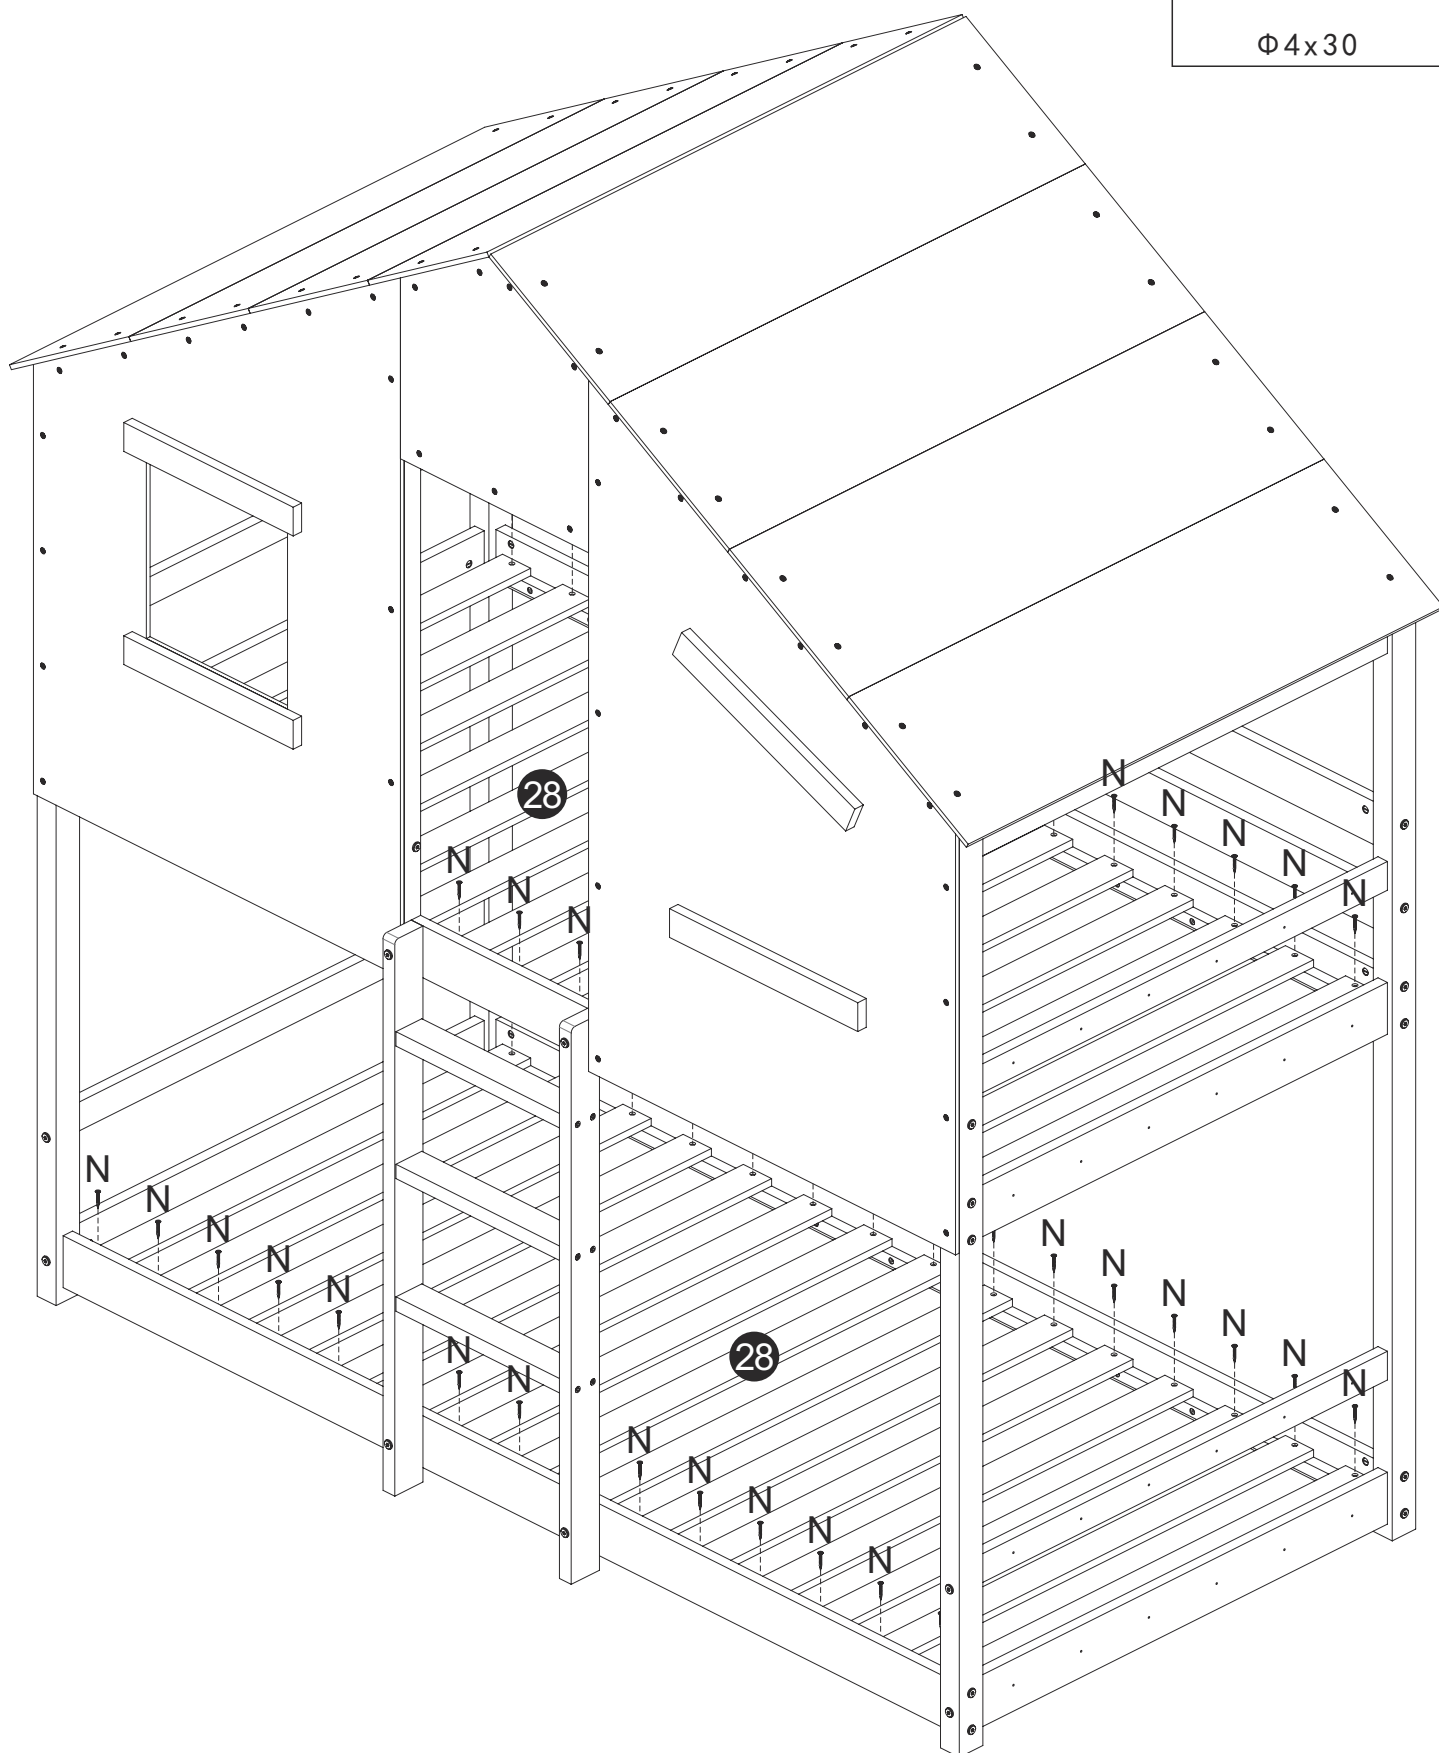

M x48

 $\Phi 4 \times 20$ 