



ASSEMBLY INSTRUCTION


FLAIR LOOP CUBE UNIT DOOR




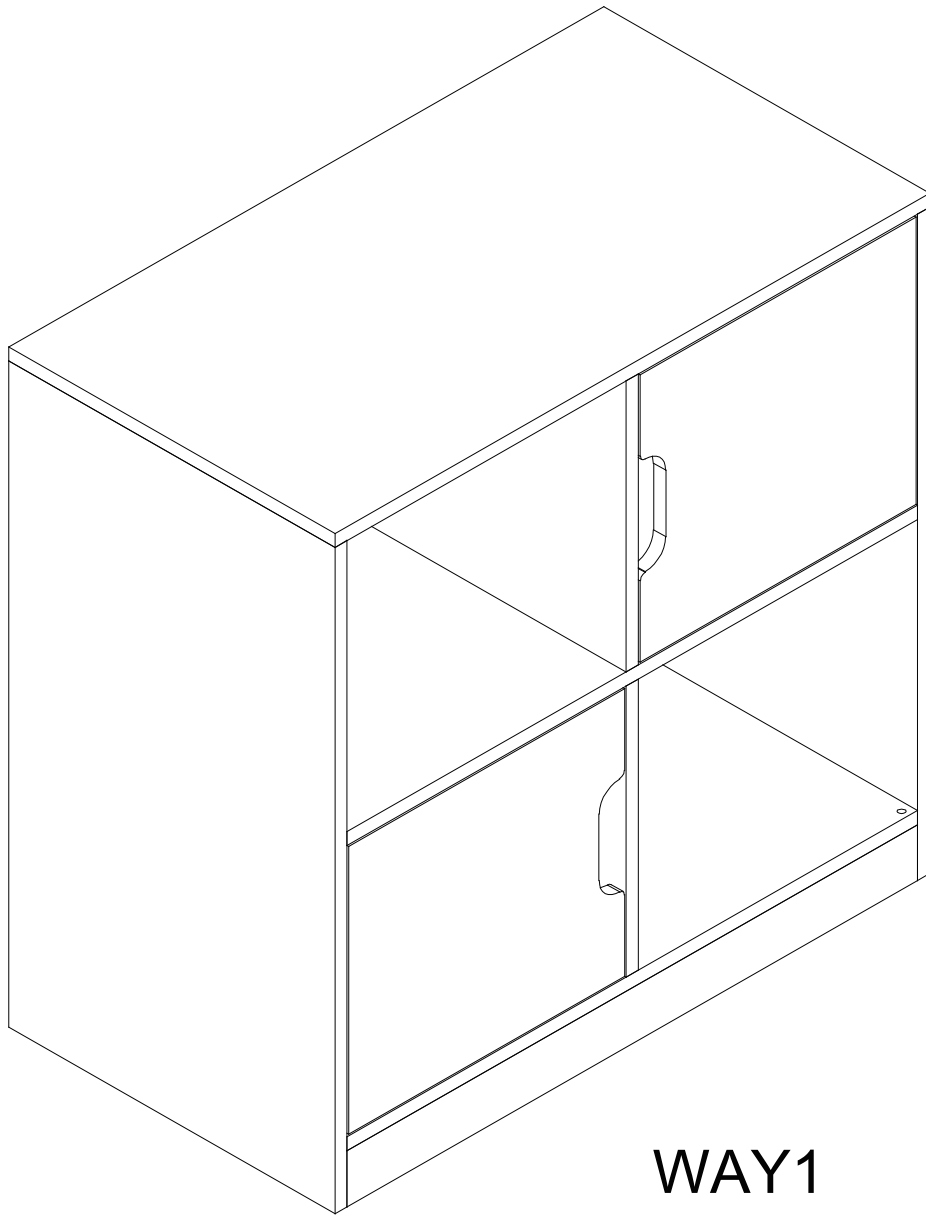


WAY1

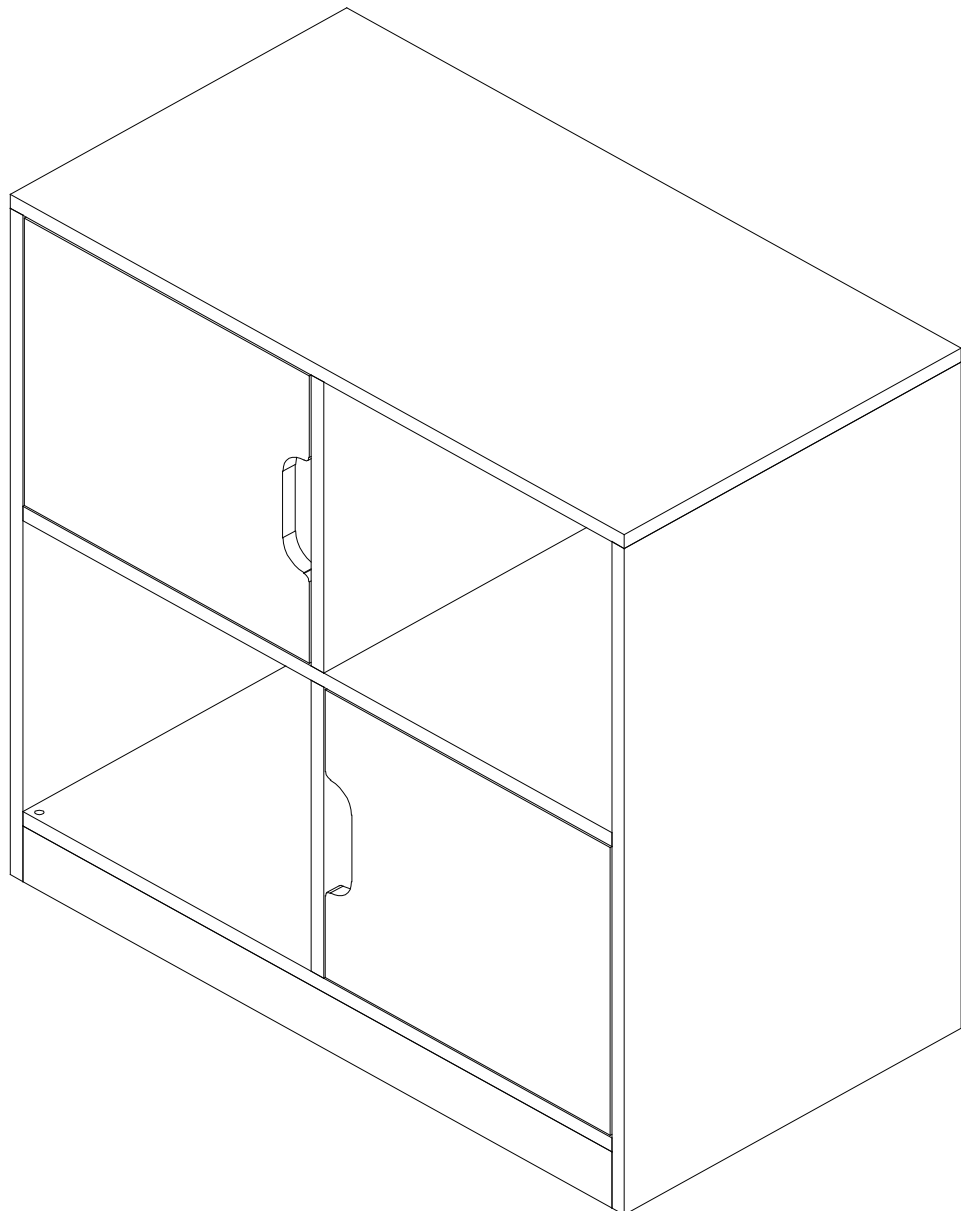



WAY2

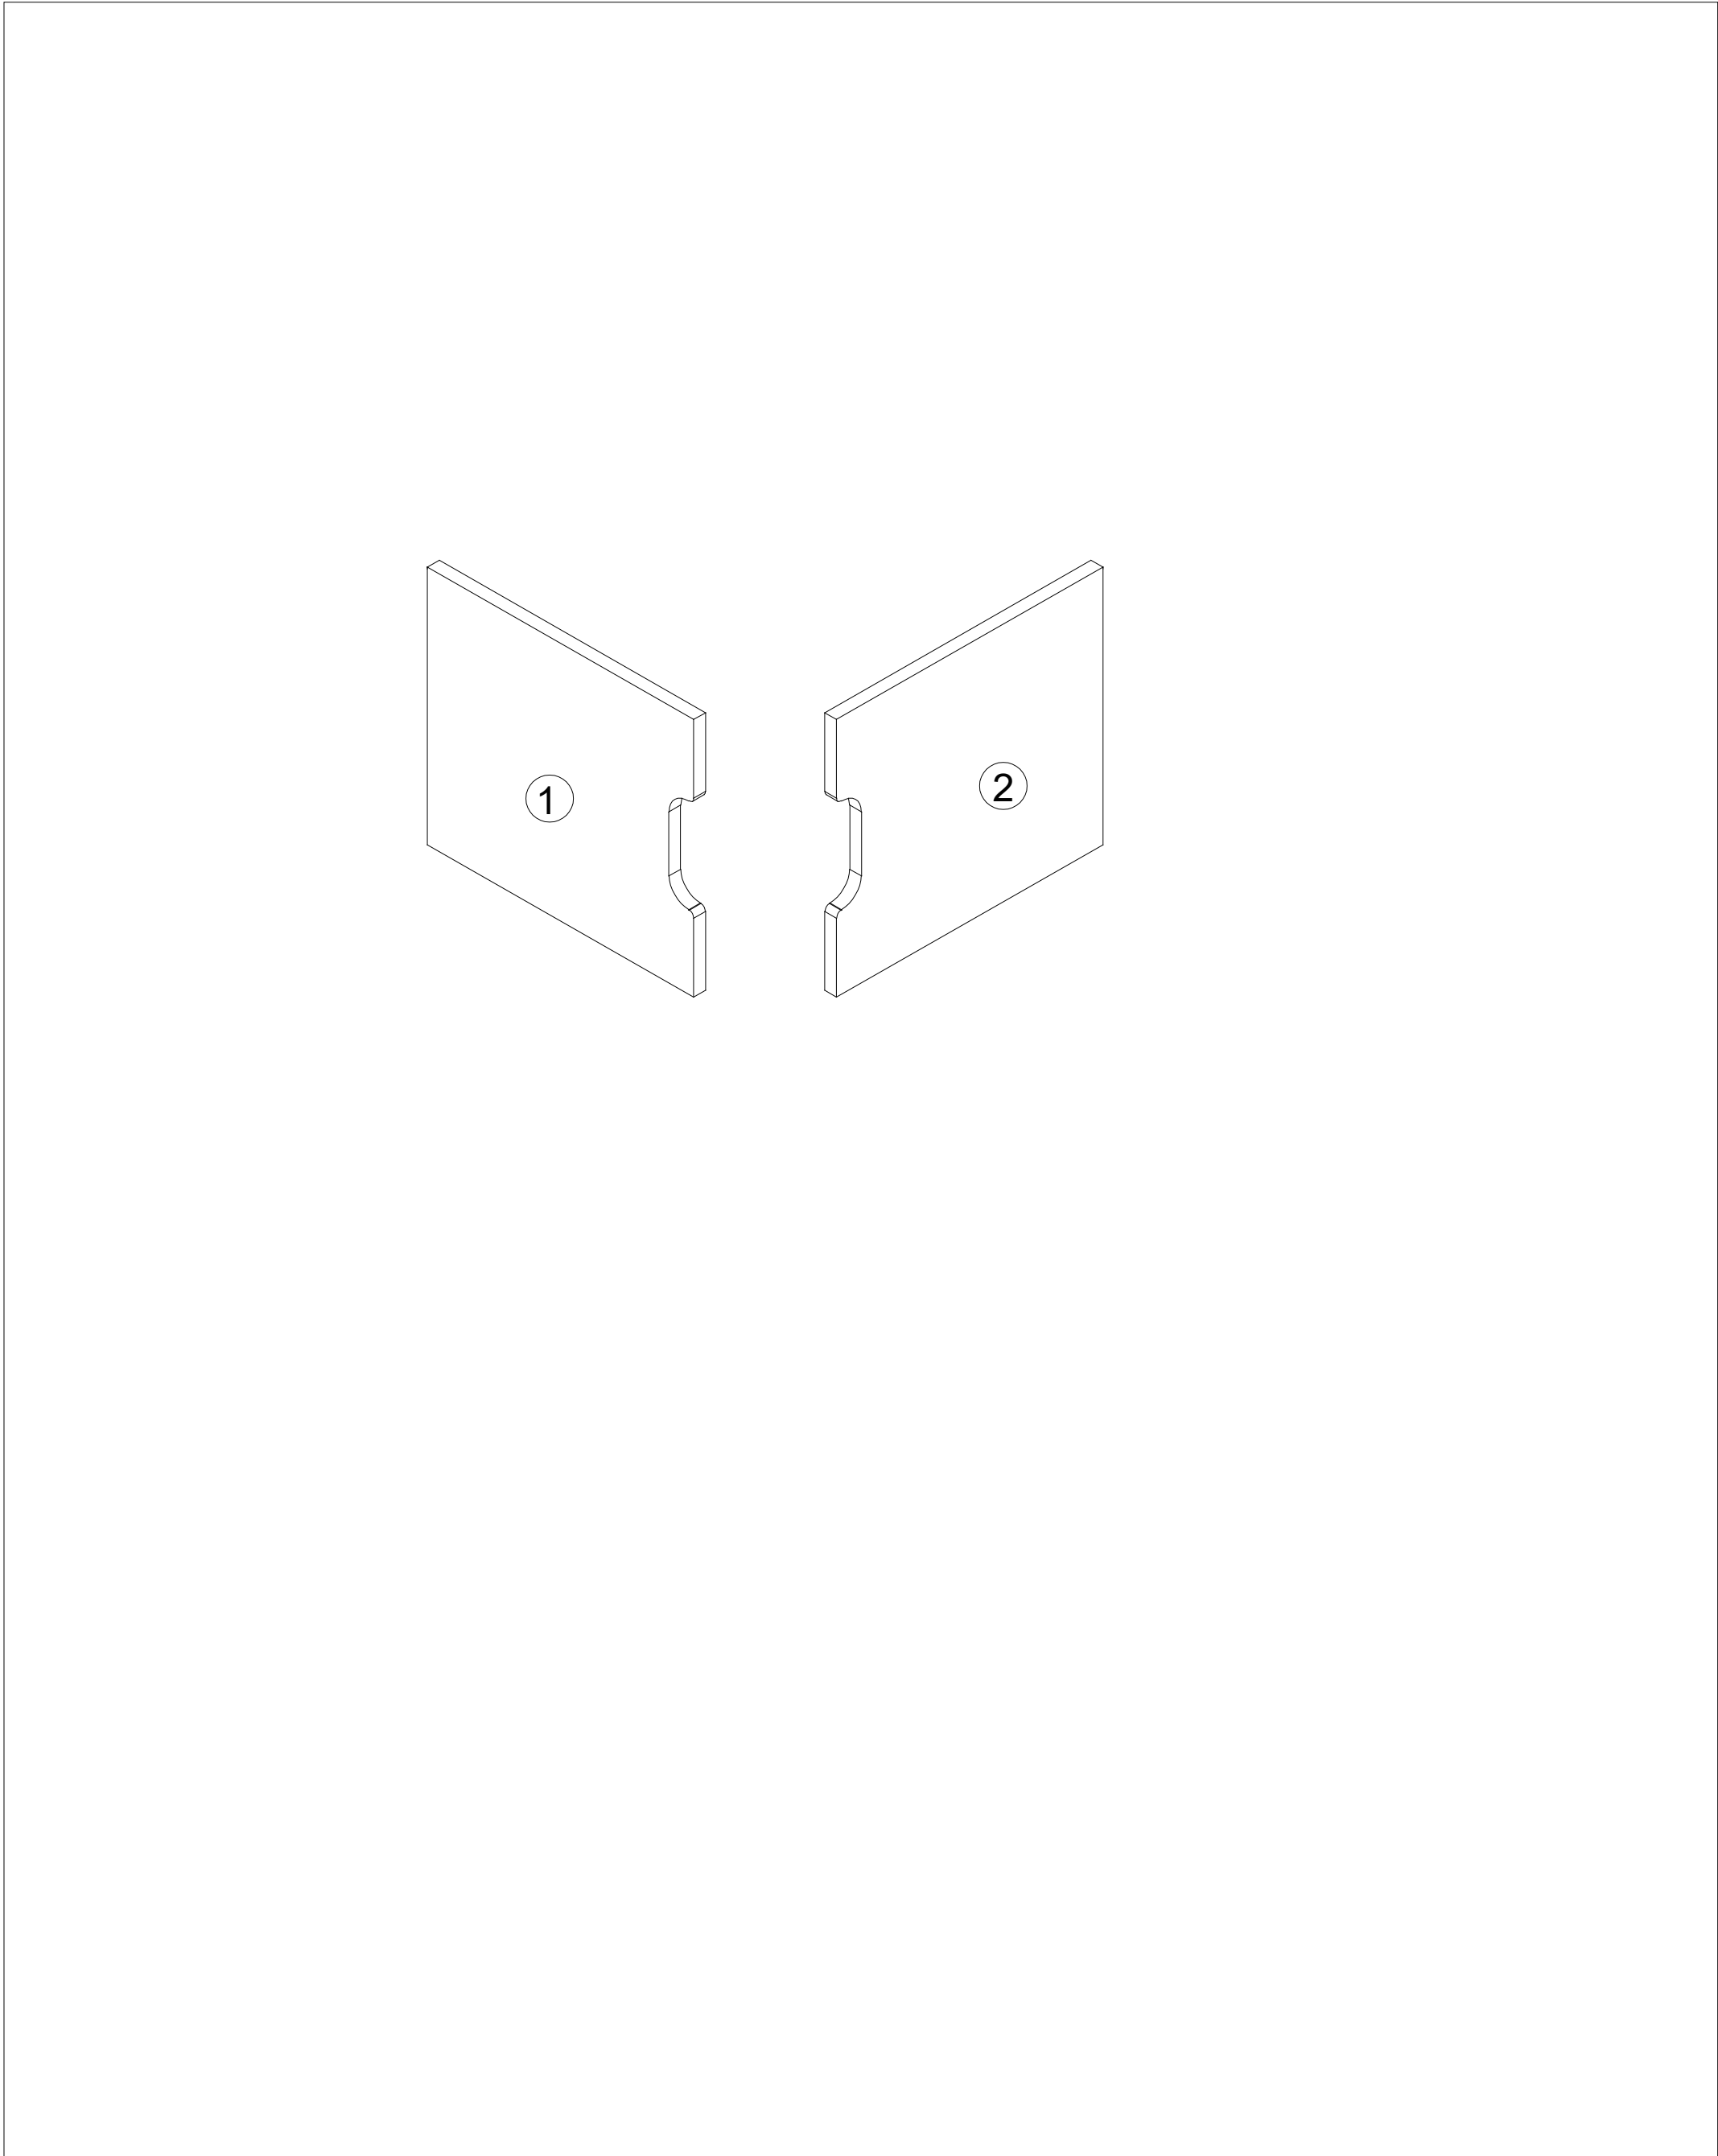

 A x 2	 3x14mm B x 4	 3.5x12mm C x 10	 D x 2	 E x 4		
---	---	--	--	---	--	--



STEP 1

C		2
D		2

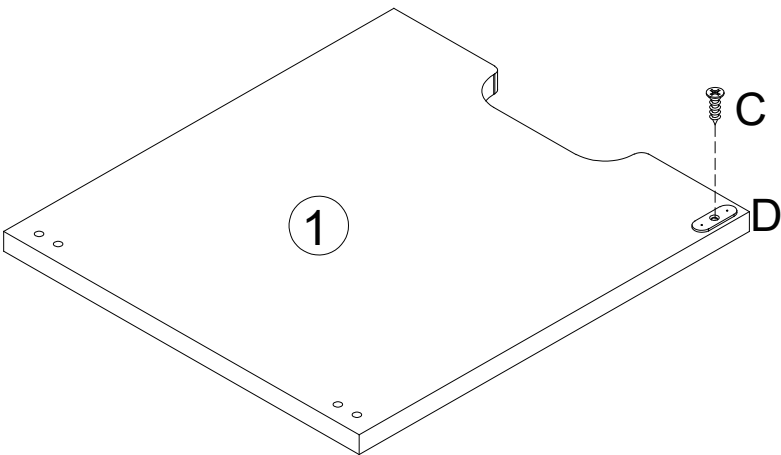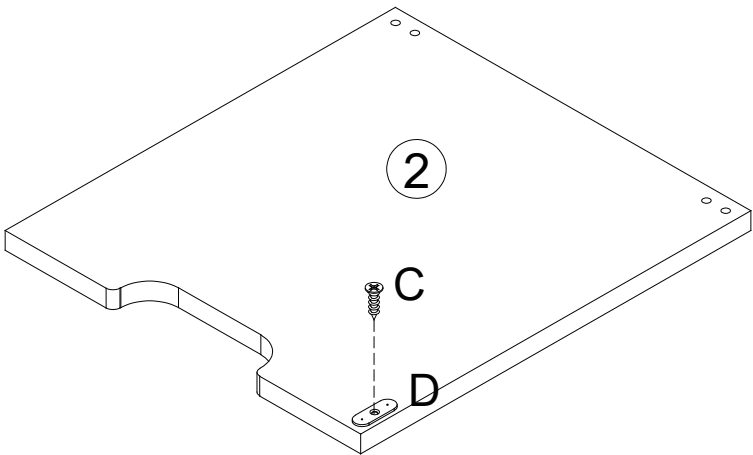

STEP 2

PLEASE REMOVE THE
PLASTIC PLUG TO
INSTALL CUBE UNIT
DOOR

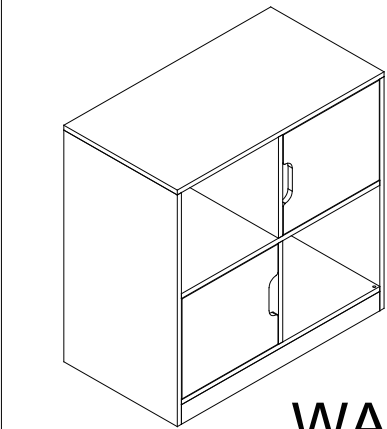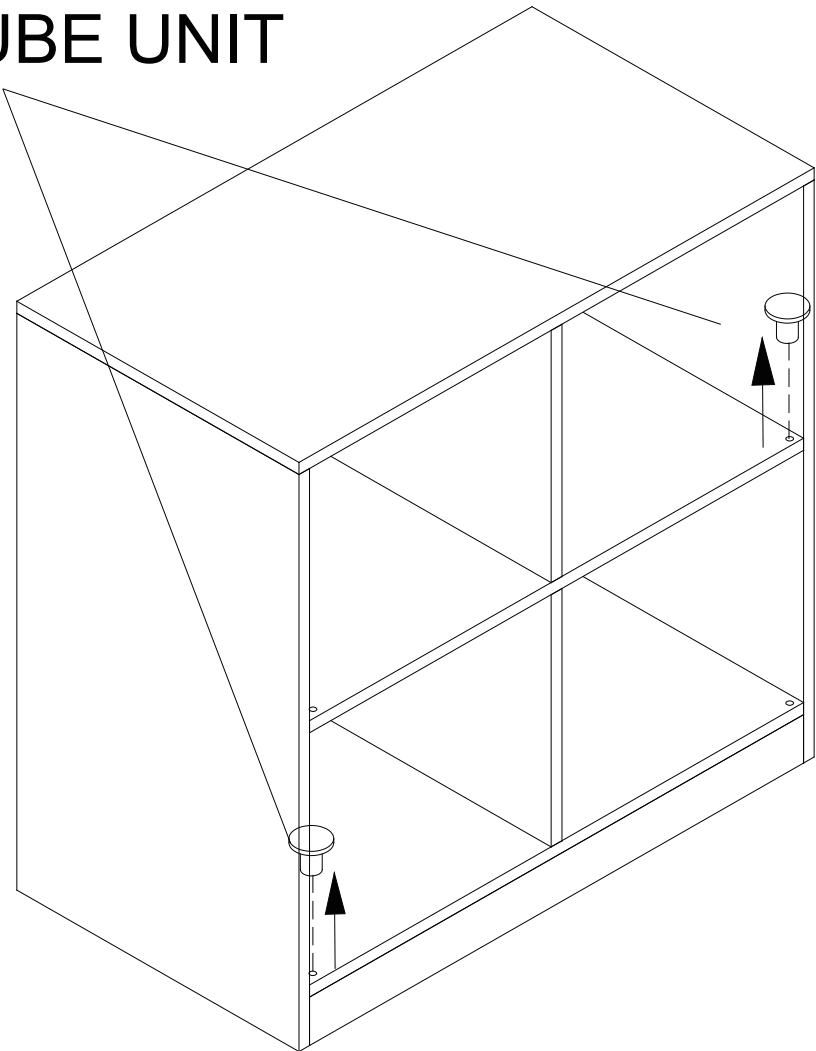


WAY1


WAY1

STEP 3

A		2
B		4

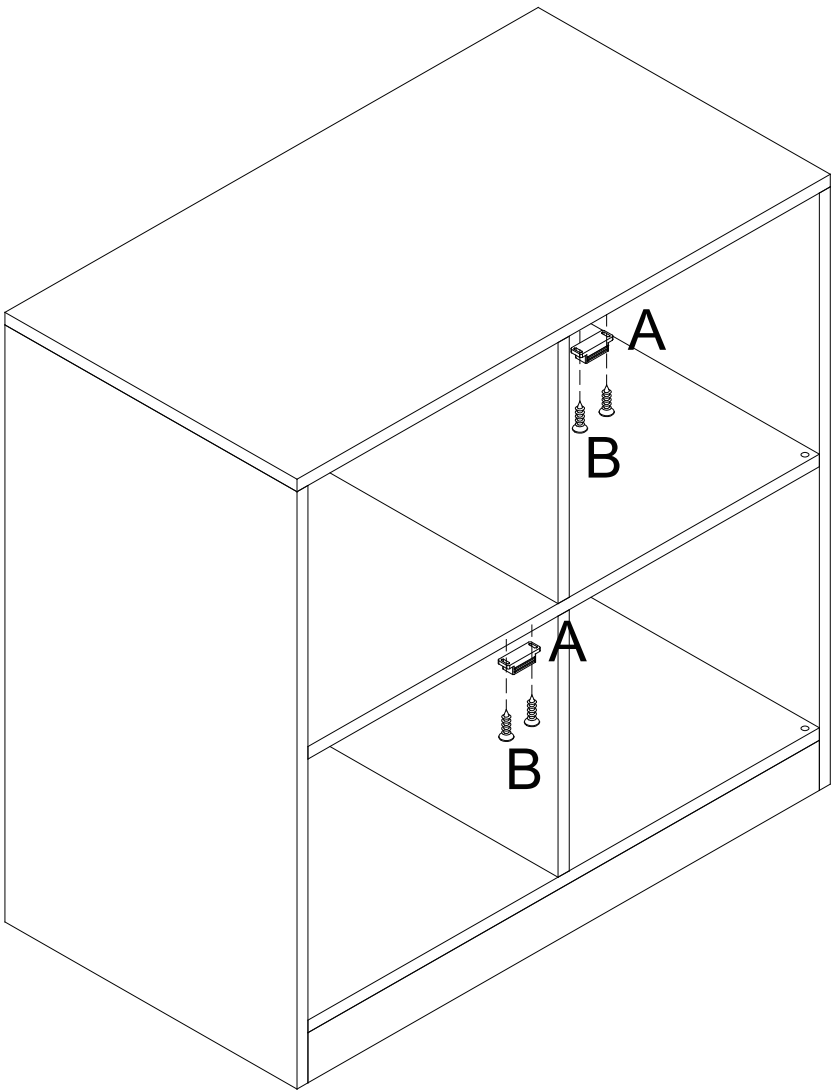


WAY1

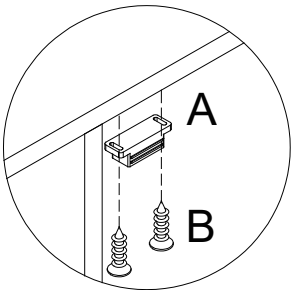




STEP 4

E		4
---	---	---

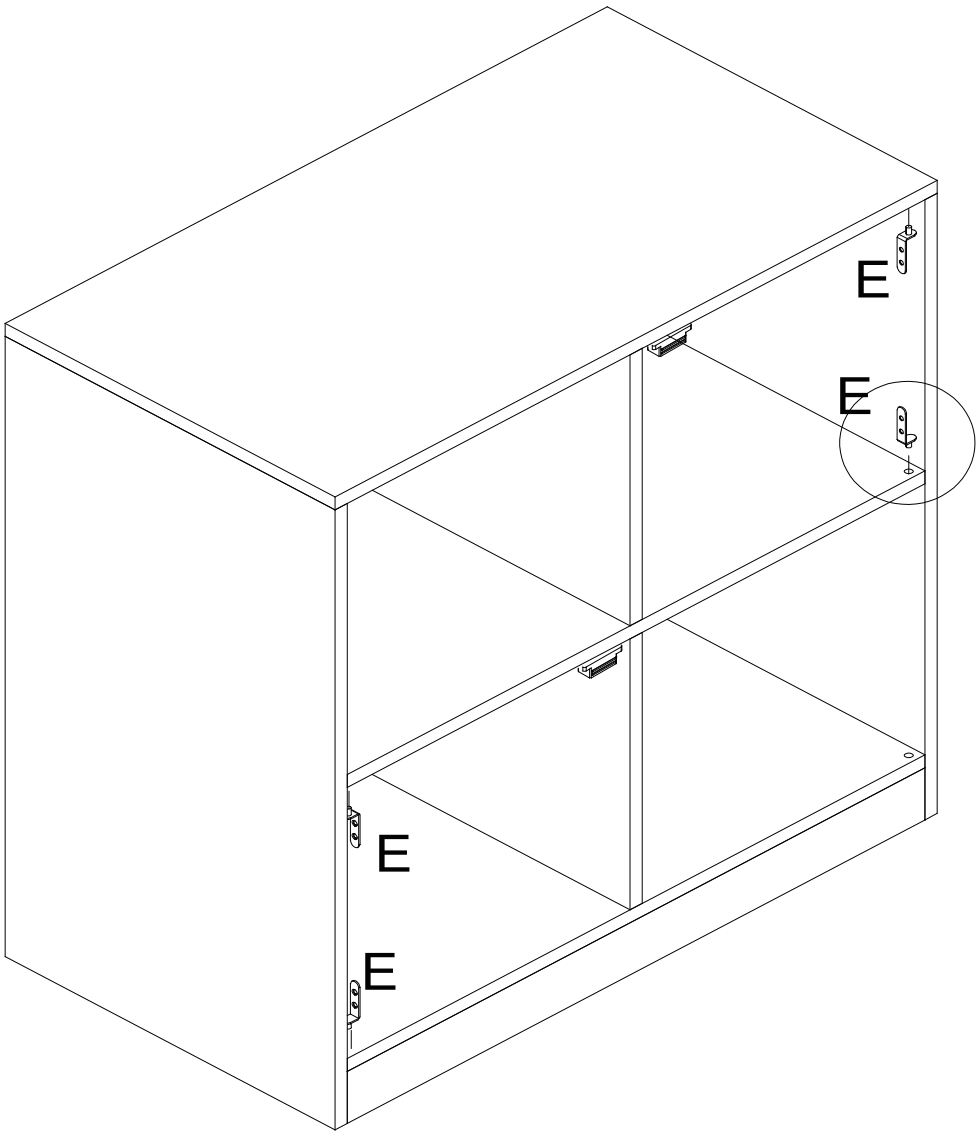



WAY1

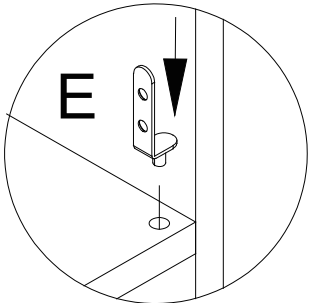

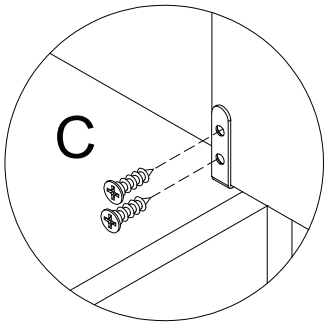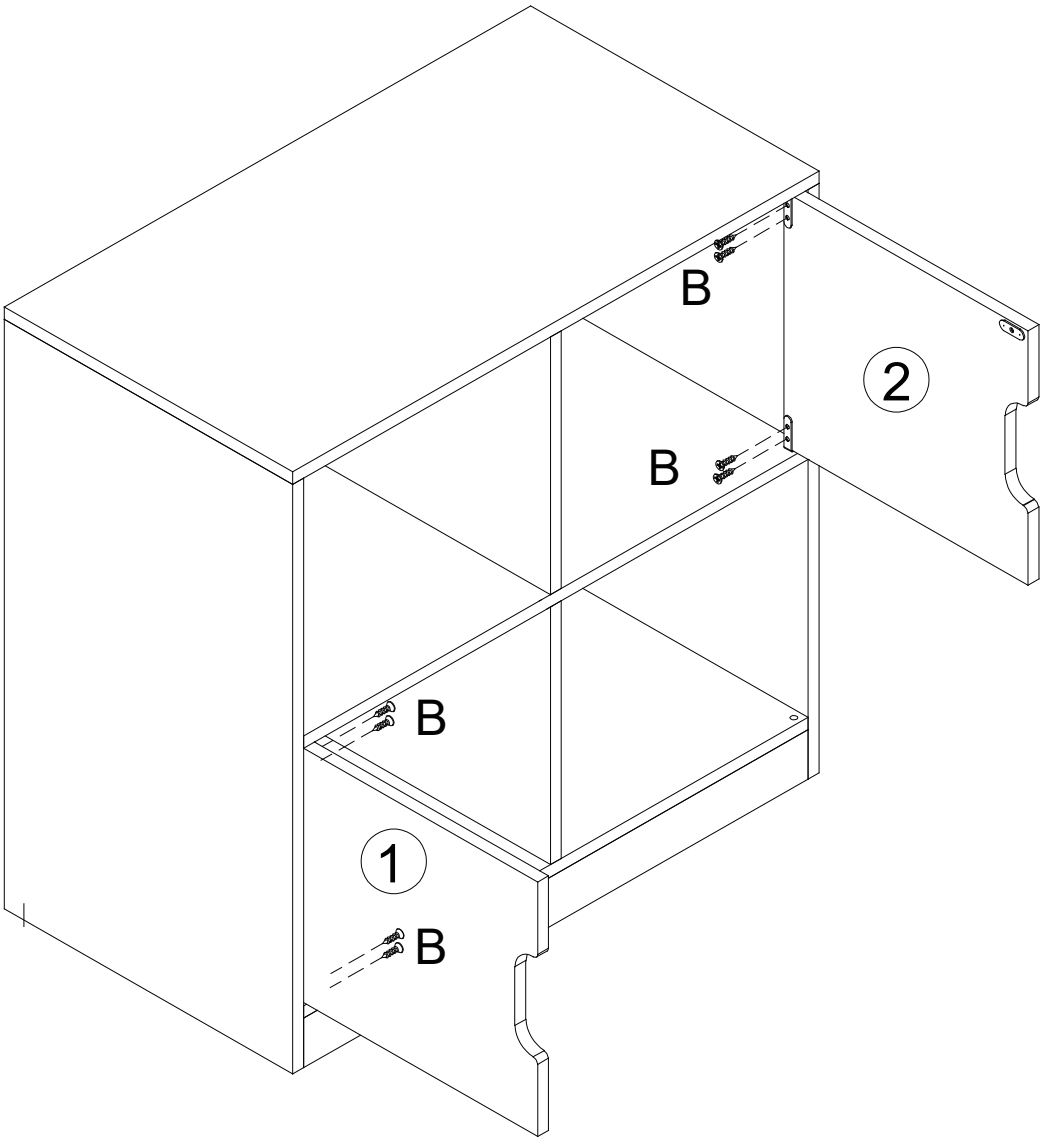

WAY1

STEP 6
PLEASE REMOVE THE
PLASTIC PLUG TO
INSTALL CUBE UNIT
DOOR

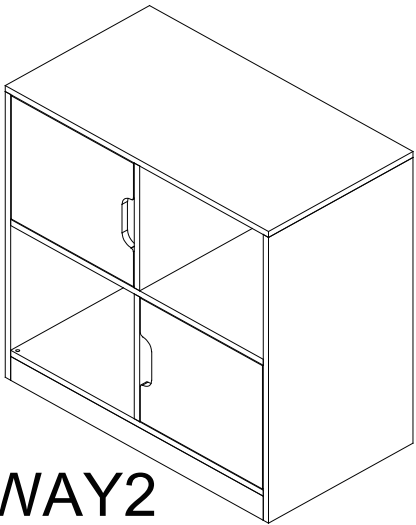
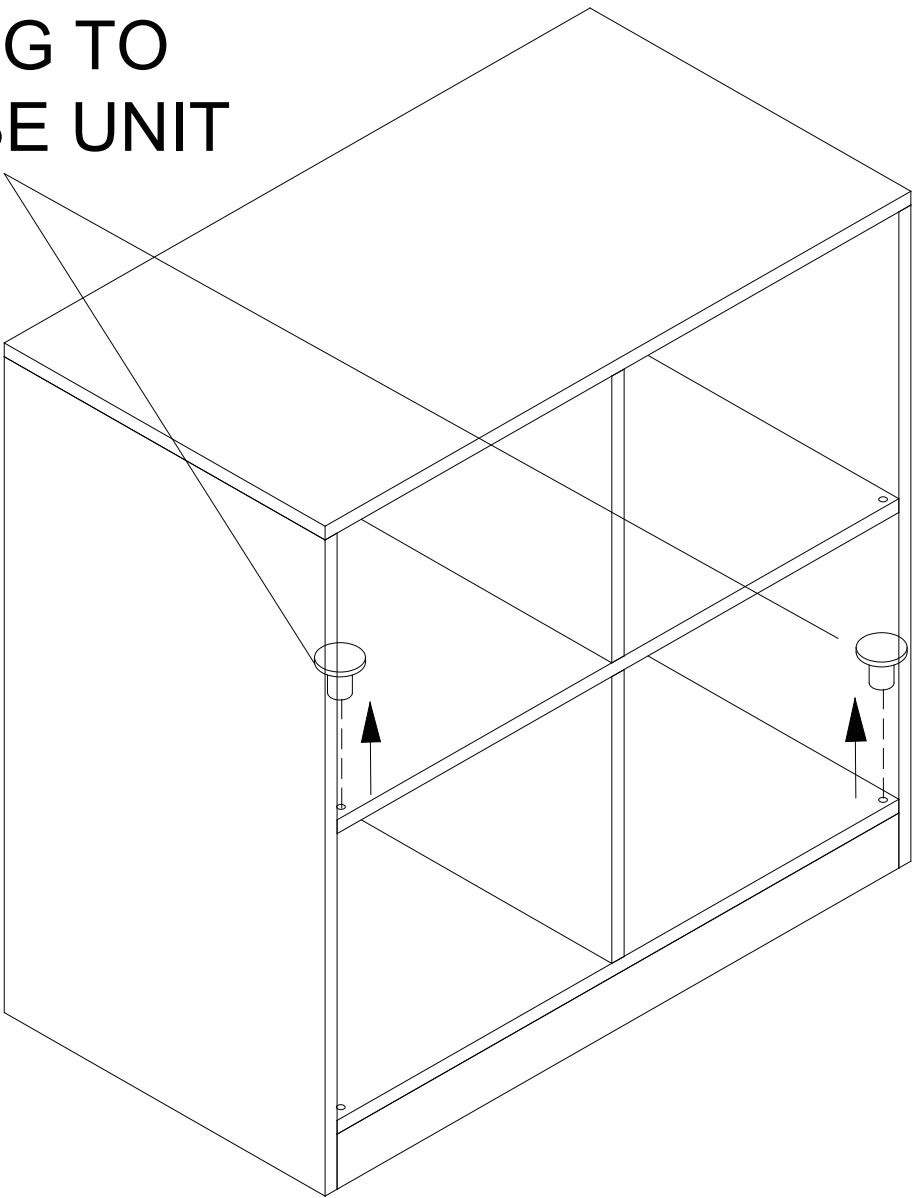


WAY2

WAY2

STEP 7



A		2
B		4

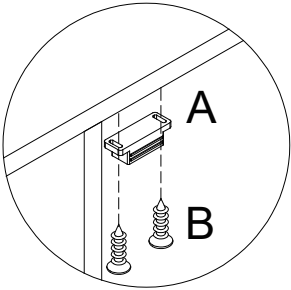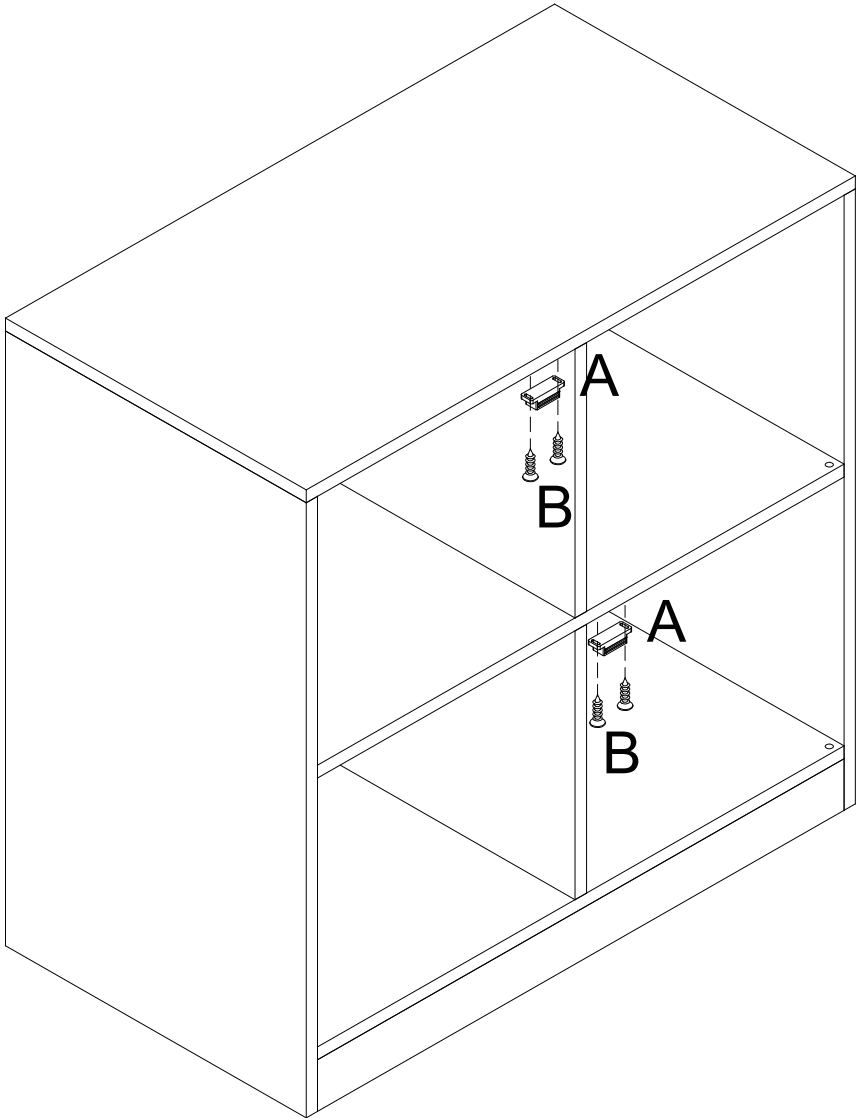



WAY2

STEP 8

E		4
---	---	---

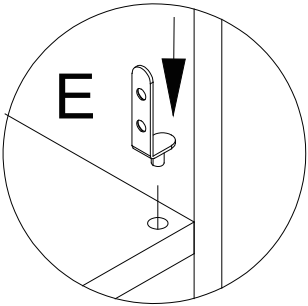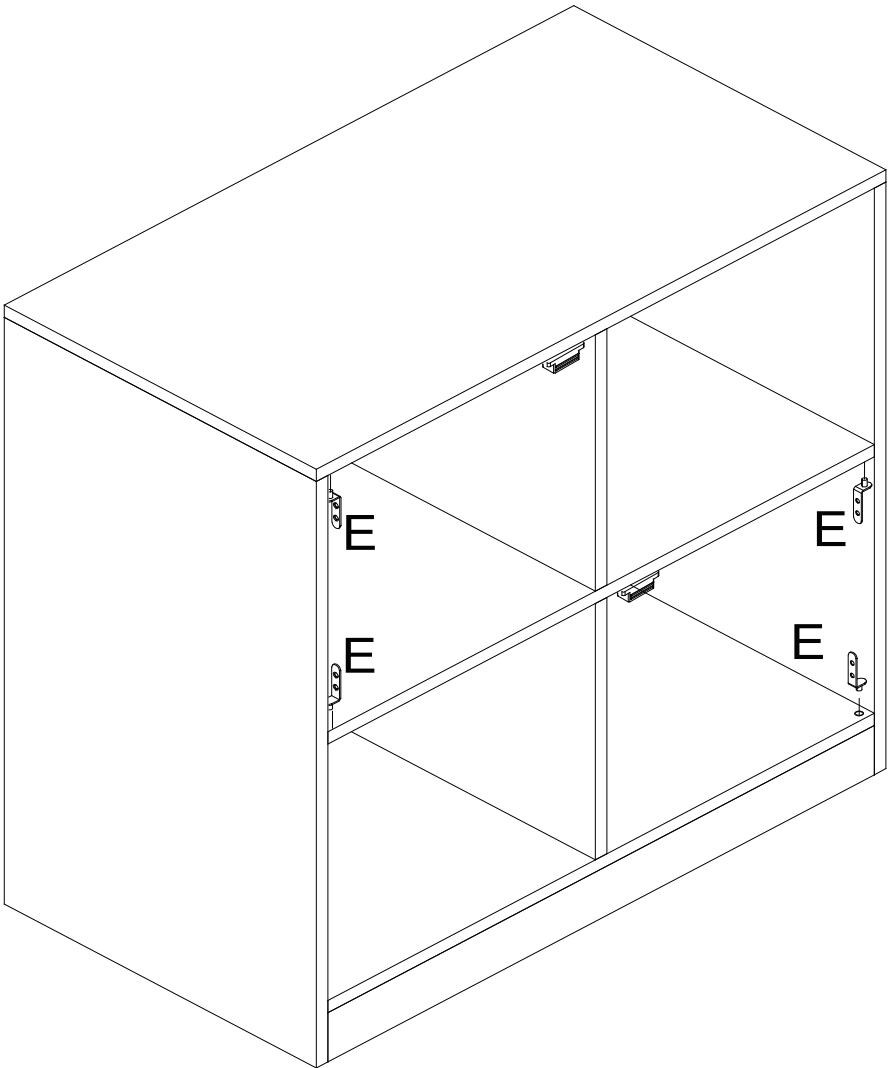

WAY2

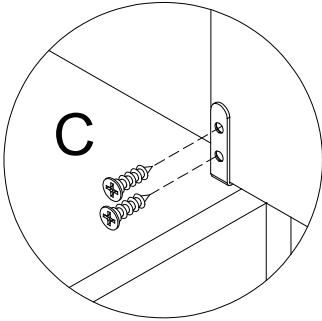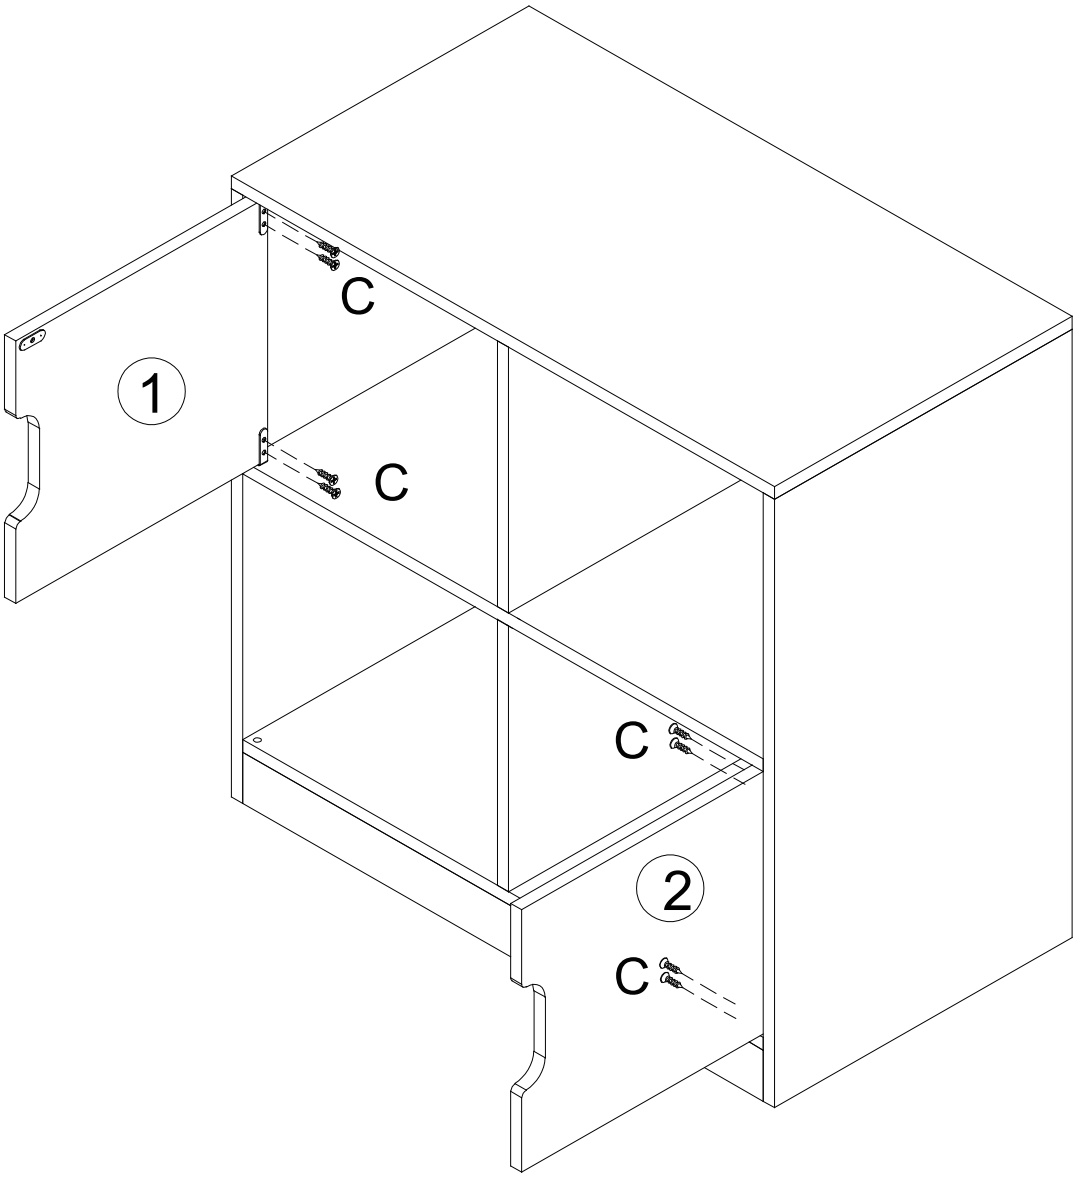

WAY2