


ASSEMBLY INSTRUCTION


MODEL : CF 9401 (46")

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Side Wing	2 pcs
E	1930mm Center Rail	1 pc
F	Support Leg 215mm	2 pcs
G	13 Pcs Slat 1397mm	1 pc
H	JCB C M6 X 40	2 pcs
I	JCB C M6 X 50	4 pcs
J	JCB C M6 X 30	8 pcs
K	M4 x 65MM	1 pc
L	CSK M4 x 25MM	2 pcs
M	CSK M4 x 32MM	29 pcs
N	Spring Washer	4 pcs
O	Flat Washer	12 pcs
P	Small Adjuster	2 pcs


Step 1 : Tighten the side wing (D) to headboard (A) as shown.

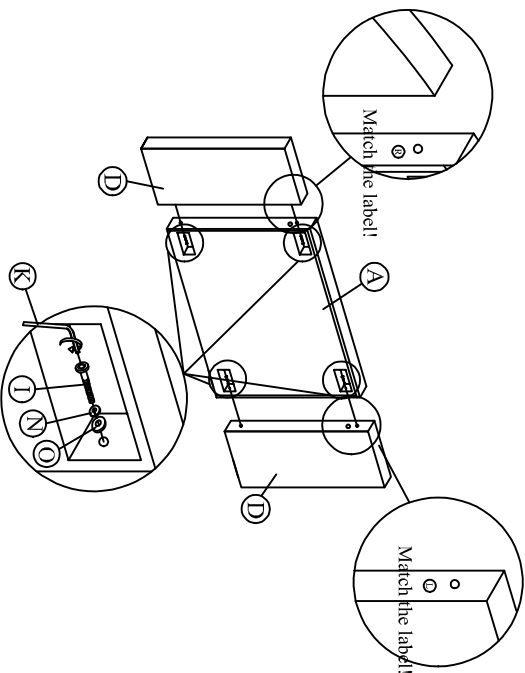

Step 2 : Attach side rail (C) to headboard (A), footboard (B) and side wing (D) by pushing the bracket down to fit it.

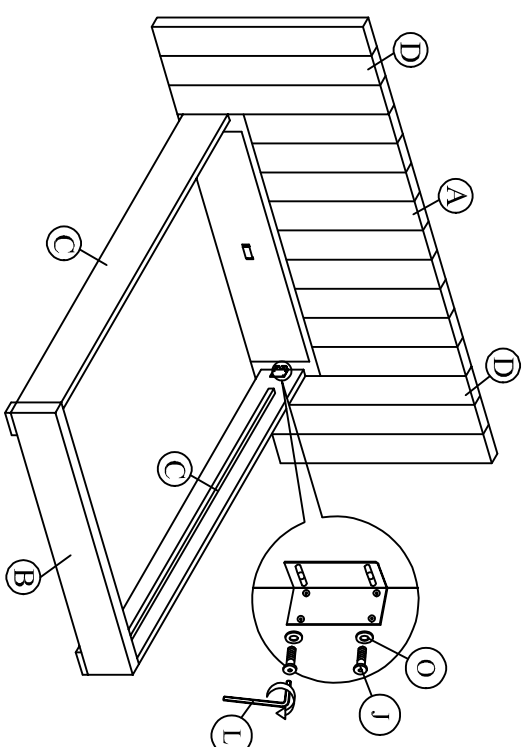


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

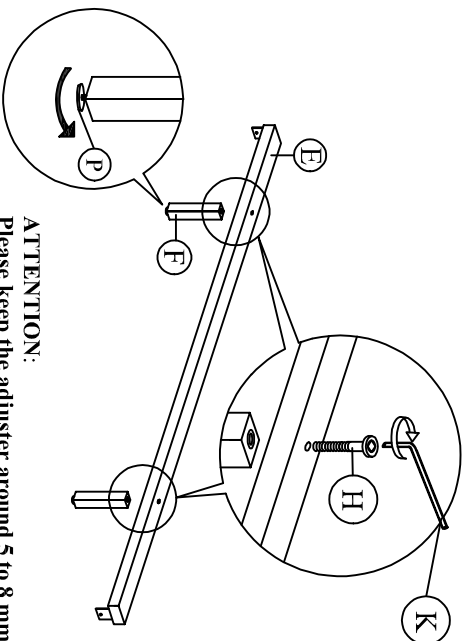

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (L) using screw driver (not included) to the headboard (A) and footboard (B).

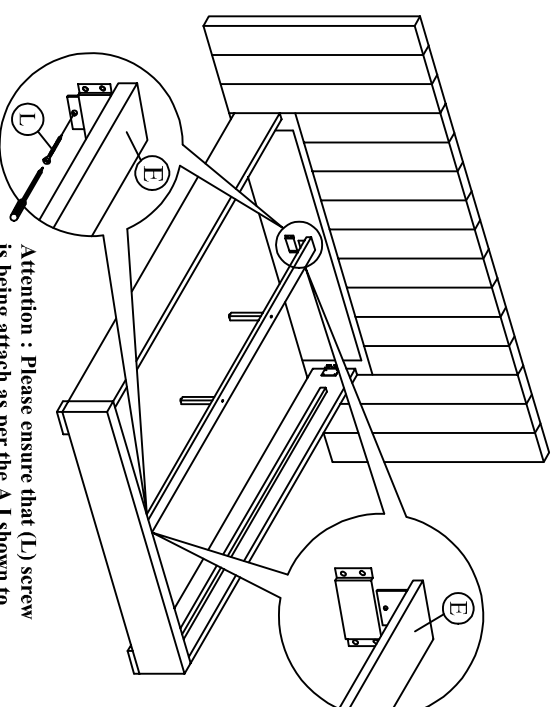

Attention : Please ensure that (L) screw is being attach as per the A.I shown to avoid base being collapse.

Step 5 : Affix the Slat (G) to the side rail support wood and the center rail (E).

