


















ASSEMBLY INSTRUCTION


MODEL : CF 9401 (5')

A		1 pc
B		1 pc
C		2 pcs
D		2 pcs
E		1 pc
F		2 pcs
G		1 pc
H		2 pcs
I		4 pcs
J		8 pcs
K		1 pc
L		2 pcs
M		31 pcs
N		4 pcs
O		12 pcs
P		2 pcs


Step 1 : Tighten the side wing (D) to headboard (A) as shown.

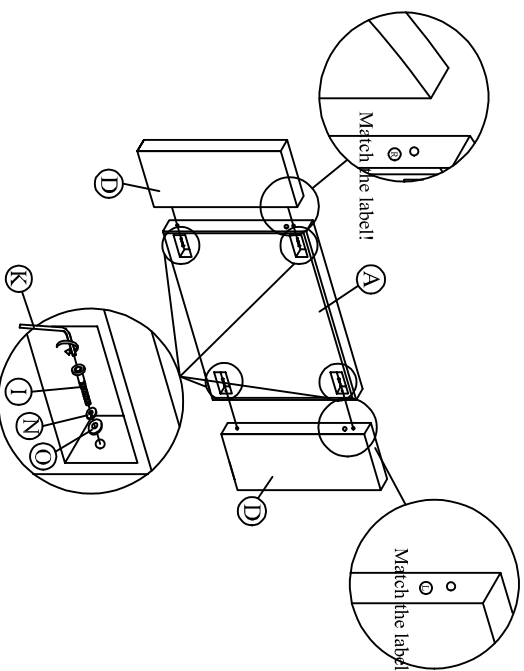

Step 2 : Attach side rail (C) to headboard (A), footboard (B) and side wing (D) by pushing the bracket down to fit it.

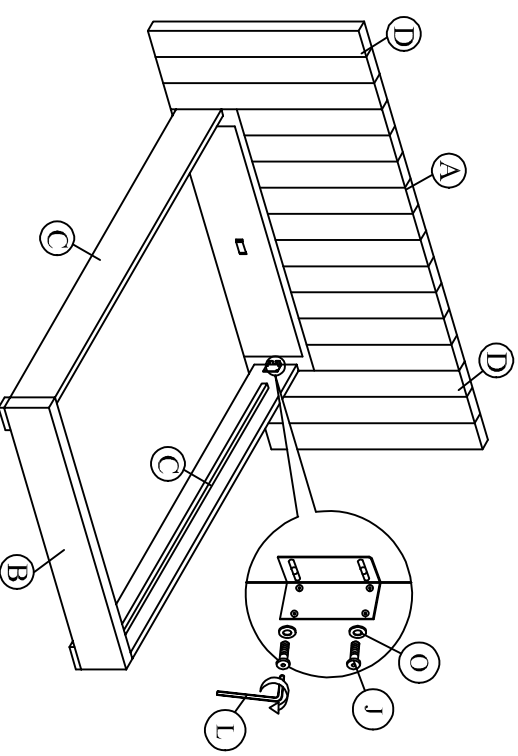


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

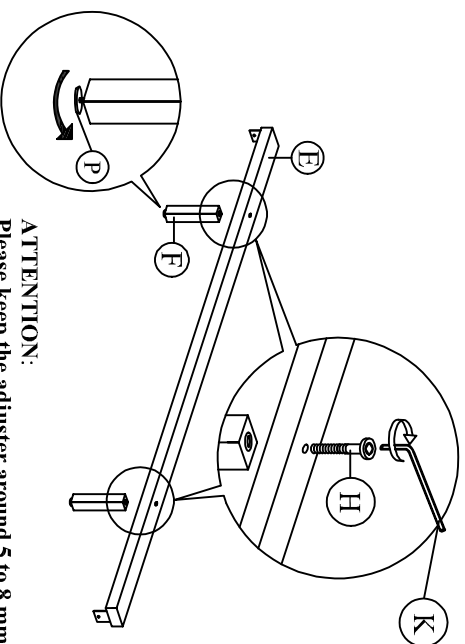

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (L) using screw driver (not included) to the headboard (A) and footboard (B).

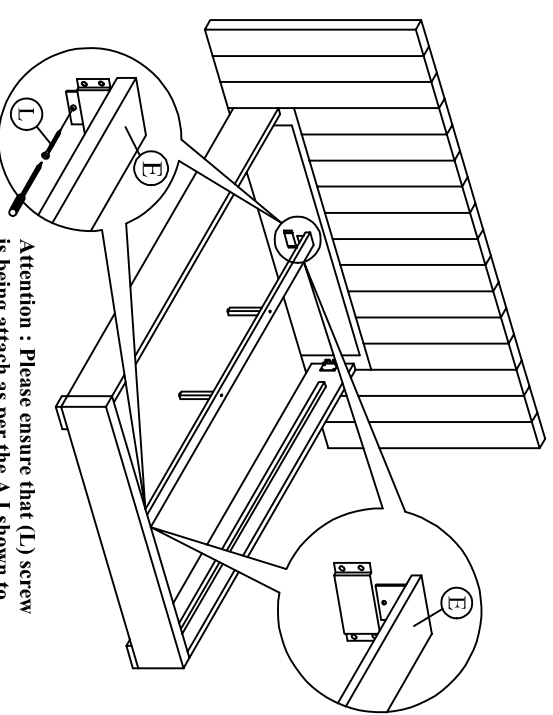

Attention : Please ensure that (L) screw is being attach as per the A.1 shown to avoid base being collapse.

Step 5 : Affix the Slat (G) to the side rail support wood and the center rail (E).

