











READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

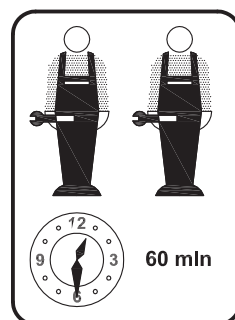

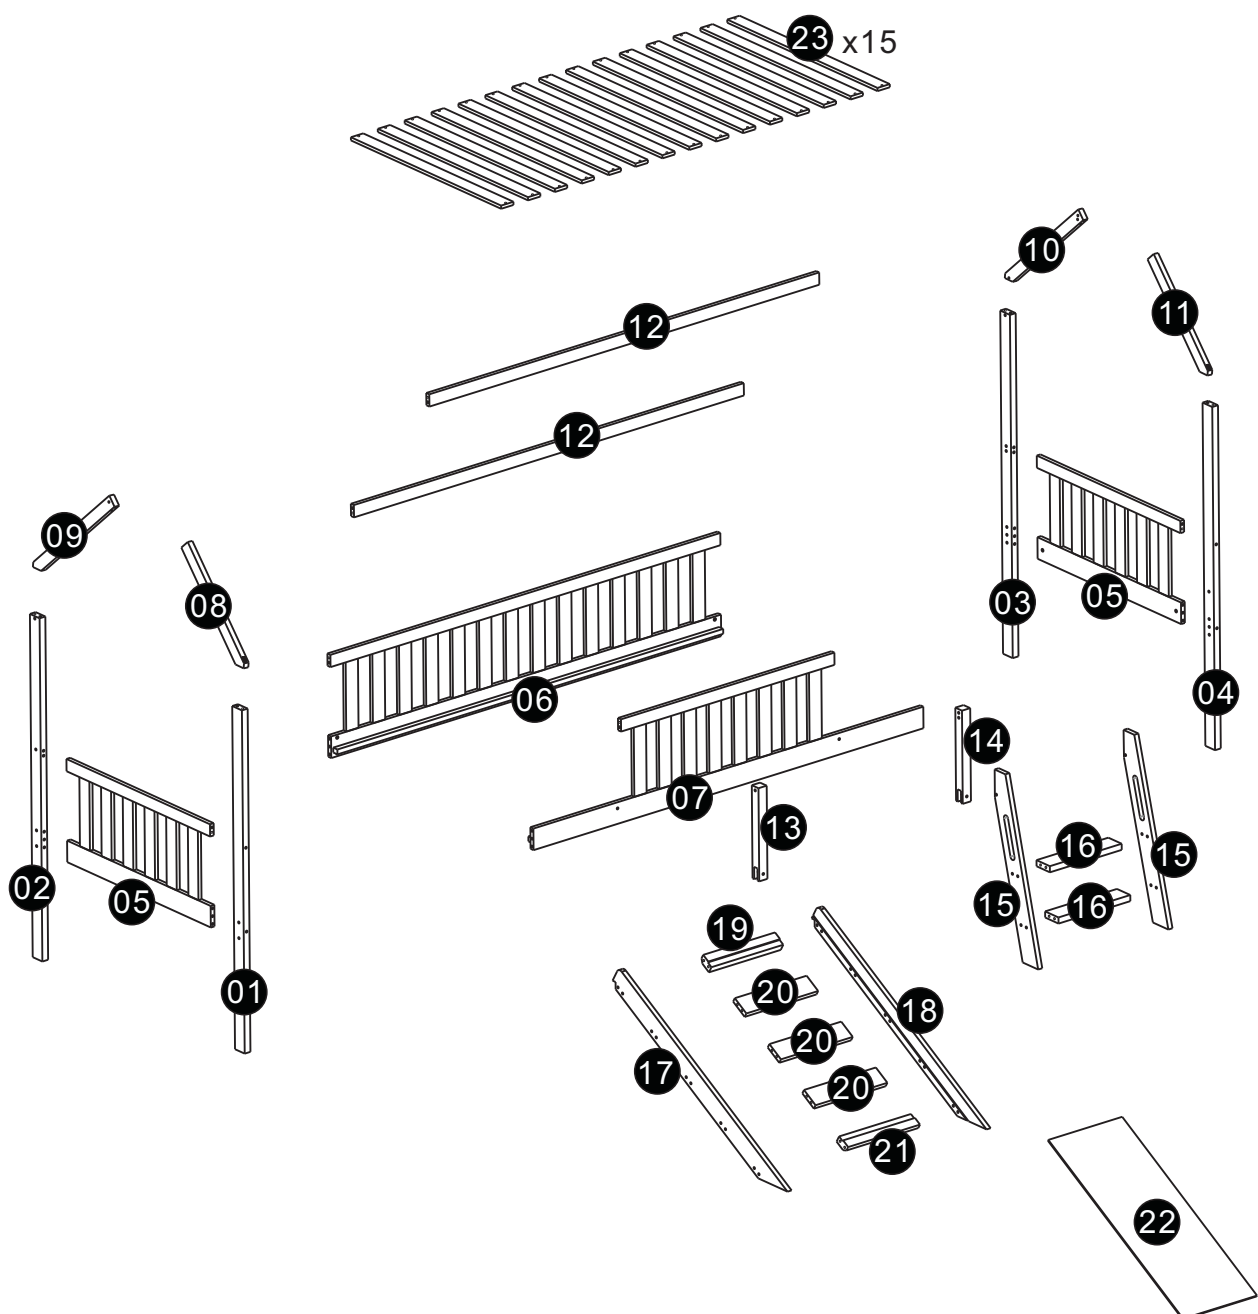




A x30  Ø4 x30mm	B x4  M6 x100mm	C x30  Ø8 x30mm	D x12 	E x2 
F x6  Ø6 x100mm	G x8  M6x70mm	H x10  Ø6x70mm	I x2  Ø6x80mm	J x2 
K x2  M6x40mm	L x2 	M x2  M6x30mm	N x28  Ø7x60mm	P x6  Ø3x16mm

01

C x12



Ø8 x30mm

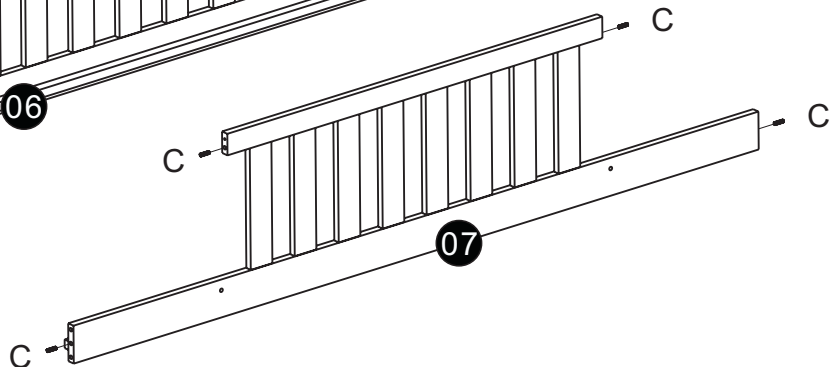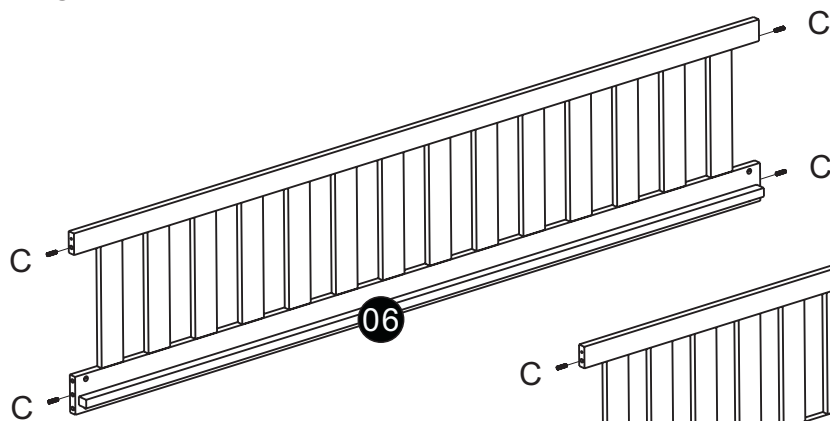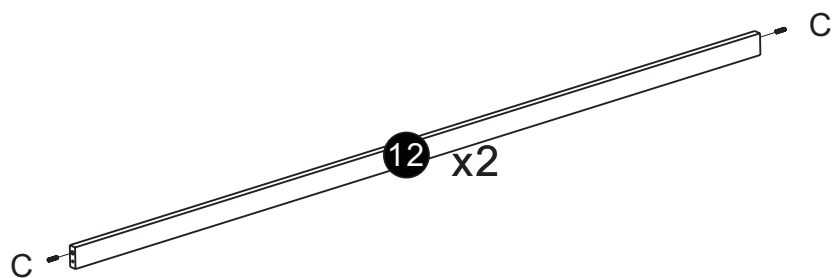


02


C x12



Ø8 x30mm

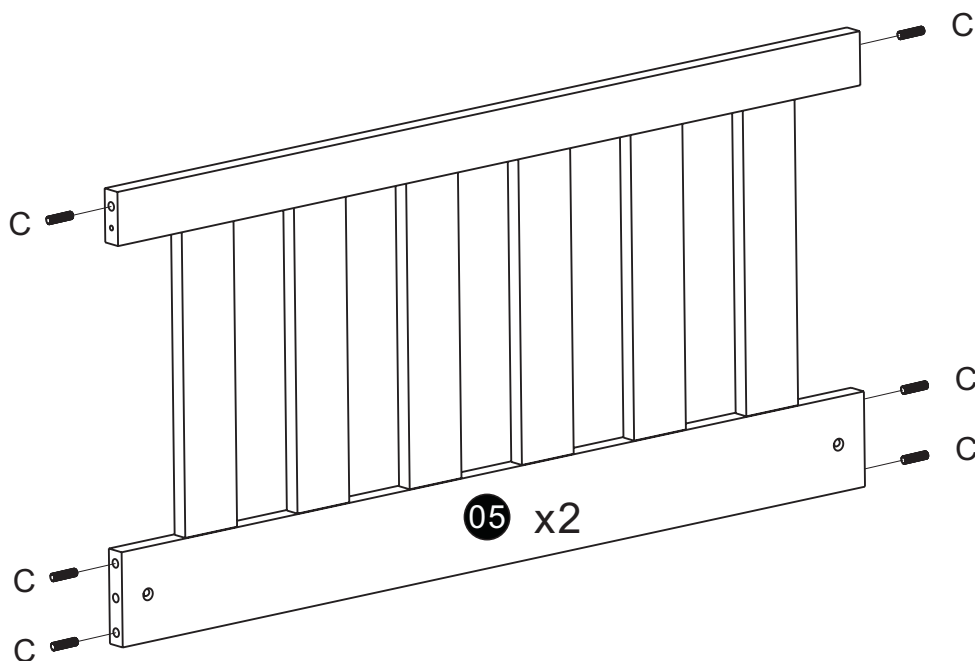



03

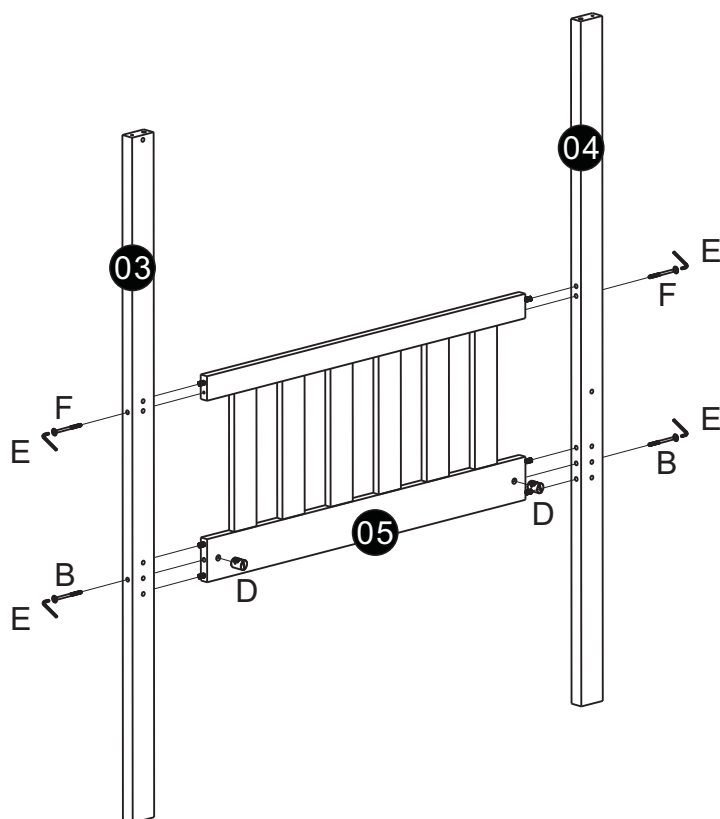

B x2  M6 x100mm	D x2 
F x2  Ø6 x100mm	E x1 

04

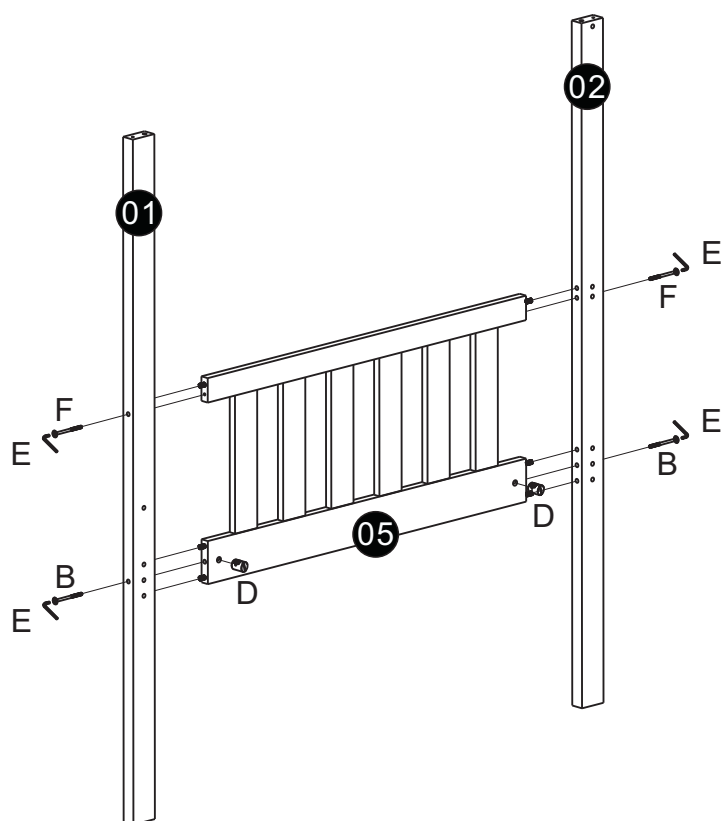


B x2  M6 x100mm	D x2 
F x2  Ø6 x100mm	E x1 

05

C x2




Ø8 x30mm

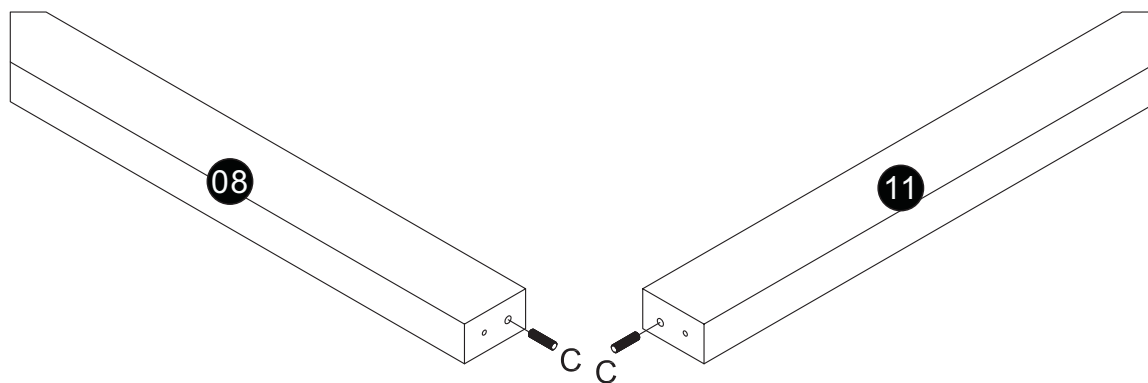


06

F x2





Ø6 x100mm

E x1

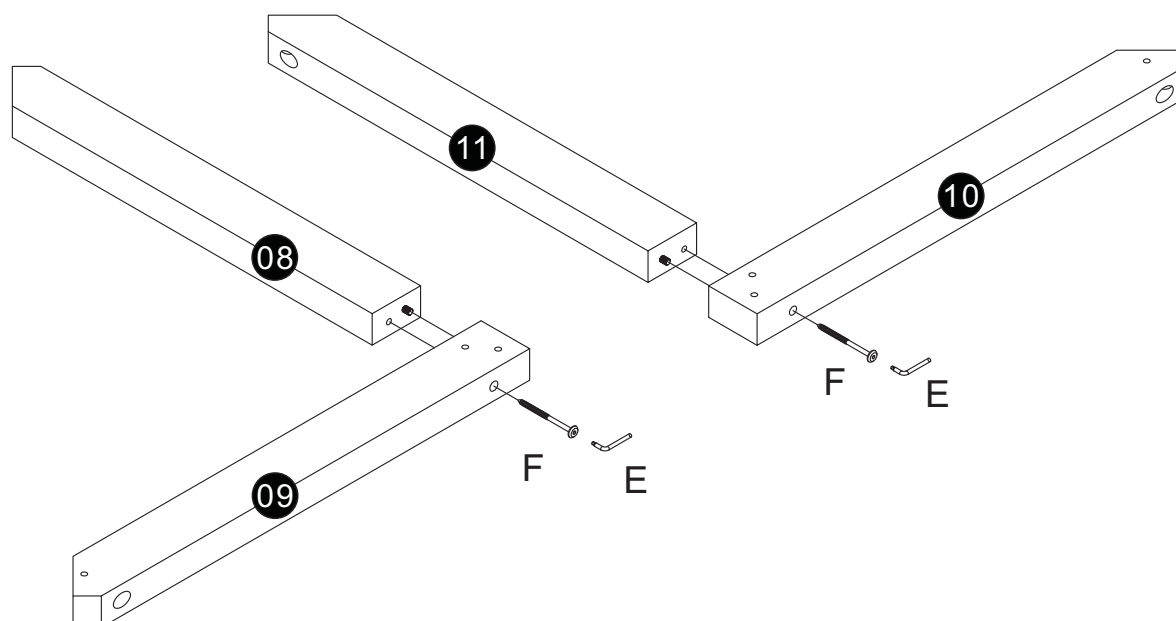

07

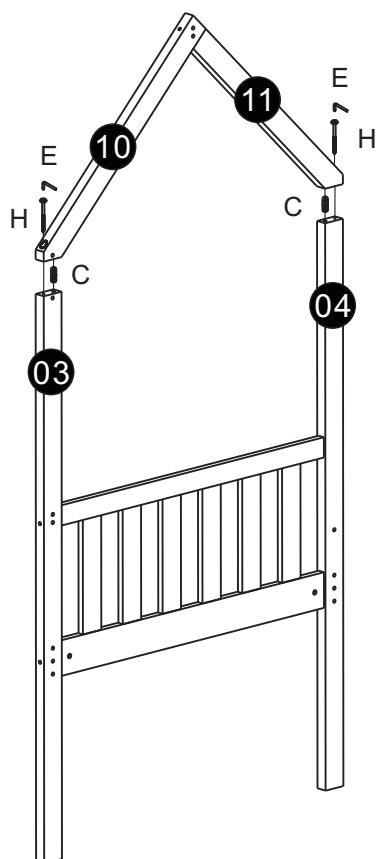

H x2

 Ø6x70mm

E x1




C x2



Ø8 x30mm

08

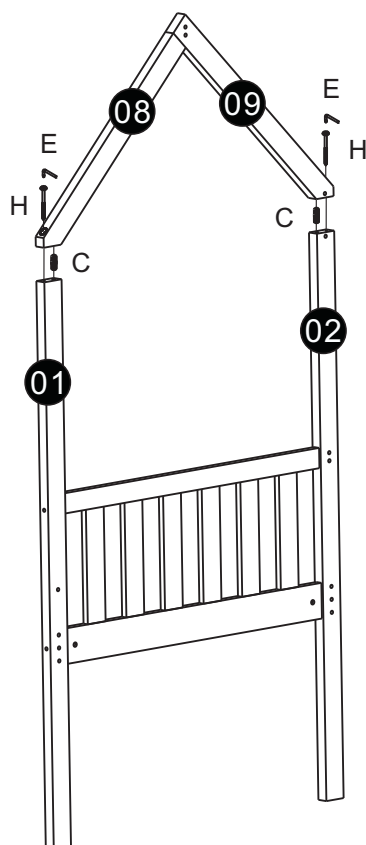

H x2

 Ø6x70mm

E x1




C x2



Ø8 x30mm


09

D x8	E x1	G x8	H x6
		 M6x70mm	 Ø6x70mm

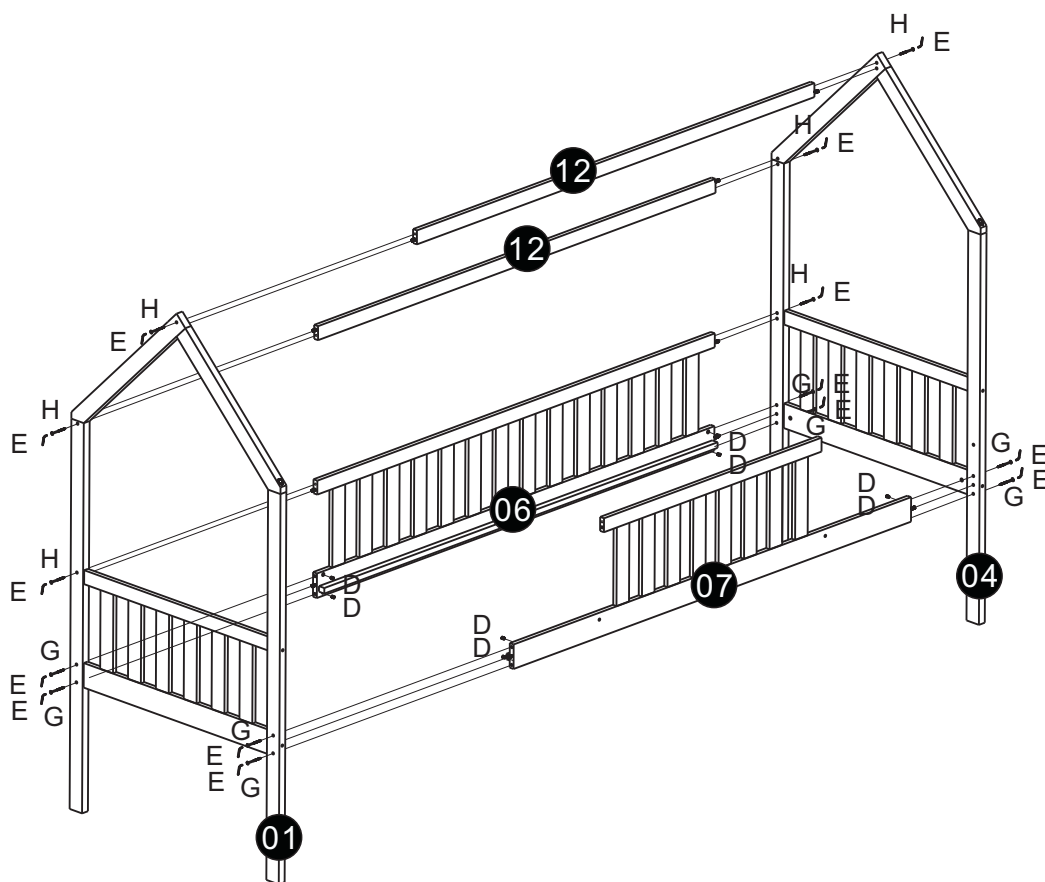


10

A x30
 Ø4 x30mm

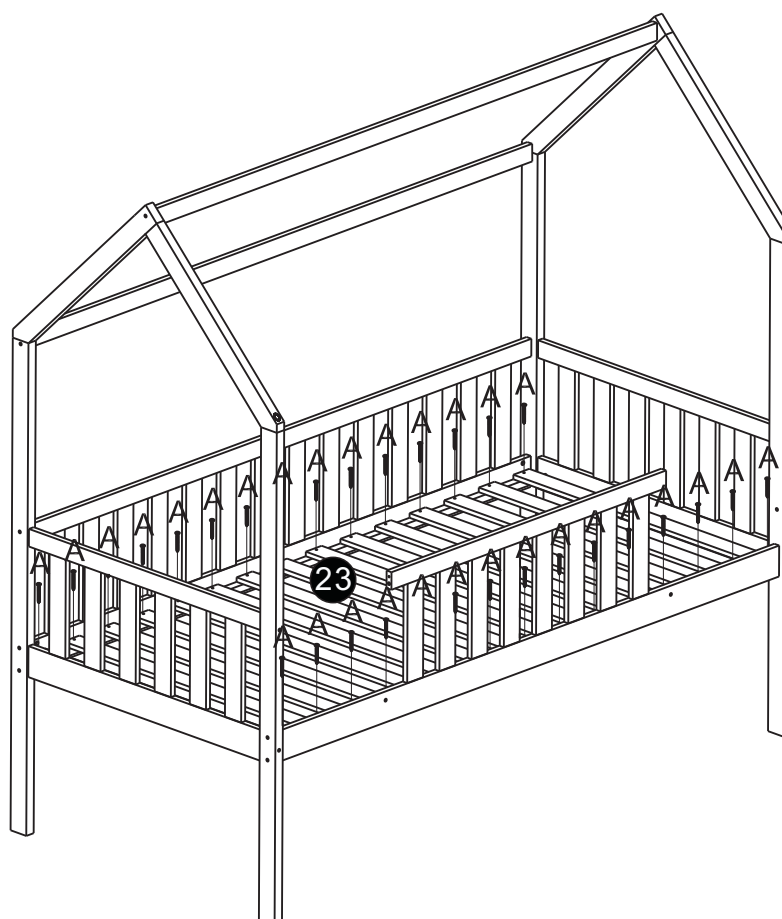

11

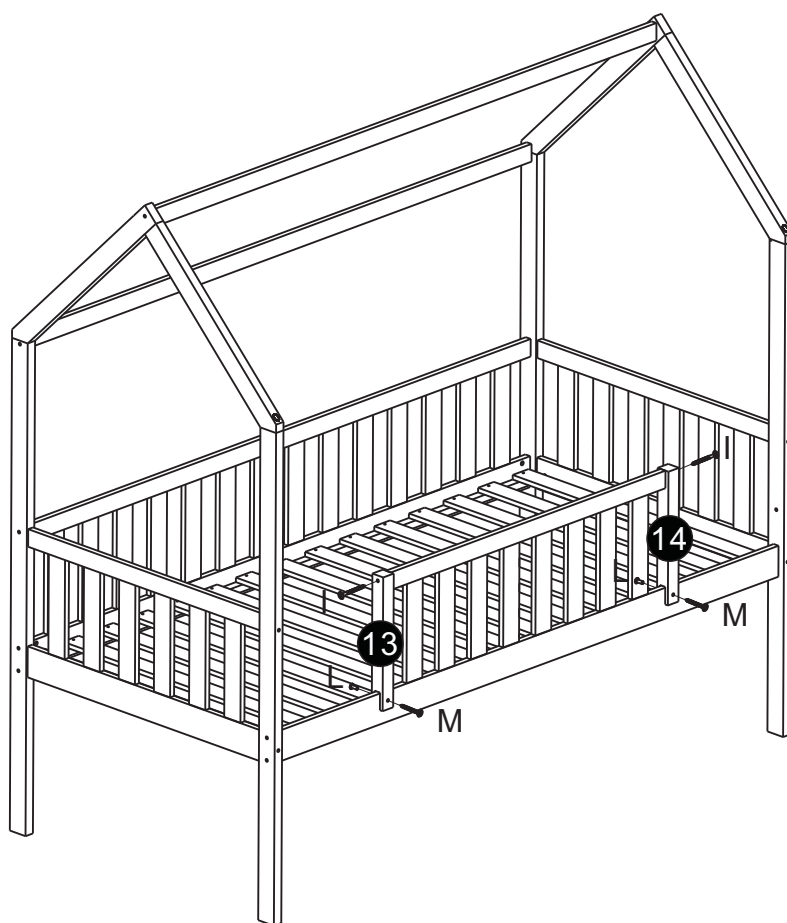


M x2



M6x30mm

L x2




Ø6x80mm

L x4



12

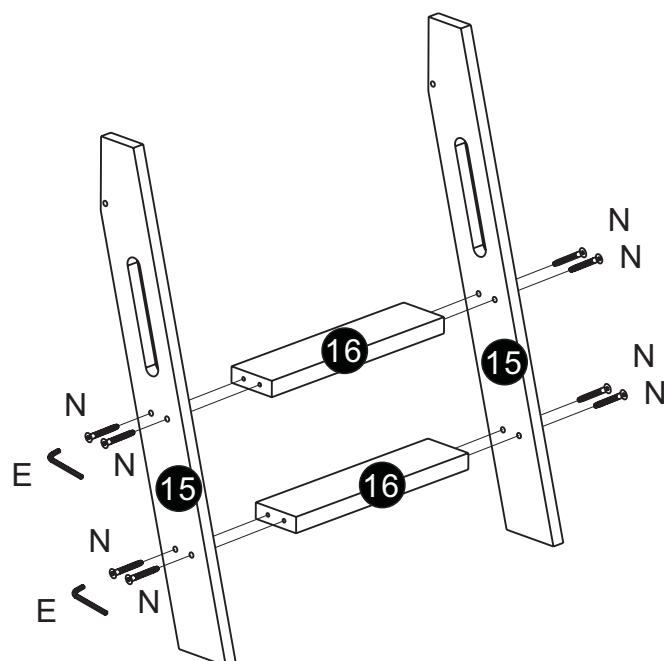

N x8



Ø7x60mm

13

K x2



M6x40mm




14


N x16




Ø7x60mm

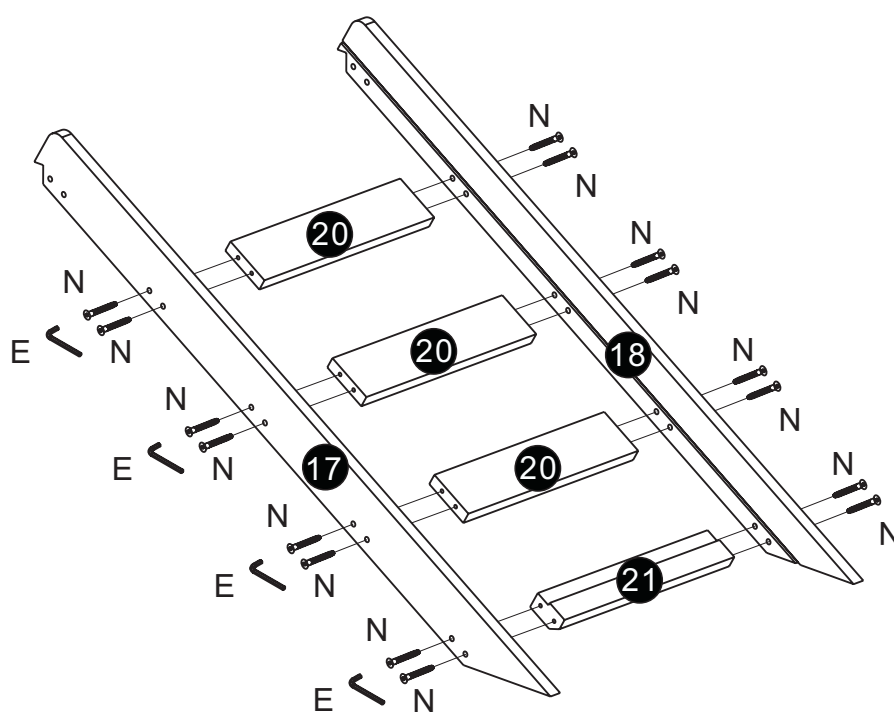

15

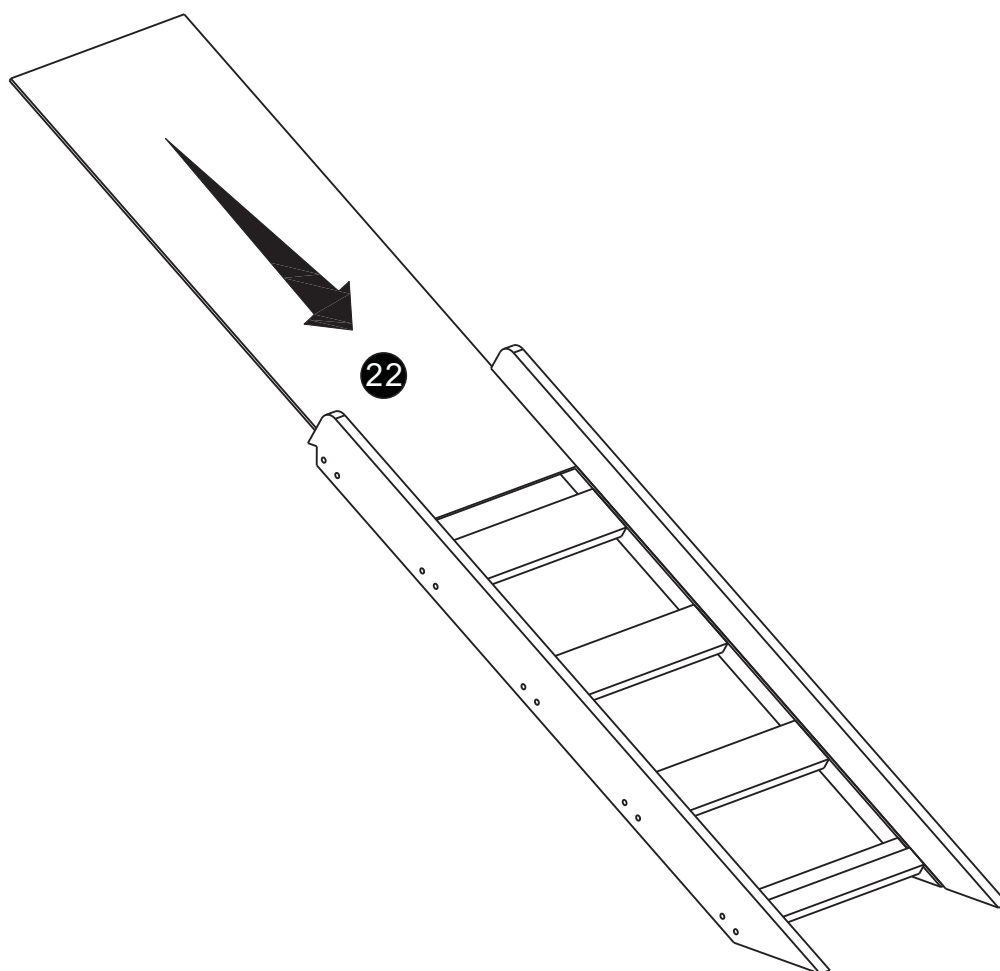

16

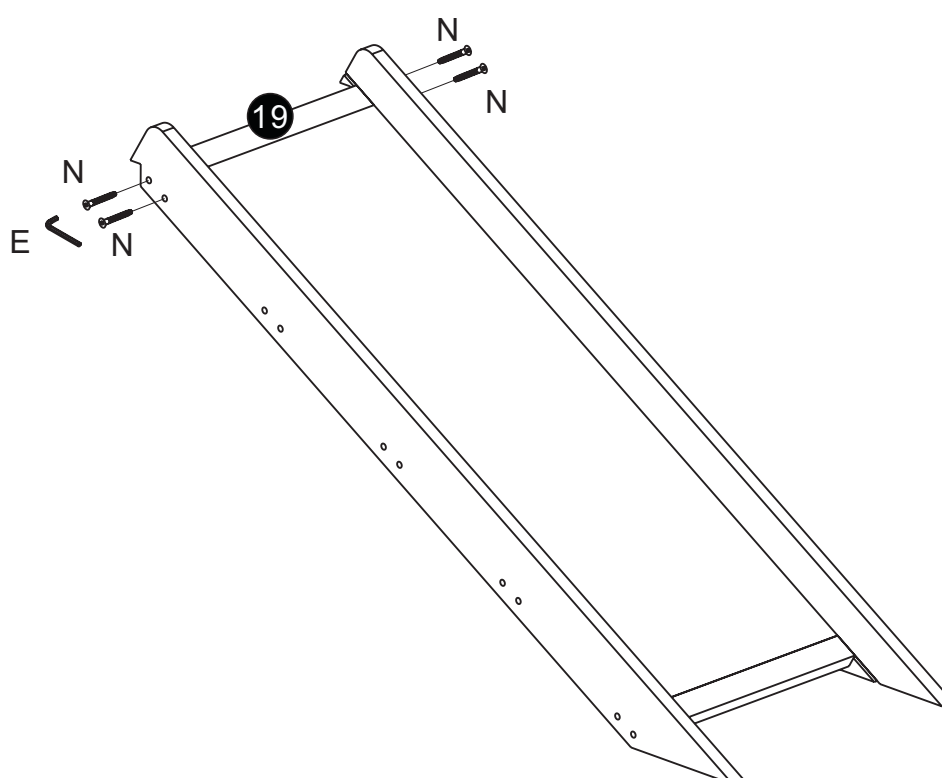

N x4



Ø7x60mm



J x2




P x4



Ø3x16mm

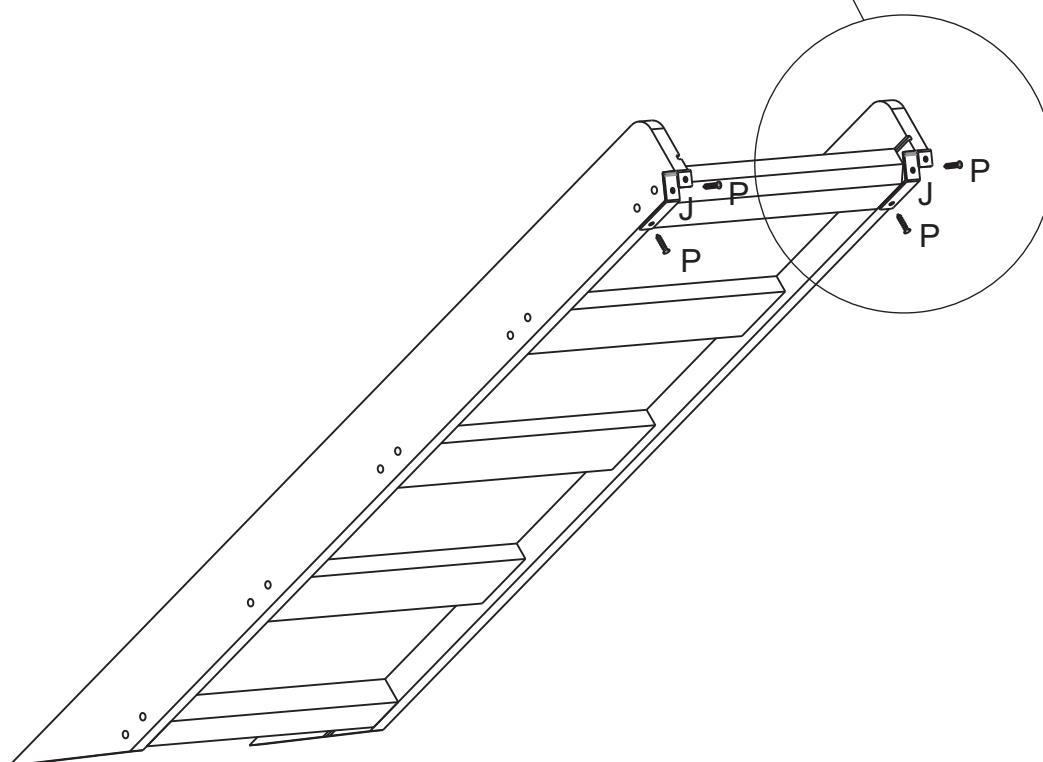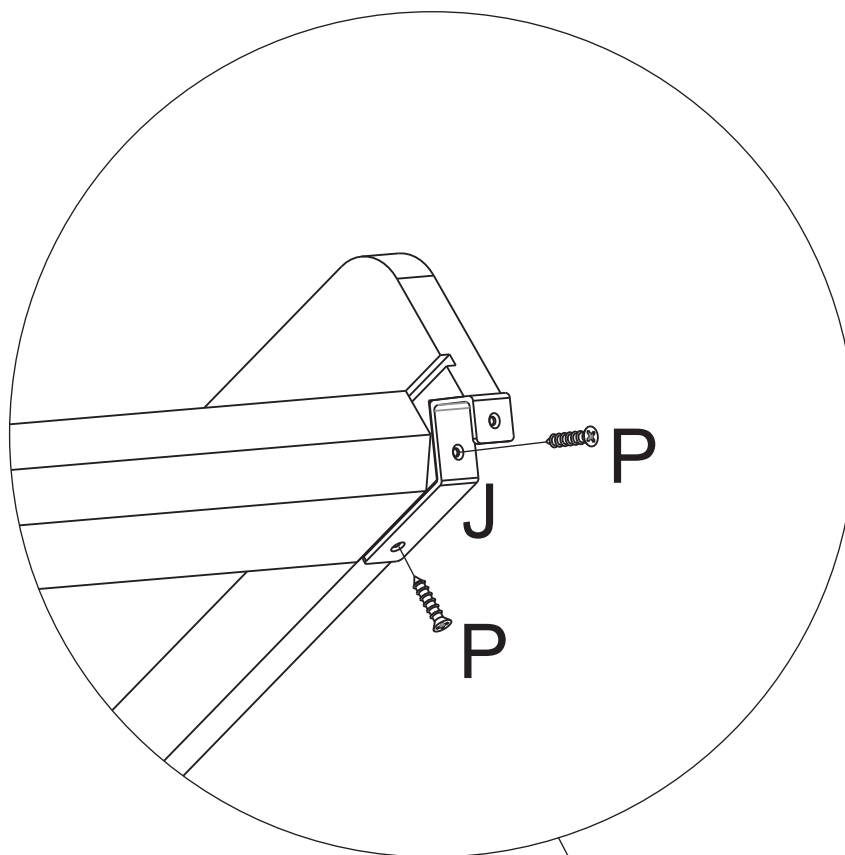

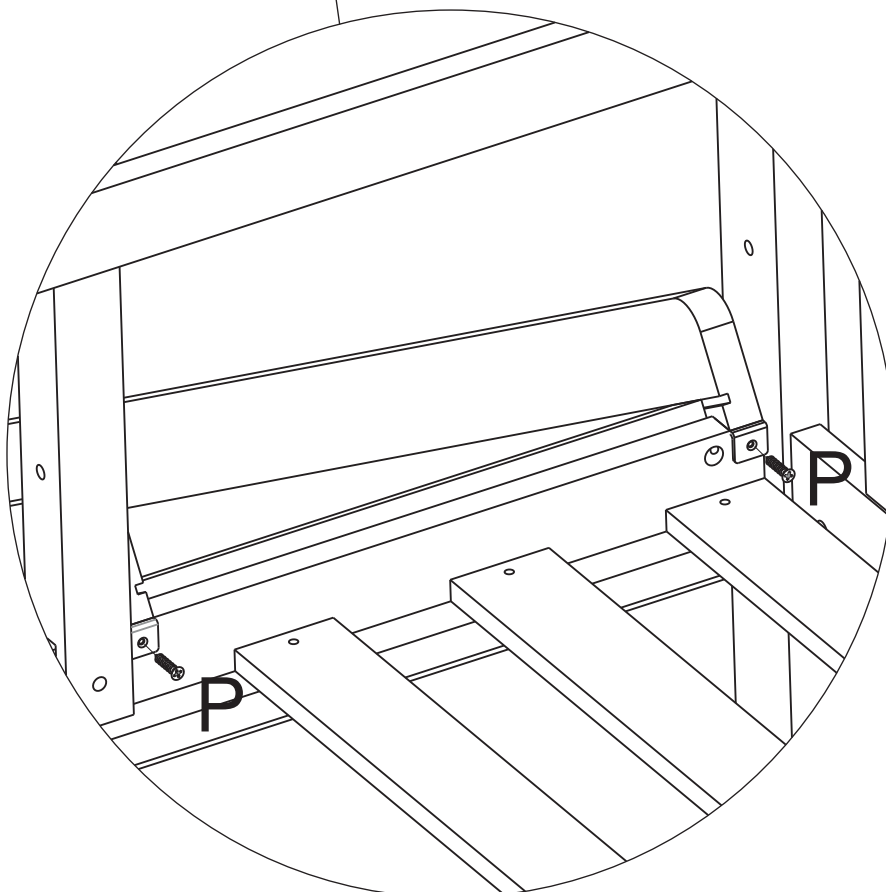

NO HANGING

