








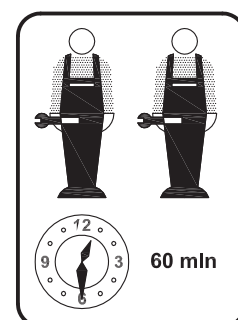


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

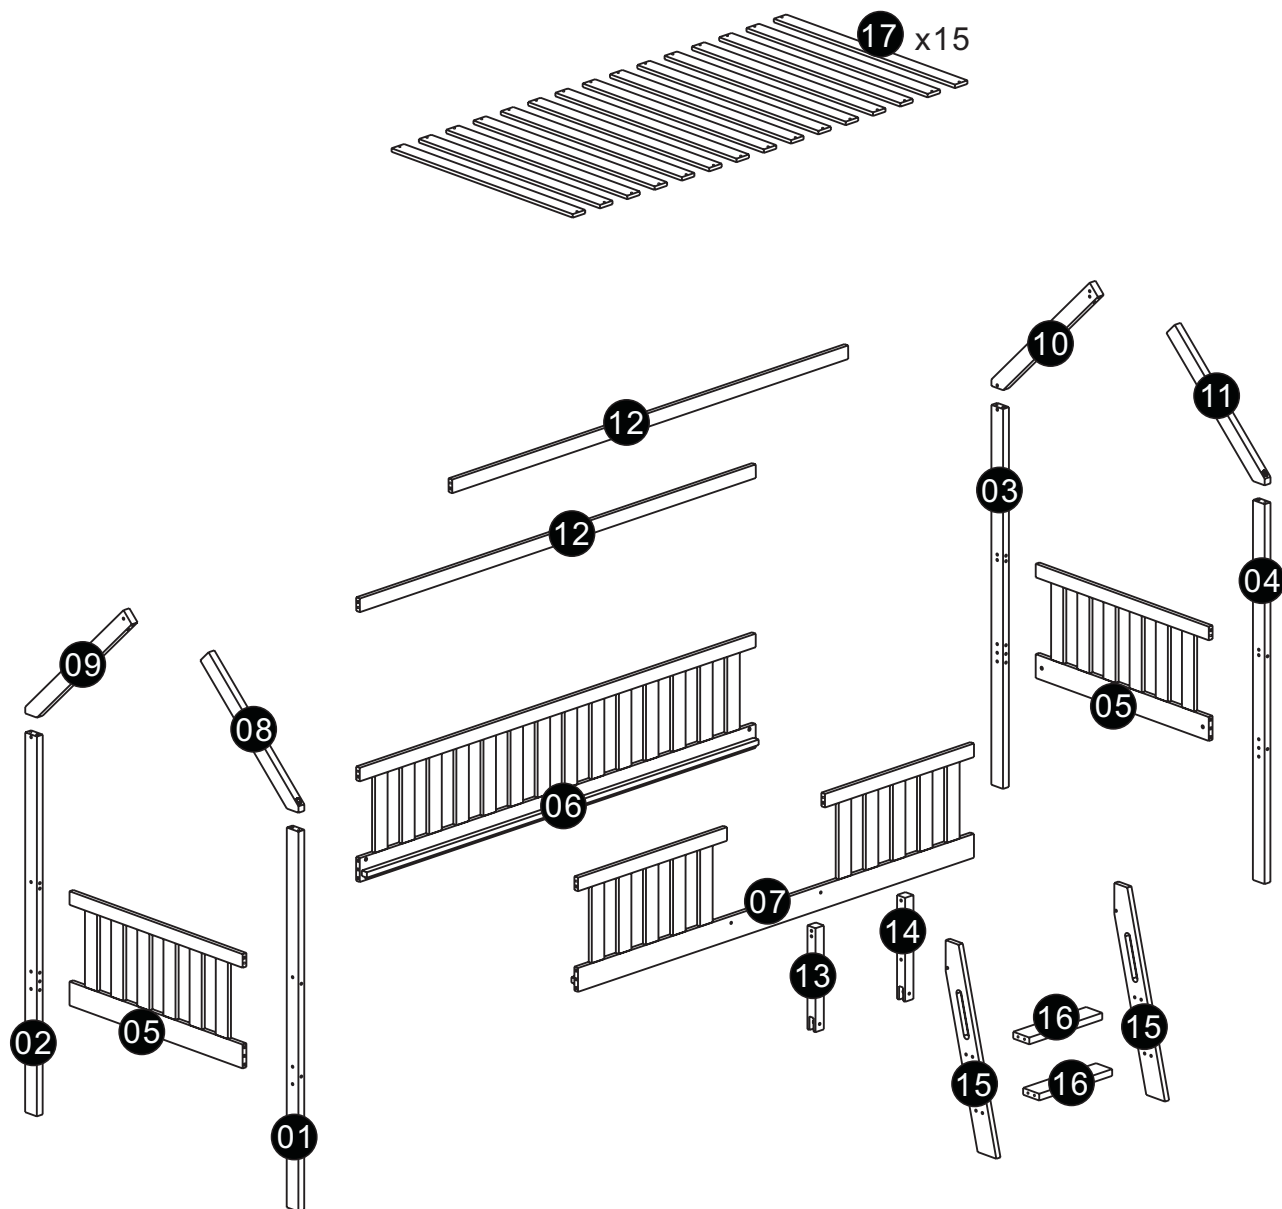






A x30  Ø4 x30mm	B x4  M6 x100mm	C x32  Ø8 x30mm	D x12 	E x2 
F x6  Ø6 x100mm	G x8  M6x70mm	H x12  Ø6x70mm	I x2  Ø6x80mm	K x2  M6x40mm
L x2 	M x2  M6x30mm	N x8  Ø7x60mm		

01

C x12



Ø8 x30mm

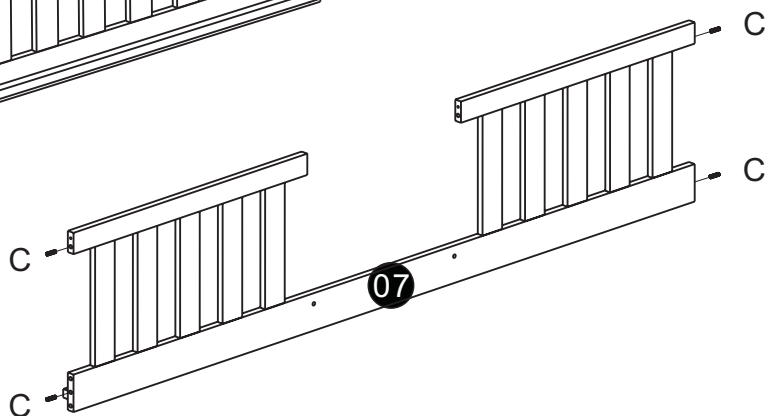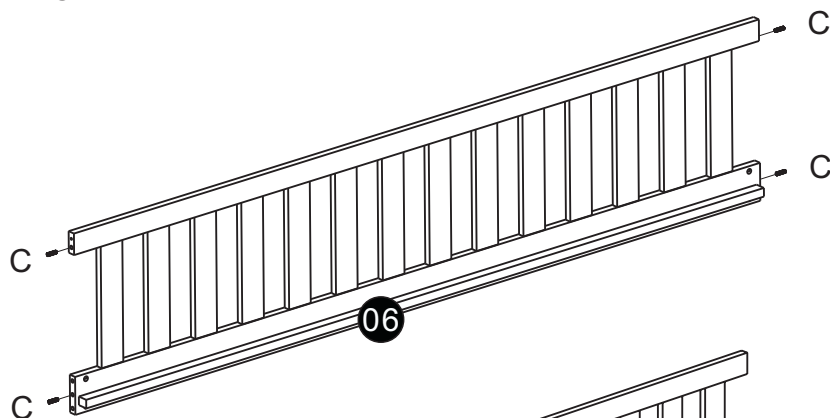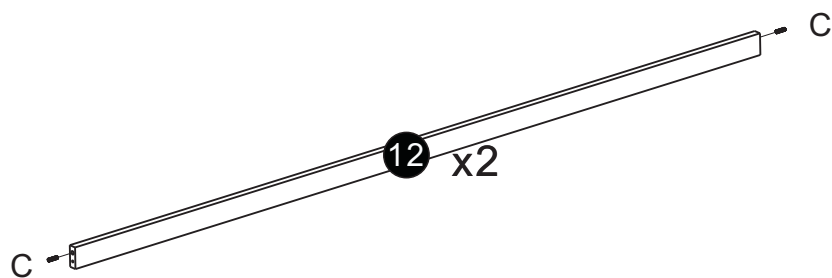


02


C x12




Ø8 x30mm

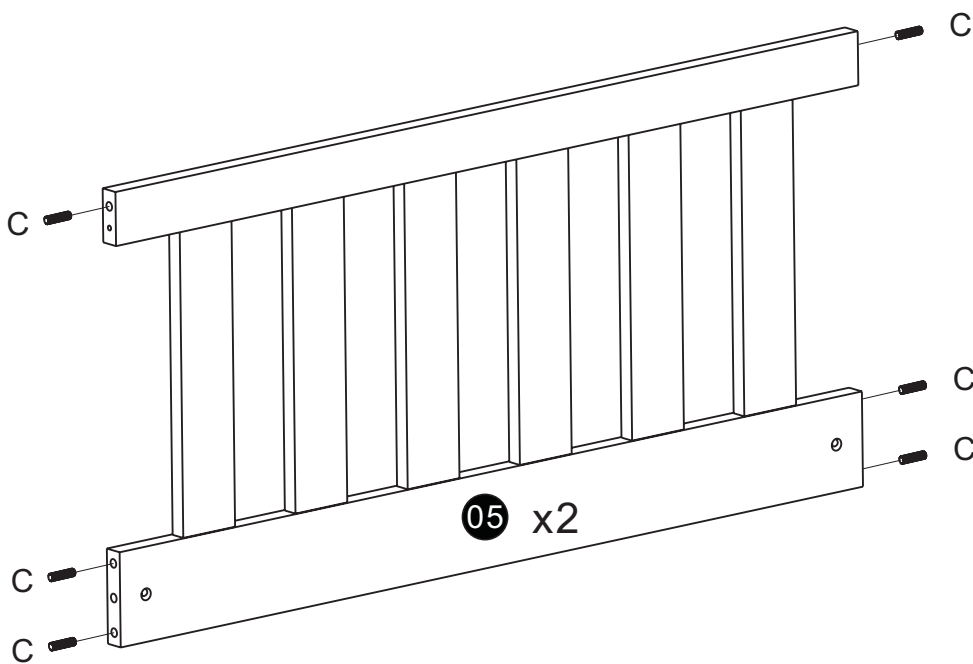


03

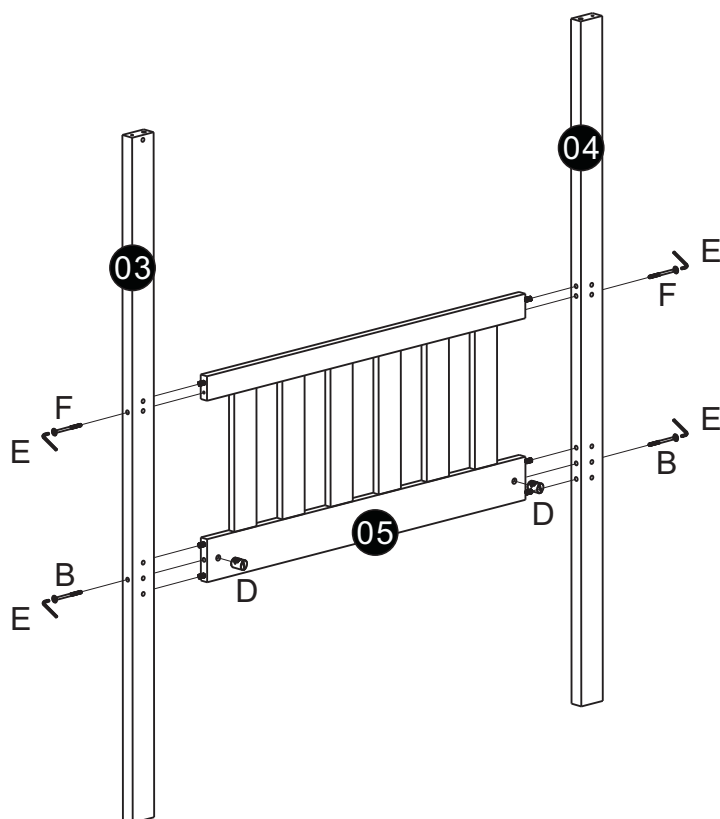

B x2  M6 x100mm	D x2 
F x2  Ø6 x100mm	E x1 

04

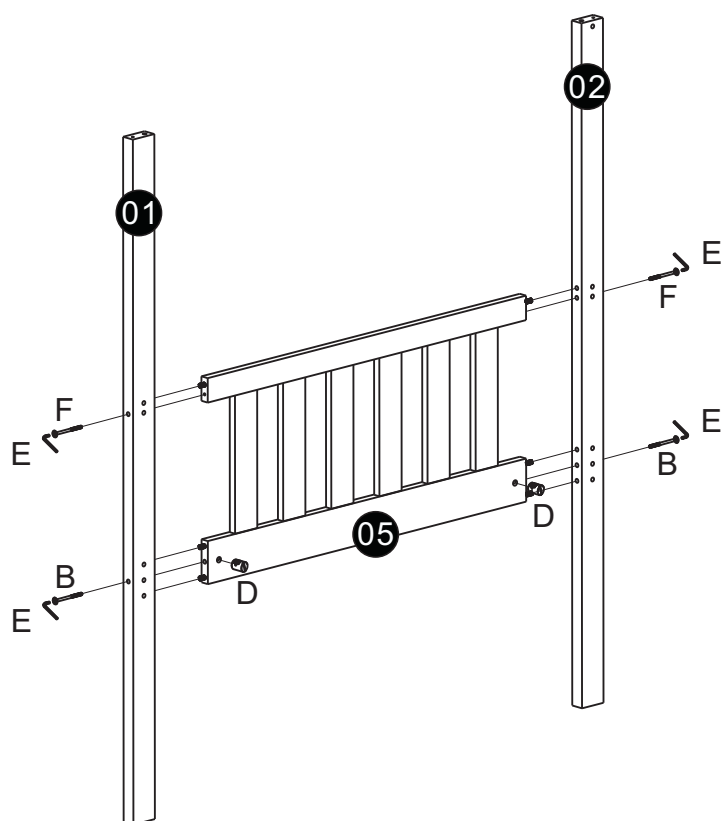


B x2  M6 x100mm	D x2 
F x2  Ø6 x100mm	E x1 

05

C x2




Ø8 x30mm

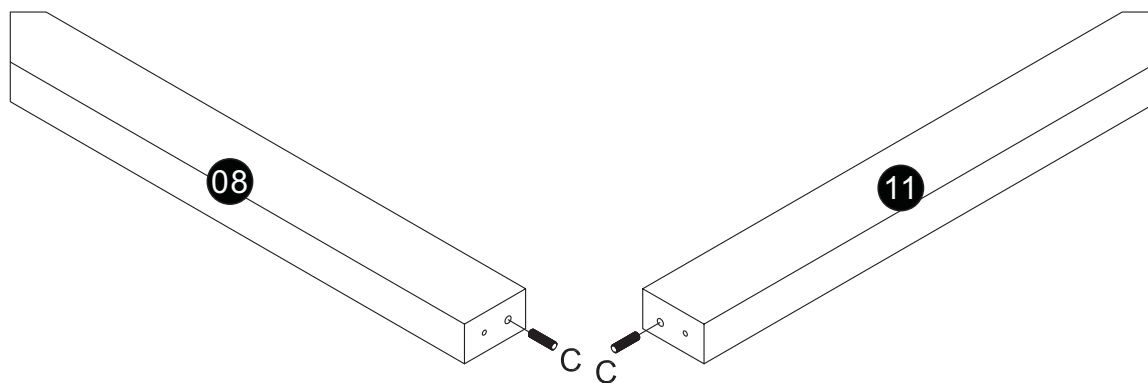


06

F x2




Ø6 x100mm

E x1

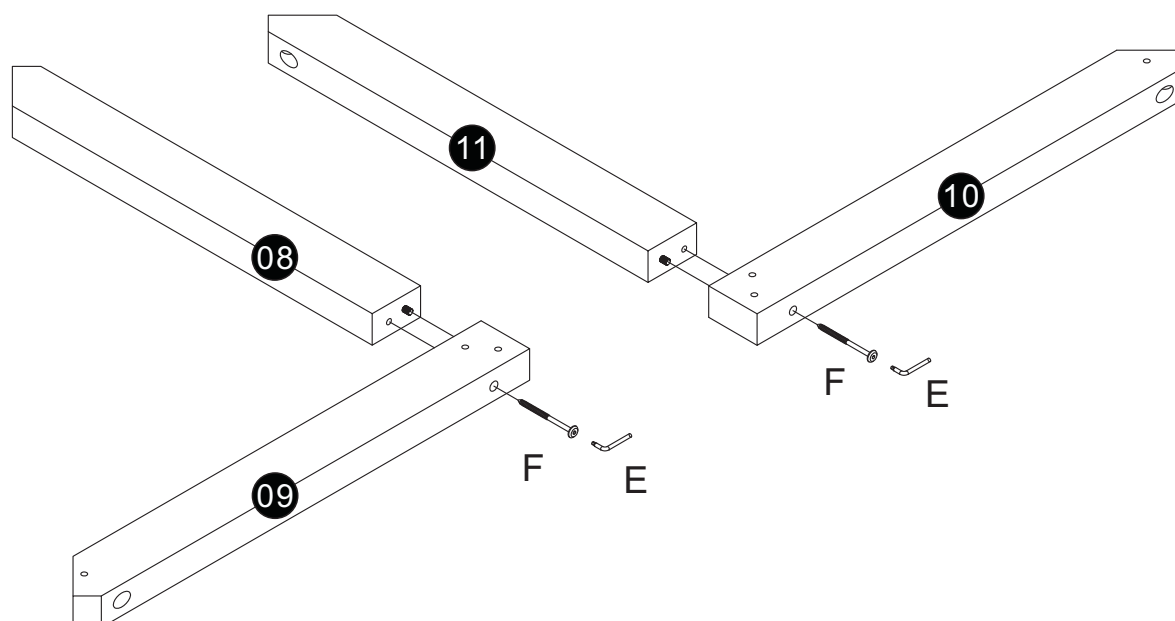


07

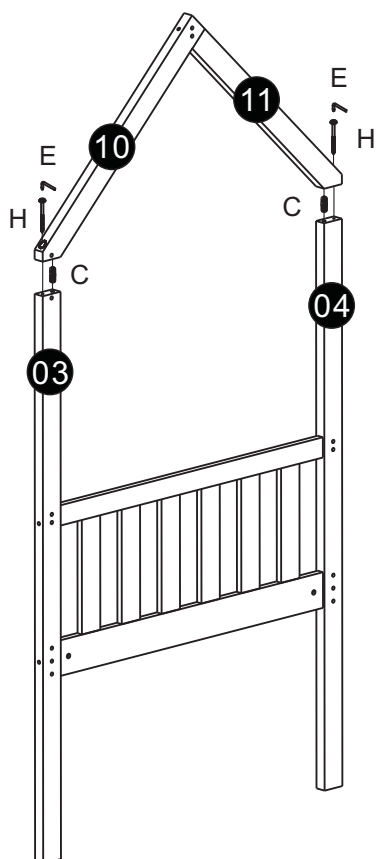


H x2  Ø6x70mm	E x1 
	C x2  Ø8 x30mm


08

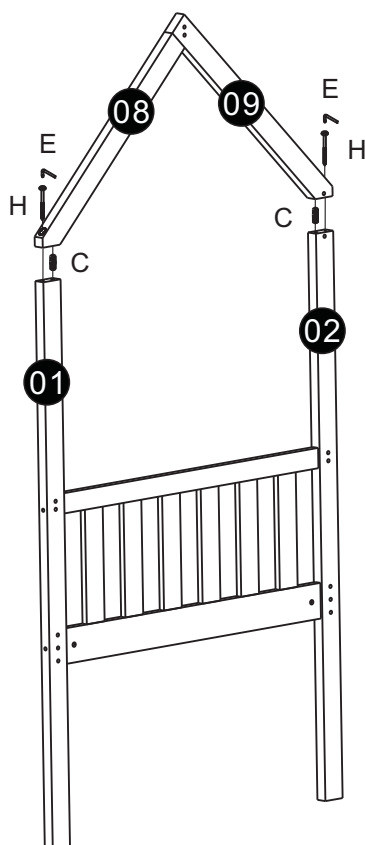



H x2  Ø6x70mm	E x1 
	C x2  Ø8 x30mm


09

D x8 	E x1 	G x8  M6x70mm	H x8  Ø6x70mm
---	--	--	--

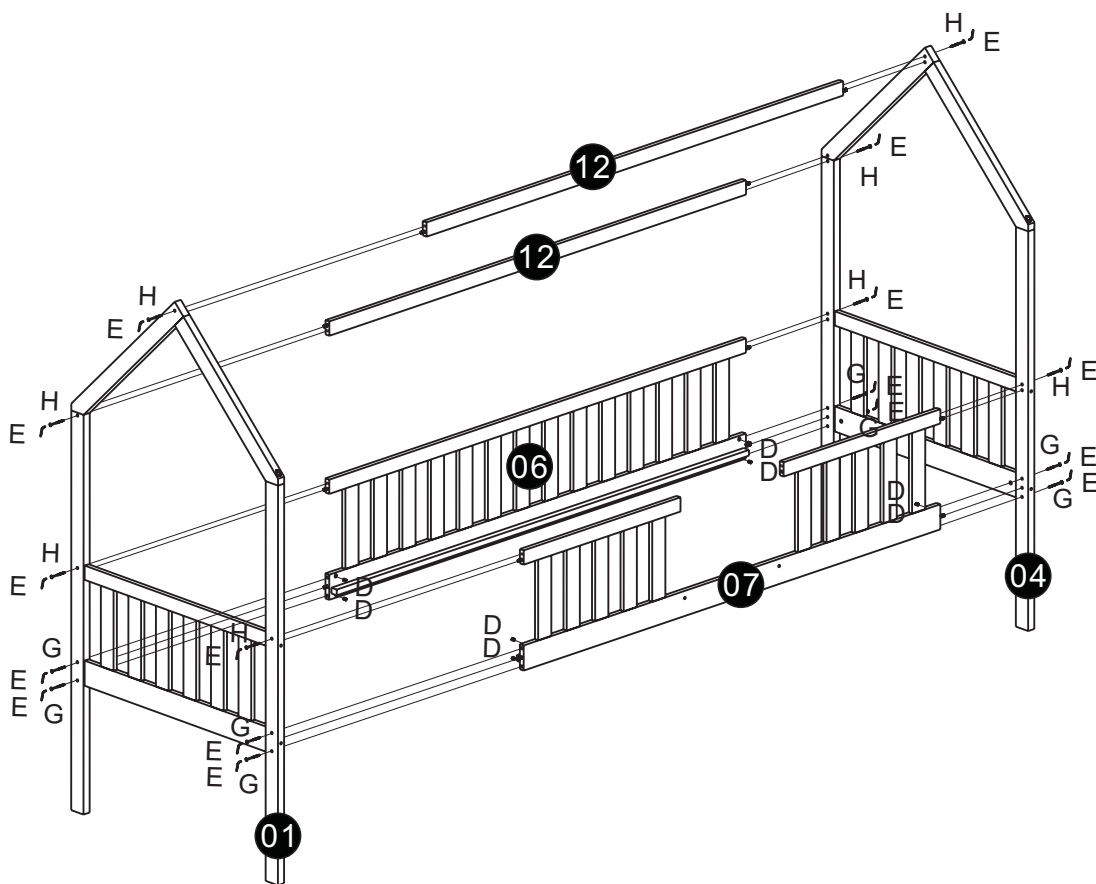


10

C x2  Ø8 x30mm	I x2  Ø6x80mm
---	--

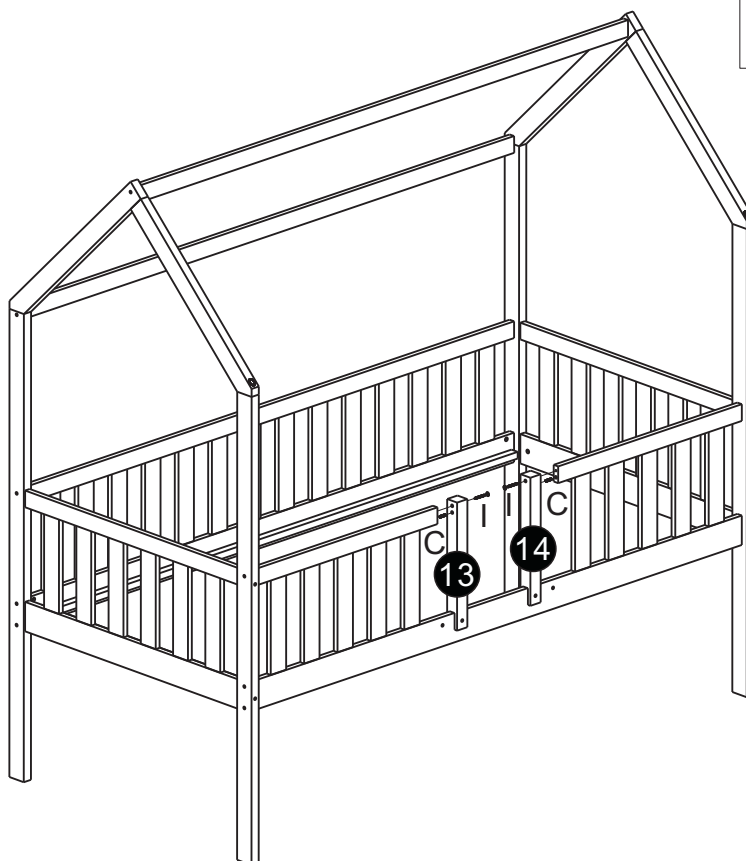

11


M x2	L x2
	
M6x30mm	

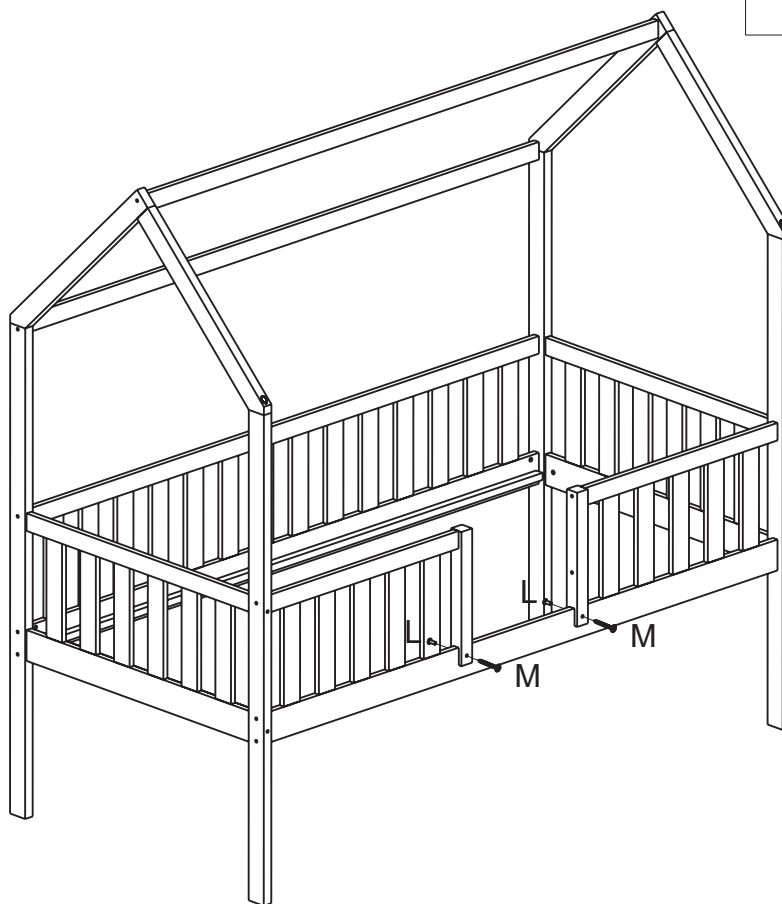

12

N x8

Ø7x60mm

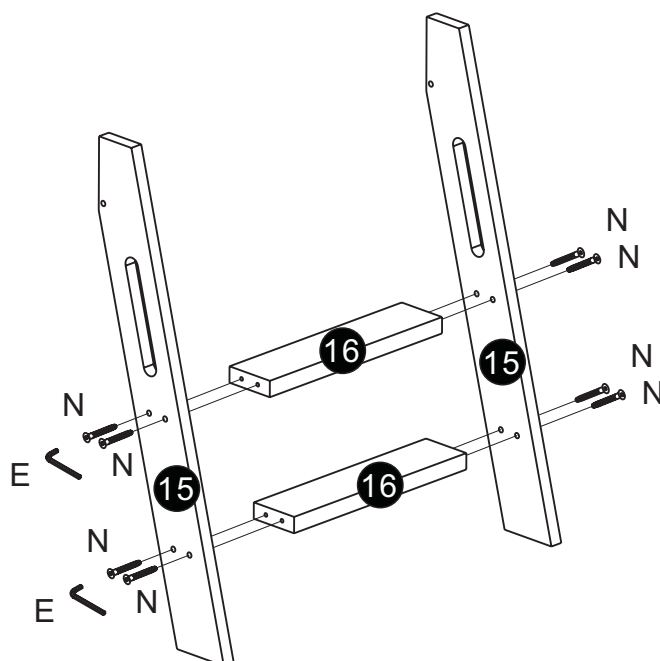


13

K x2



M6x40mm

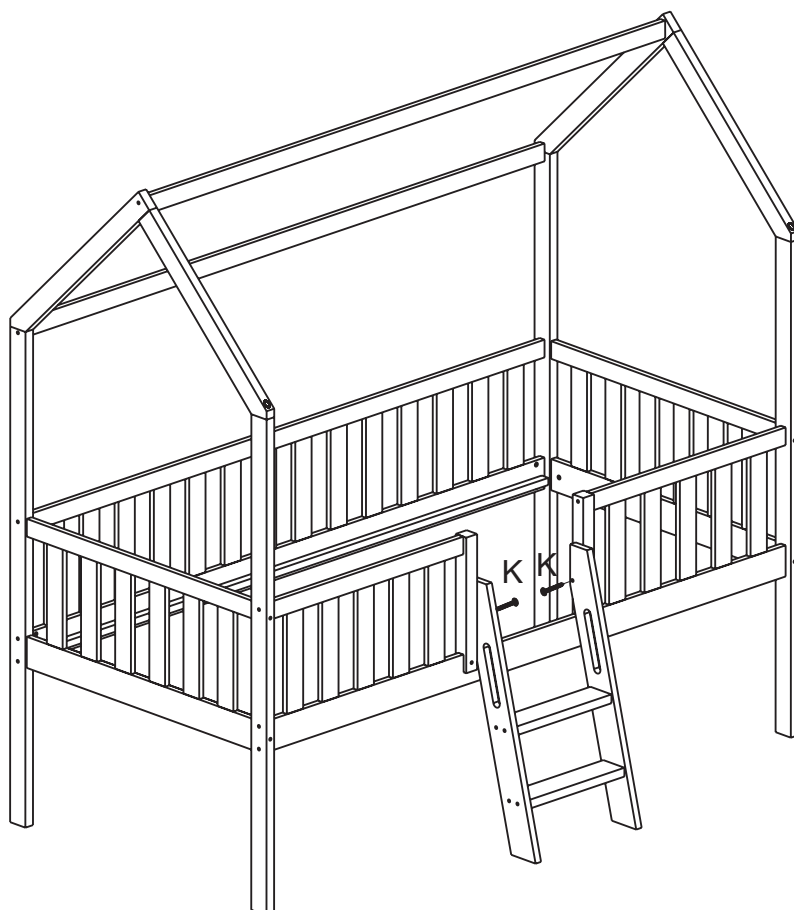

14

A x30



Ø4 x30mm



NO HANGING

