




TRUNDLE ASSEMBLY INSTRUCTION


NO.	DRAWING	DESCRIPTION	QTY.	NO.	DRAWING	DESCRIPTION	QTY.
A		ALLEN BOLT	8	B		NUT	8
C		ALLEN WRENCH	1	D		NAil=35mm	24
E		CASTOR	4	F		NAil=16mm	8
G		ALLEN BOLT	8	M			
				H			12

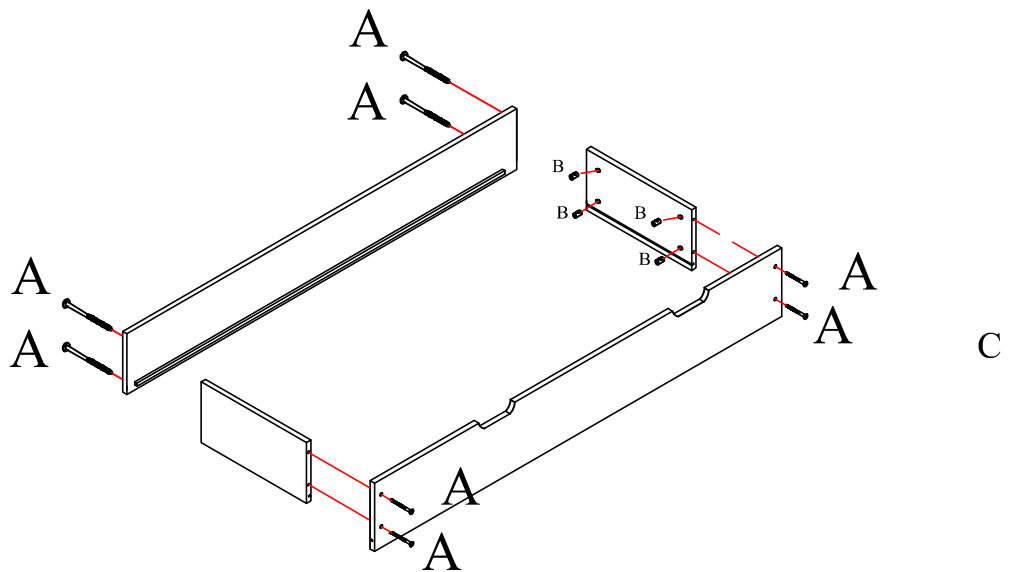

step 1

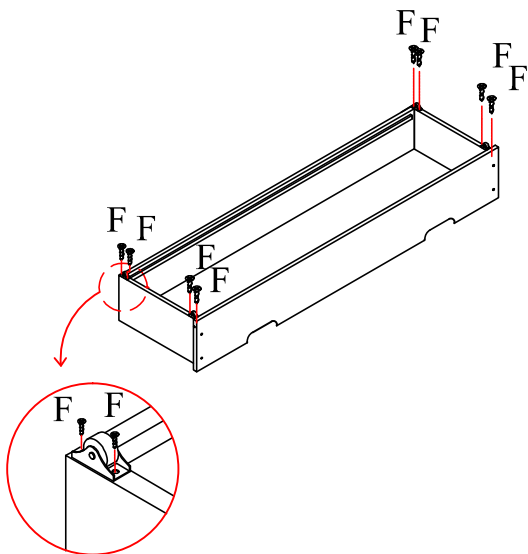



step 2

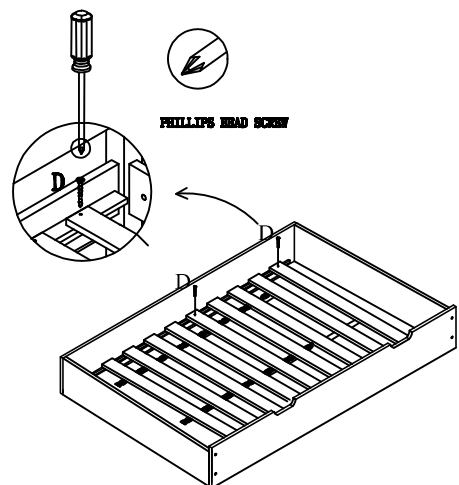


step 3

FRAME BASE ASSEMBLY INSTRUCTION


NO.	DRAWING	DESCRIPTION	QTY.	NO.	DRAWING	DESCRIPTION	QTY.
A		ALLEN BOLT	8	B		NUT	8
C		ALLEN WRENCH	1	D		NAil=35mm	24
E		CASTOR	4	F		NAil=16mm	8
G		ALLEN BOLT	8	M			12

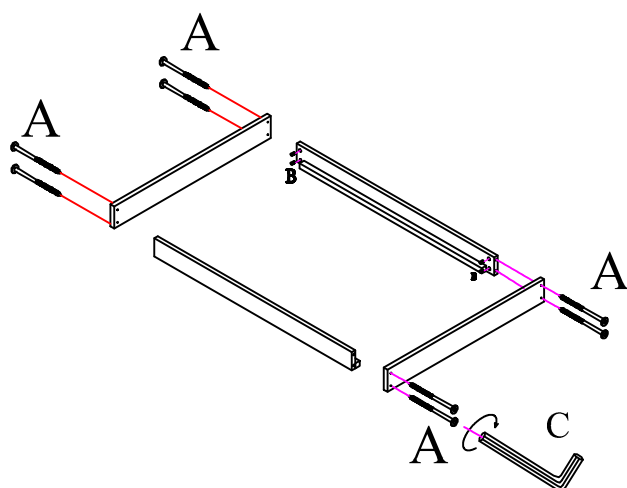

step 1

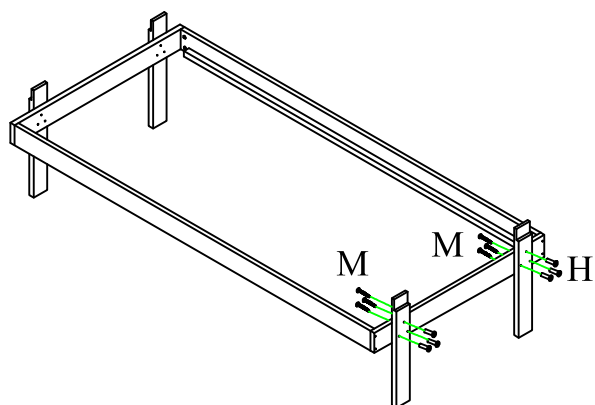



step 2

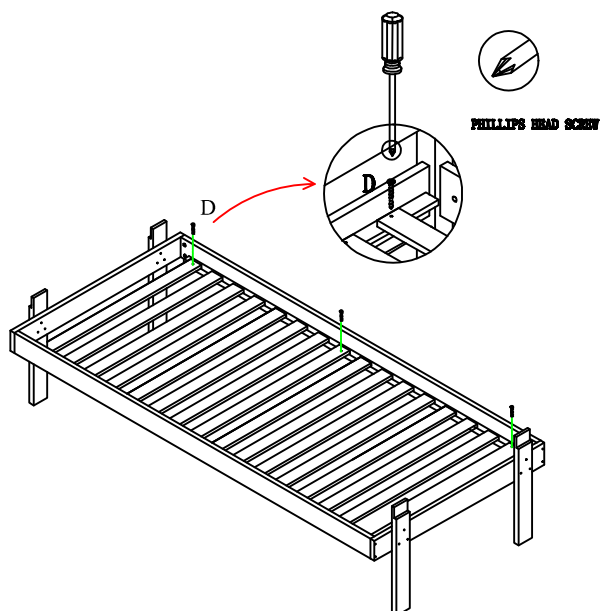


step 3

FRAME SIDES ASSEMBLY INSTRUCTION

NO.	DRAWING	DESCRIPTION	QTY.	NO.	DRAWING	DESCRIPTION	QTY.
A		ALLEN BOLT	8	B		NUT	8
C		ALLEN WRENCH	1	D		NAil=35mm	24
E		CASTOR	4	F		NAil=16mm	8
G		ALLEN BOLT	8	M			
				H			12

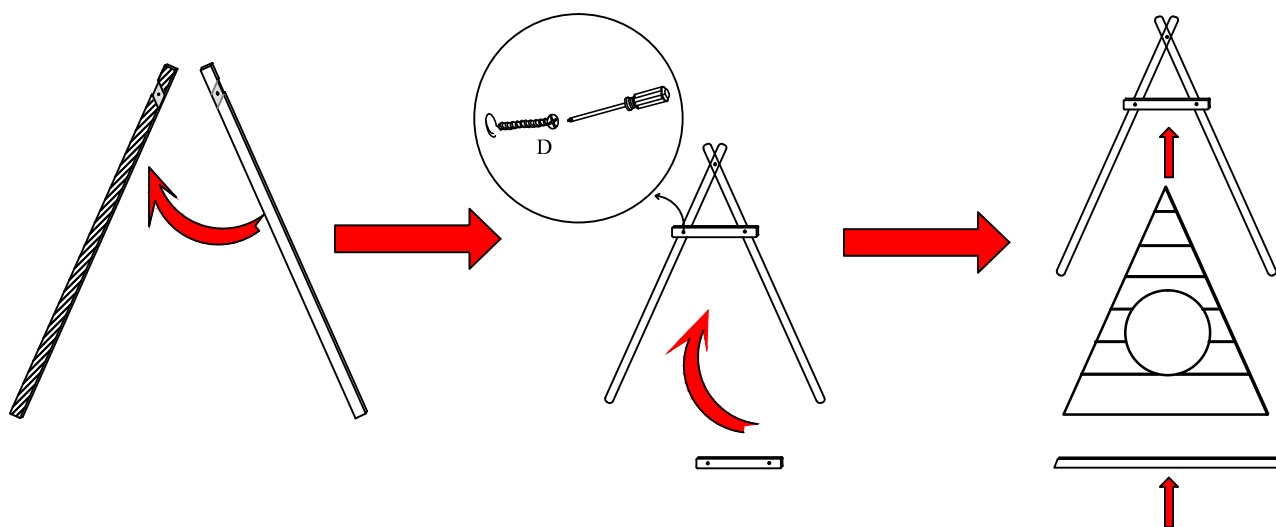

step 1

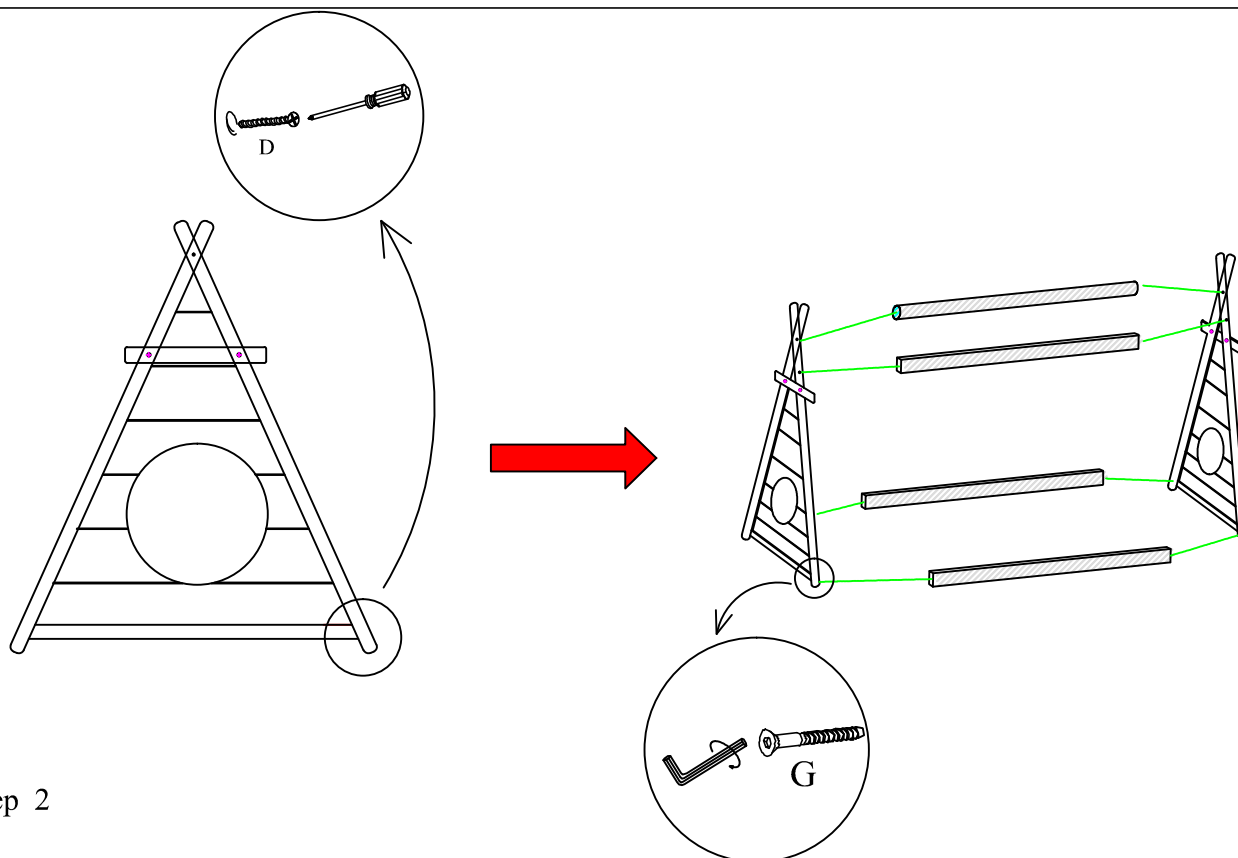


step 2

FINAL STAGE ASSEMBLY INSTRUCTION

NO.	DRAWING	DESCRIPTION	QTY.	NO.	DRAWING	DESCRIPTION	QTY.
A		ALLEN BOLT	8	B		NUT	8
C		ALLEN WRENCH	1	D		NAil=35mm	28
E		CASTOR	4	F		NAil=16mm	8
G		ALLEN BOLT	8	M			
				H			12

step 1

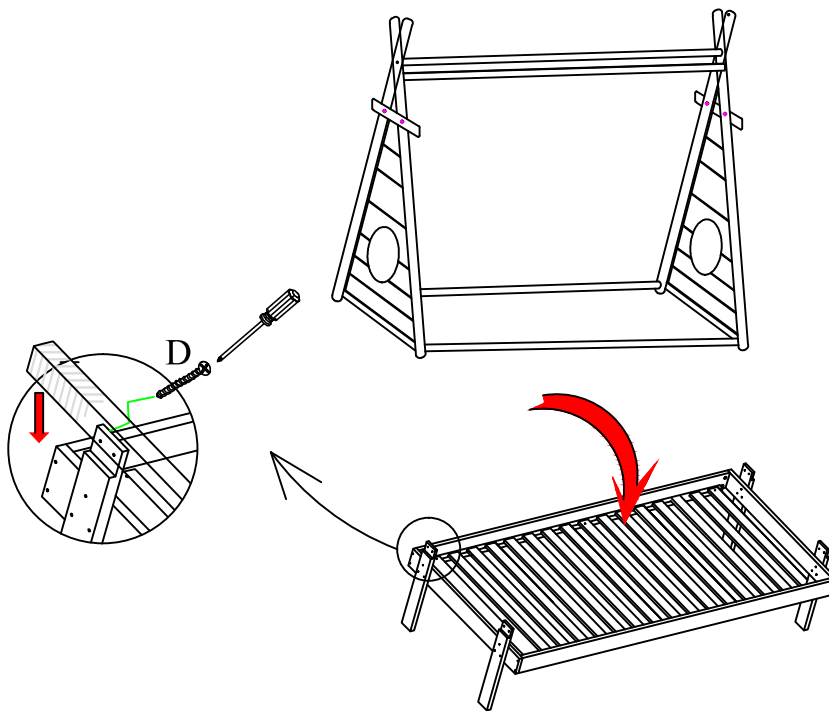

step 2

