

ASSEMBLY INSTRUCTION

DURRANI OTTOMAN BED

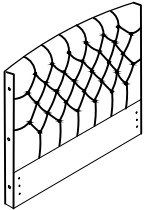
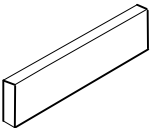
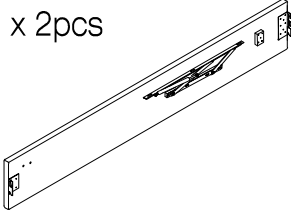
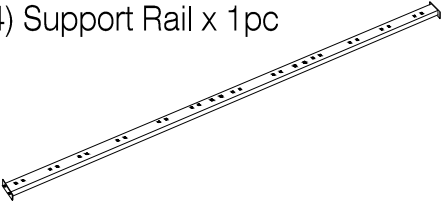
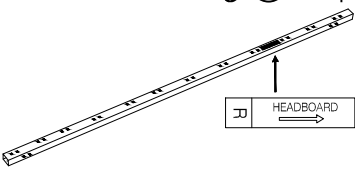
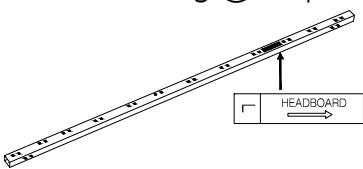
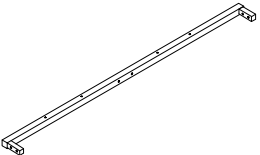
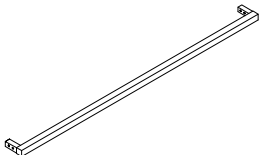

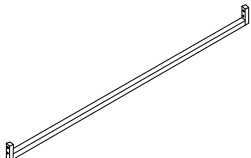
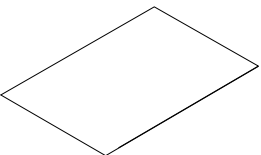


Important

If for any reason you need to return this item, you must return it in its original packaging. Assembled items cannot be returned.




- IMPORTANT NOTE *
- PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE
 - * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO PREVENT SCRATCHES.
 - * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.



Parts


(1) Headboard x 1pc 	(2) Footboard x 1pc 	(3) Side Rail x 2pcs 
(4) Support Rail x 1pc 	(5) Metal Frame Long (R) x 1pc 	(6) Metal Frame Long (L) x 1pc 
(7) Metal Frame Short x 1pcs 	(8) Metal Frame Short x 1pcs 	(9) Support Leg x 1pc 
(10) Headboard Support Wood x 1pc 	(11) Center Support Bar x 1pc 	(12) Footboard Support Wood x 1pc 
(13) Non Woven Fabric x 1pc 	(14) Slats x 28pcs 	(15) Feet x 4pcs 
(16) Headboard's Wing x 2pcs 	(17) Metal Corner Plate x 2pcs 	(18) Mattress x 2pcs 

Fittings

(A) 20x 16mm M8 bolt 	(B) 10x 30mm M8 bolt 	(C) 4x 30mm M6 bolt 	(D) 4x Washer M6 x 13mm 	(E) 22x 50mm M5 screw 
(F) 1x Adjustable Foot 	(G) 1x spanner 	(H) 1x M5 allen key 	(I) 1x M4 allen key 	(J) 28x Single Plastic Cap 
(K) 14x Double Plastic Cap 	(L) 6x 50mm M8 bolt 	(M) 6x 13mm Nut M8 	(N) 6x Washer M8 x 22mm 	(O) 1x Strap 


Step 1

 6x 50mm M5 screw				
---	--	--	--	--

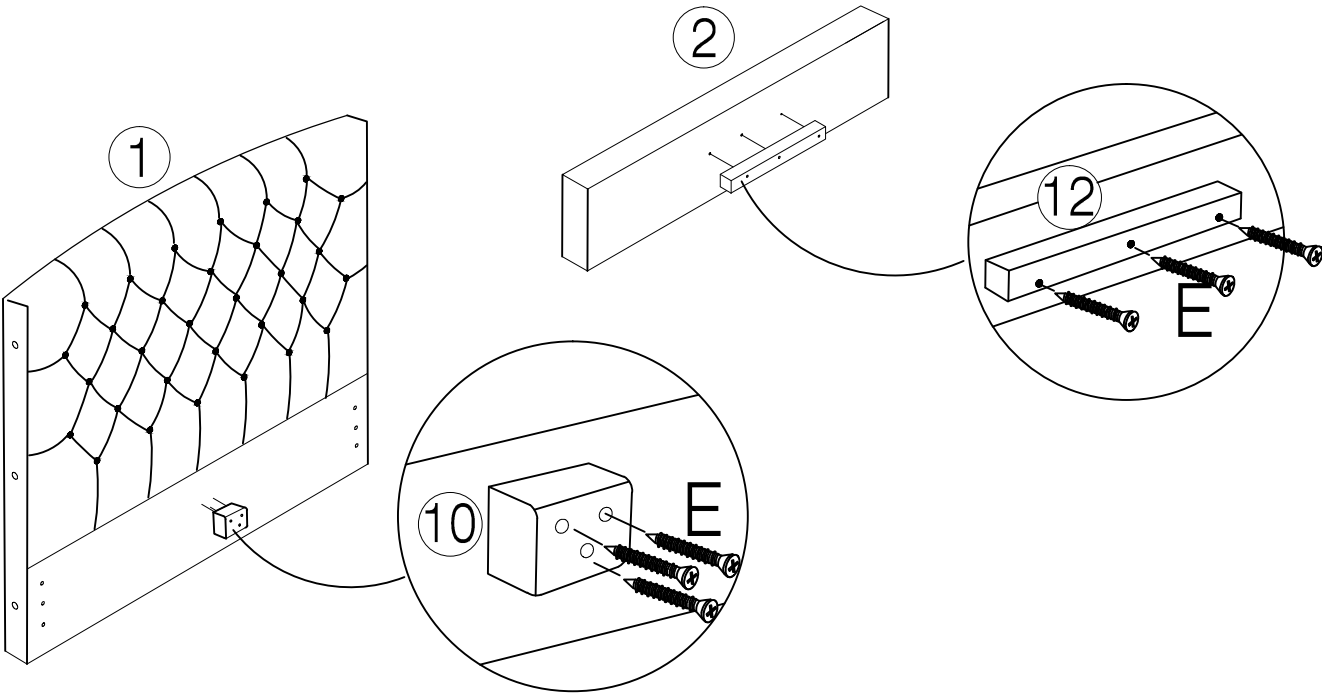


Step 2

 10x 30mm M8 bolt	 1x M5 allen key			
--	---	--	--	--

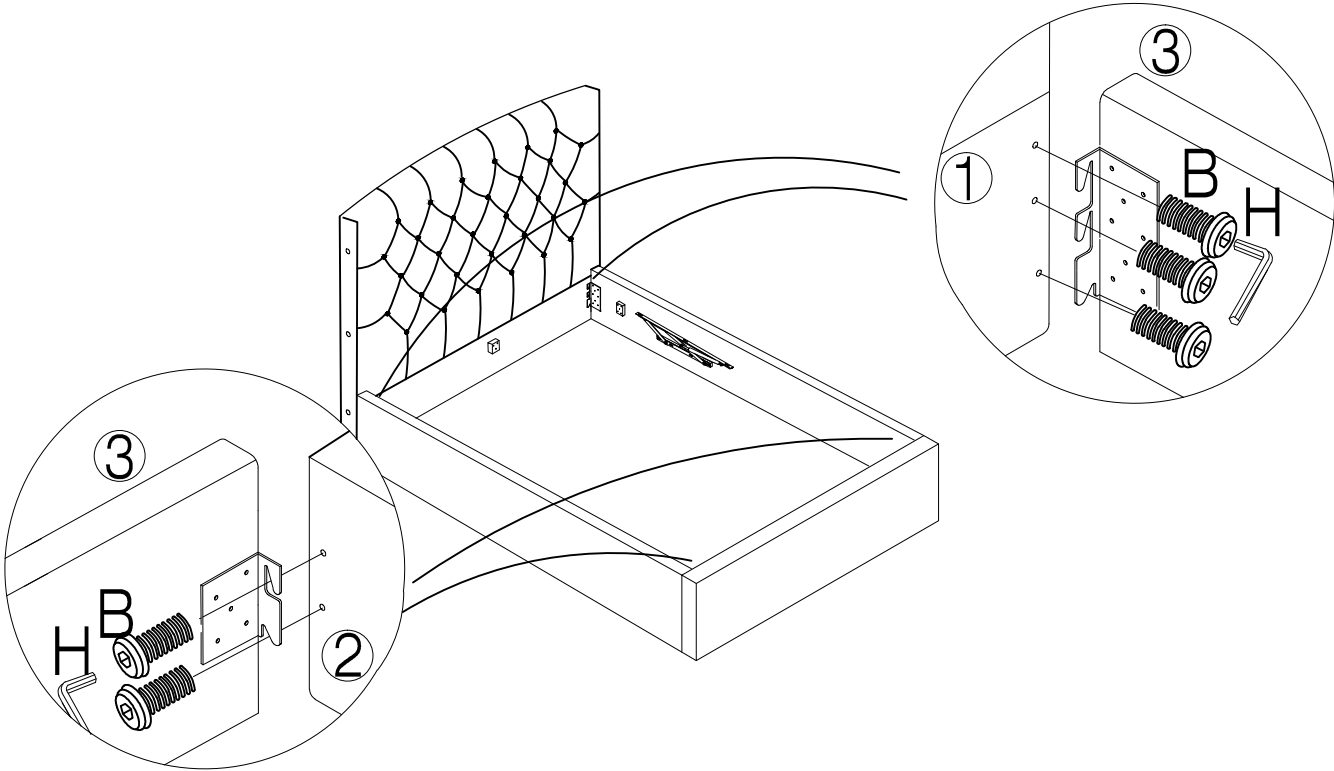


Step 3

 4x 30mm M6 bolt	 4x Washer M6 x 13mm	 1x M4 allen key		
--	--	--	--	--

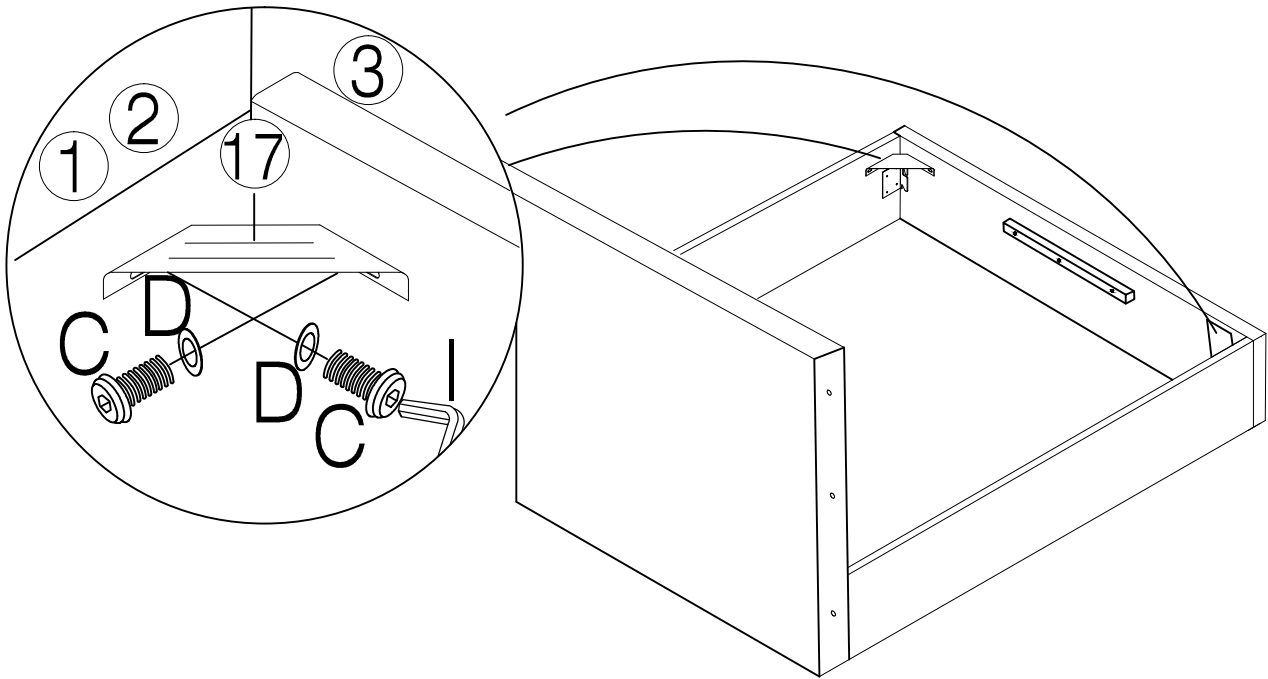


Step 4

 4x 50mm M5 screw				
--	--	--	--	--

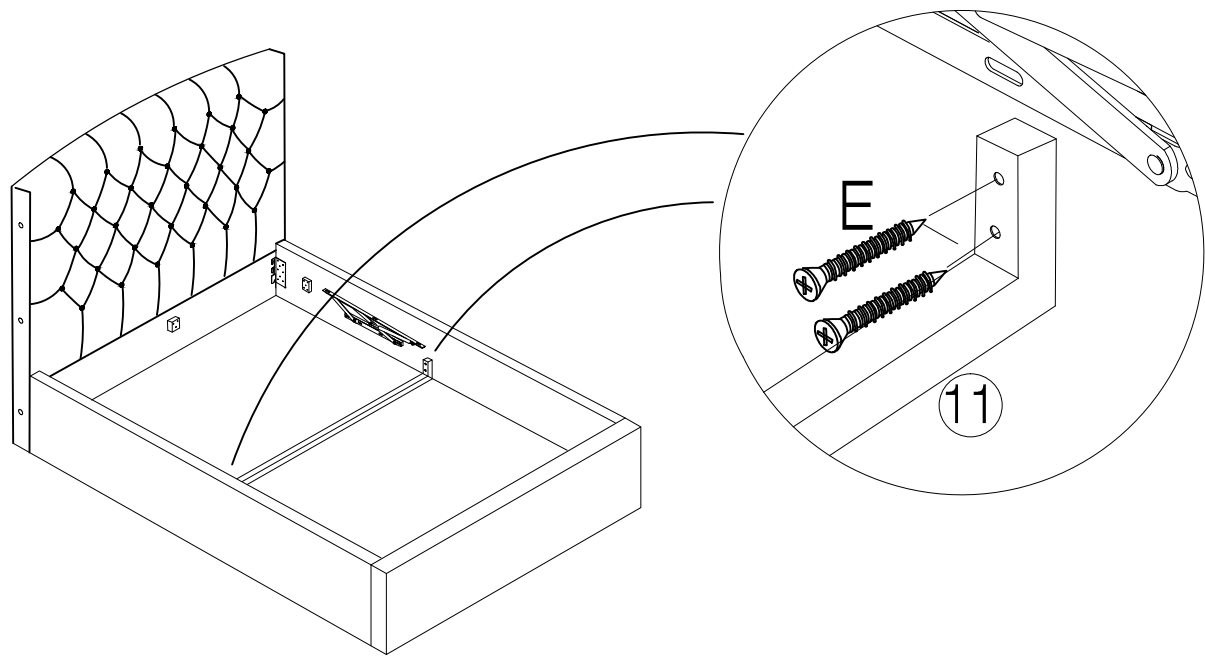


Step 5

 12x 50mm M5 screw				
--	--	--	--	--

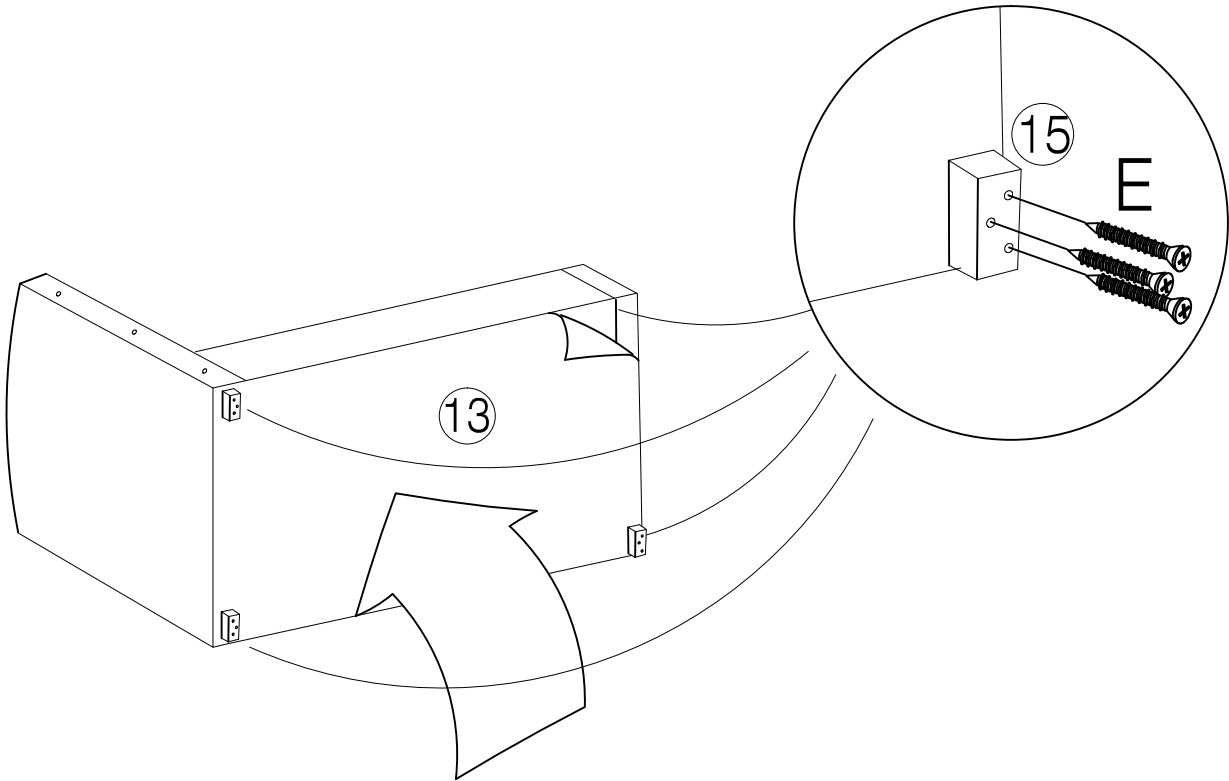



Step 6

 14x 16mm M8 bolt	 1x Adjustable Foot	 1x M5 allen key		
--	--	---	--	--

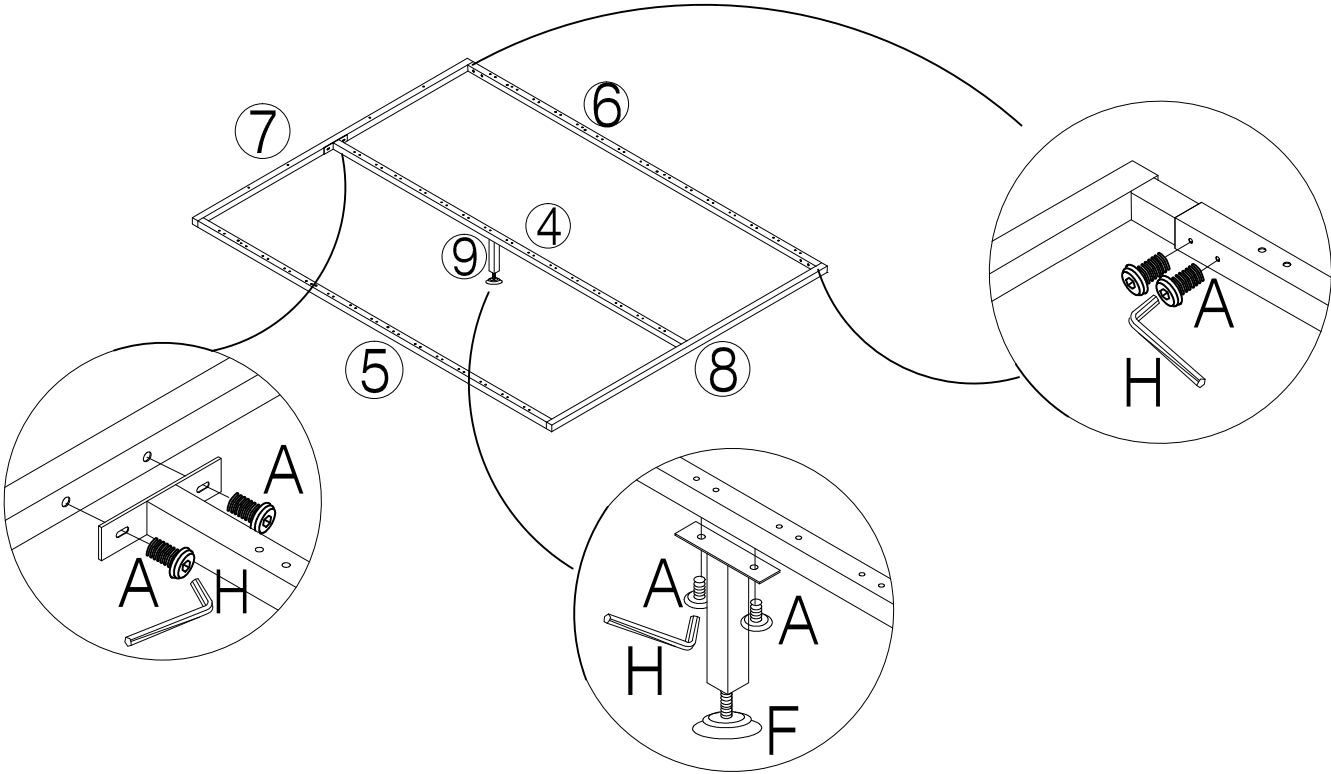



Step 7

A 6x  16mm M8 bolt	H 1x  M5 allen key			
--	--	--	--	--

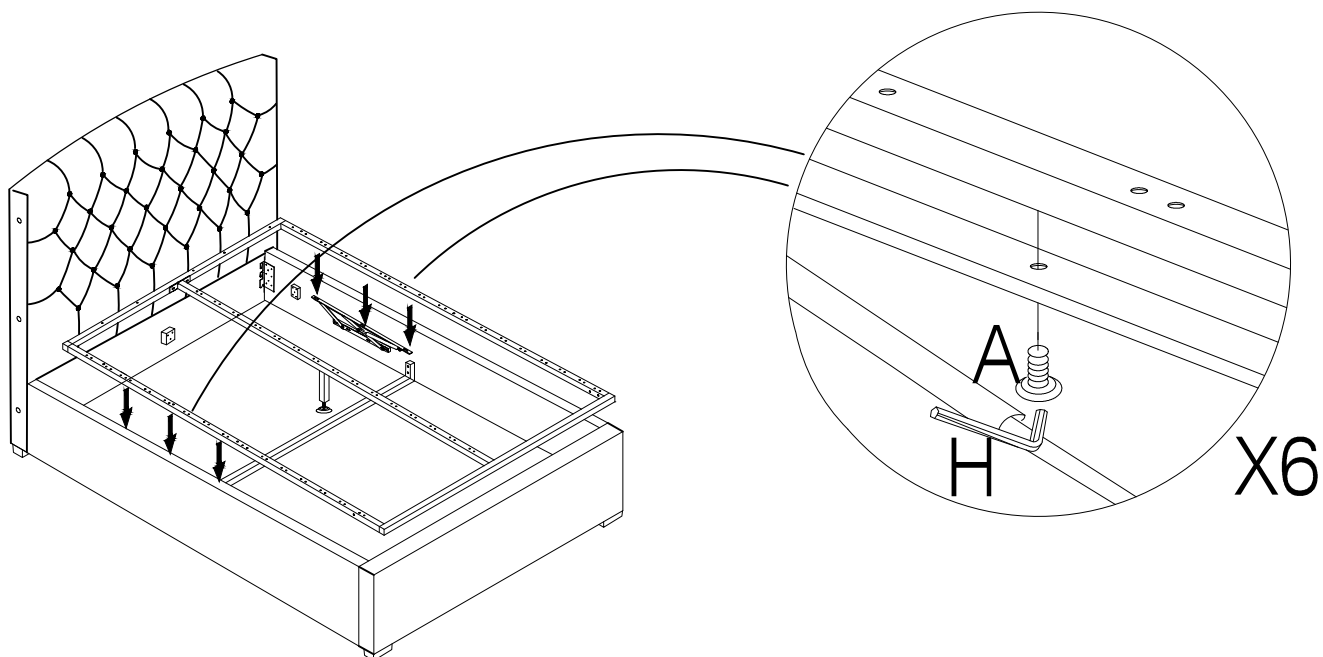


Step 8

G 1x  spanner	O 1x  Strap			
--	--	--	--	--

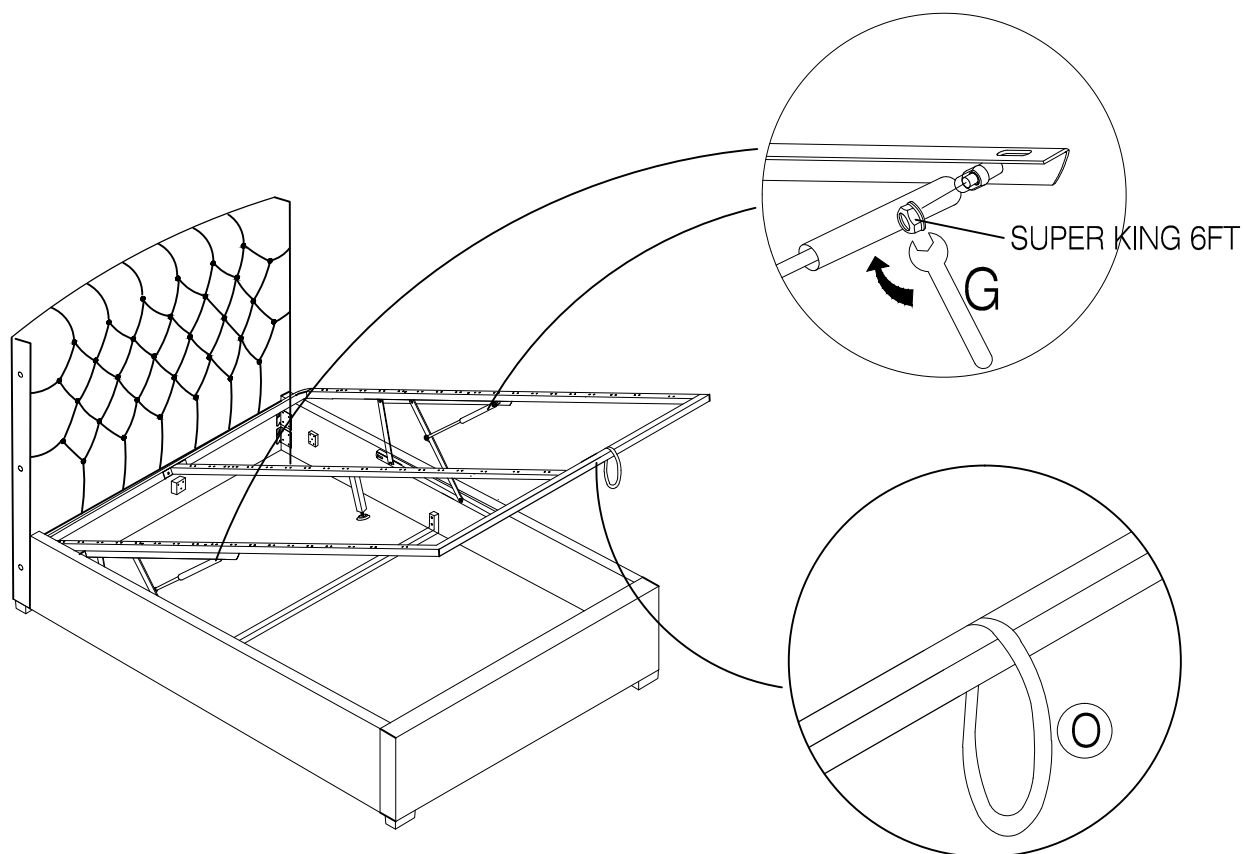


Step 9

 28x Single Plastic Cap	 14x Double Plastic Cap			
---	---	--	--	--

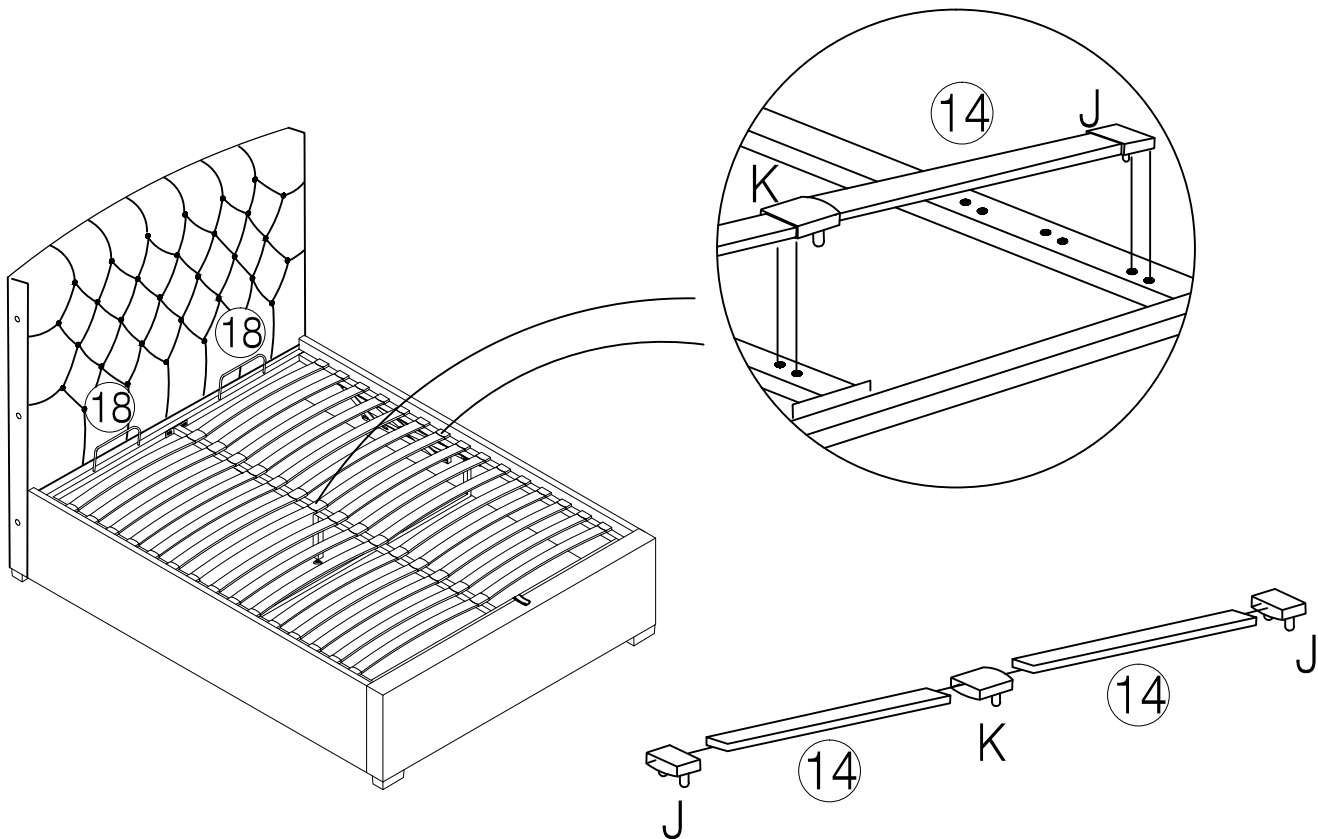


Step 10

 4x 50mm M8 bolt				
---	--	--	--	--

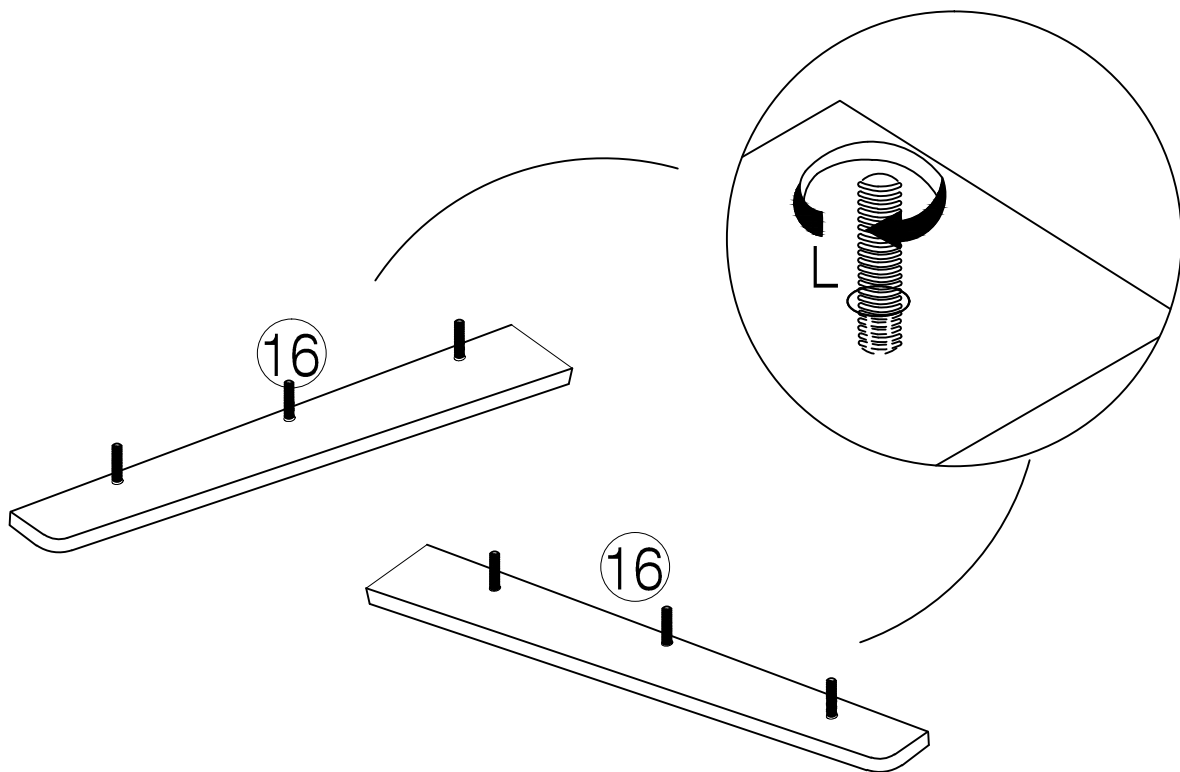

Step 11

 4x 13mm Nut M8	 4x Washer M8 x 22mm			
---	---	--	--	--

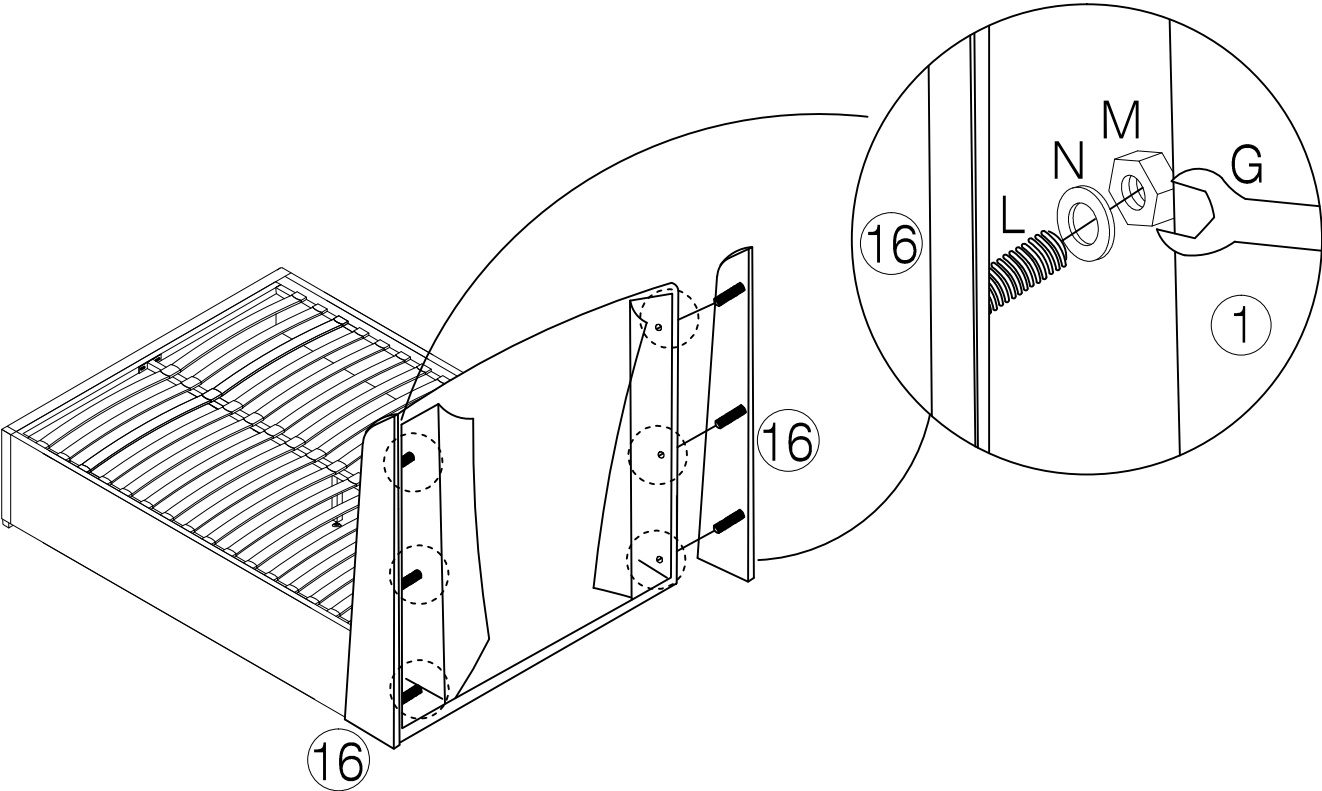

Step 12

--	--	--	--	--

