

ASSEMBLY INSTRUCTIONS

1
15

MODEL : CK 6216
PRODUCT SIZE : 920mm x 1900mm


Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.
Two persons are needed to assemble this product.



* Approximately 1 Hours



* 2 People Required

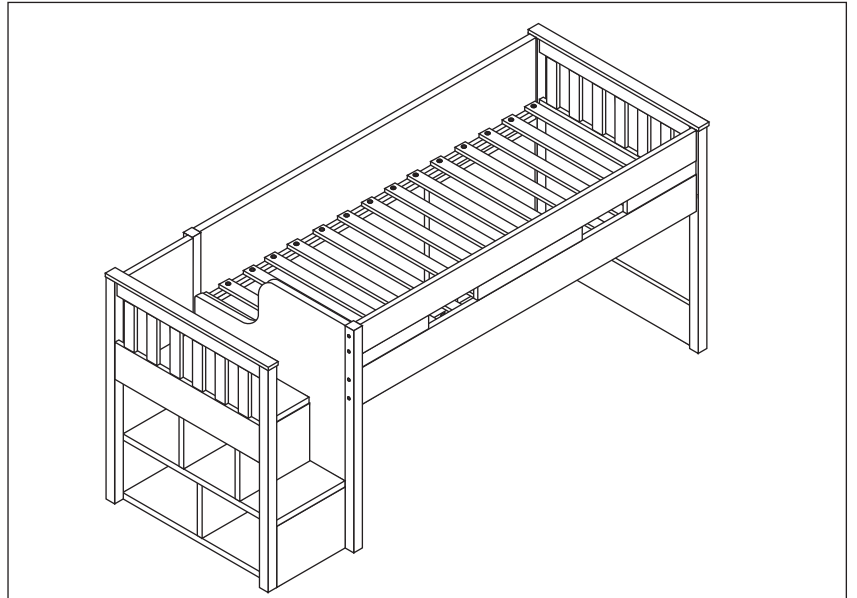

IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE


- A) WARNING "High beds and the upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls";
- B) WARNING "Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited ropes, strings, cords, hooks, belts and bags"
- C) WARNING "Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75 mm or shall be more than 230 mm";
- D) WARNING "Do not use the bunk bed/high bed if any structural part is broken or missing;
- E) always follow the manufacturer's instructions;
- F) the recommended size of the mattress(es); This bunk bed is suitable for a single mattress or foam bed 920mm x 1870mm. Thickness of mattress should not exceed 200mm.
- G) ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed;
- H) all bunk beds and high beds intended to be assembled by other than the manufacturer or his/her representative shall include assembly instructions including a list of the parts supplied and details of any tools required to assemble the bed;
- I) This Bunk Bed Conforms to BS EN 747-1:2012+A1:2015

Tools Required For Assembly



Philips Screw Driver

Tools Not Use

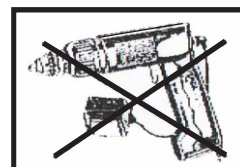

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT. USE OF POWER TOOLS WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



DO NOT USE HAMMER

PARTS LIST

2 / 15


Model: CK 6216

Carton 1 of 4			(51)	RIGHT END PANEL (CENTER UPPER)	1
No.	Part Name	Pcs	(55)	LEFT PANEL (CENTER UPPER)	1
(34)	BOTTOM PANEL (LADDER)	1	(60)	LVL BASE	15
(35)	CENTER PANEL (LADDER)	1		Carton 3 of 4	
(36)	FRONT PANEL LADDER	1	(45)	BACK SIDE PANEL	1
(37)	1 ST LADDER STEP	1	(46)	FRONT SIDE PANEL	1
(38)	SUPPORT PANEL (FRONT LADDER)	2	(59)	SIDE RAIL	2
(39)	END LADDER STEP	1			
(40)	BACK PANEL (LADDER)	1			
(41)	LEFT END PANEL (BACK)	1			
(44)	LEFT END PANEL (FRONT)	1			
(52)	RIGHT END PANEL (BACK)	1			
(53)	RIGHT END PANEL (FRONT)	1			
(54)	RIGHT END PANEL (TOP)	1			
(56)	LADDER SIDE BACK	1			
(57)	LADDER SIDE FRONT	1			
(58)	LEFT PANEL TOP	1			
	FITTING LIST				
	Carton 2 of 4				
(42)	LEFT END PANEL (CENTER)	1			
(50)	RIGHT END PANEL (CENTER LOWER)	1			

PARTS LIST

3
15

Model: CK 6216

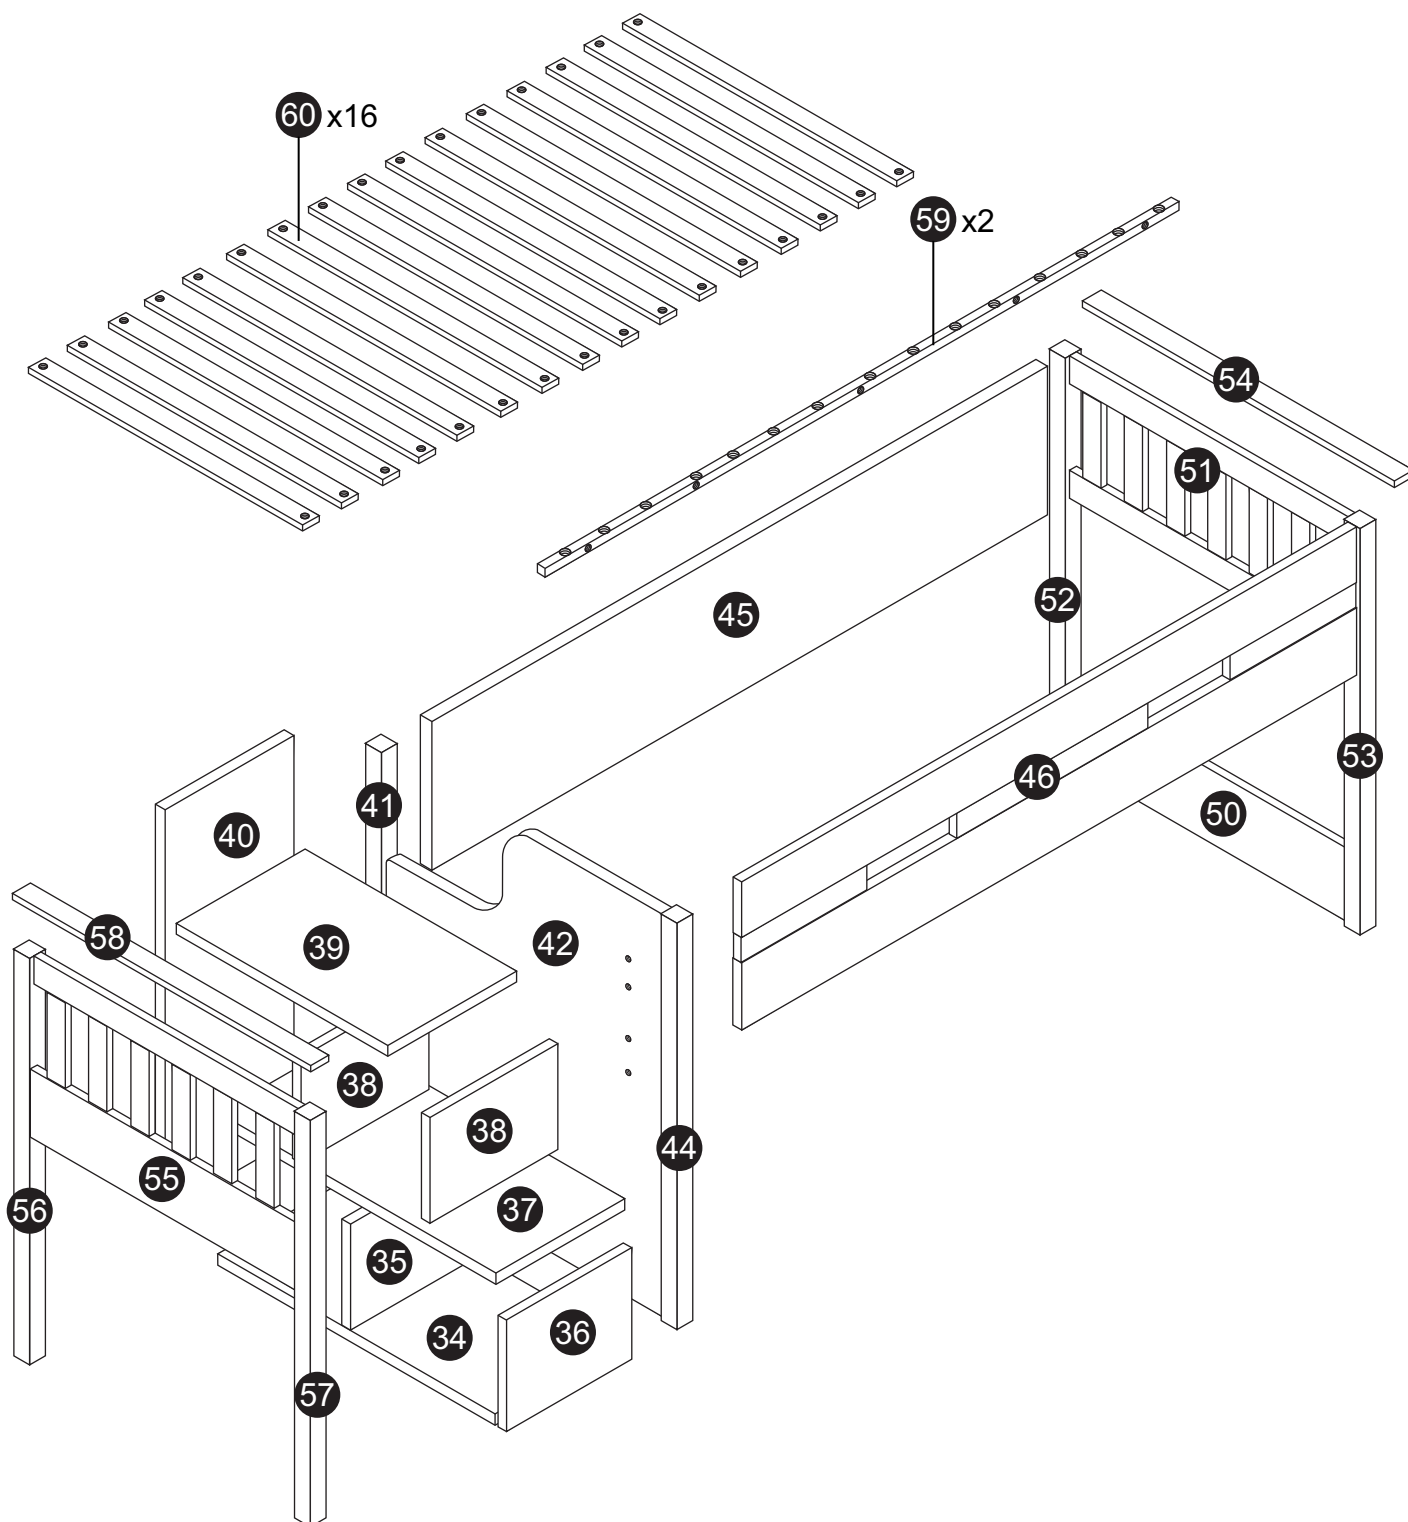














FITTING LIST

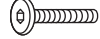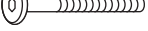4
15

Model: CK 6216

Fitting List

No.	Part Name	Pcs
(A)	Cam 	47
(B)	Cam Stud (5137) 	47
(C)	M8 x 25mm Wood Dowel 	71
(E)	45mm Chipboard Screw 	10
(F)	M6 x 30mm Allen Bolt 	32
(G)	M6 x 35mm Allen Bolt 	10
(J)	M6 x 90mm Allen Bolt 	12
(K)	M6 x 13mm Baller 	12
(L)	M6 JCN Nut 	6
(M)	5/8 PVC Feet Nail 	2
(N)	Sticker (Extra 1 pcs) 	19
(P)	M6 Allen Wrench 	2
(Q)	M6 x 50mm Allen Bolt 	1

CAUTION

There are many small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit. As an extra precaution, screw cover caps should be permanently fixed in position. (Where applicable)

USEFUL HINTS & TIPS

Two people will be required to assemble this unit


Please keep this assembly instruction for future reference

GUIDE TO ASSEMBLY


Model: CK 6216

STEP 1



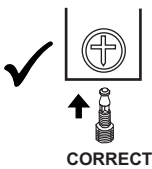


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

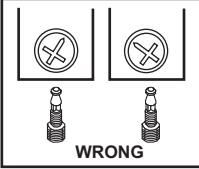


✓
↑
CORRECT



✗
WRONG

 C x 42	 B x 10	 A x 26
	 K x 1	 M x 2

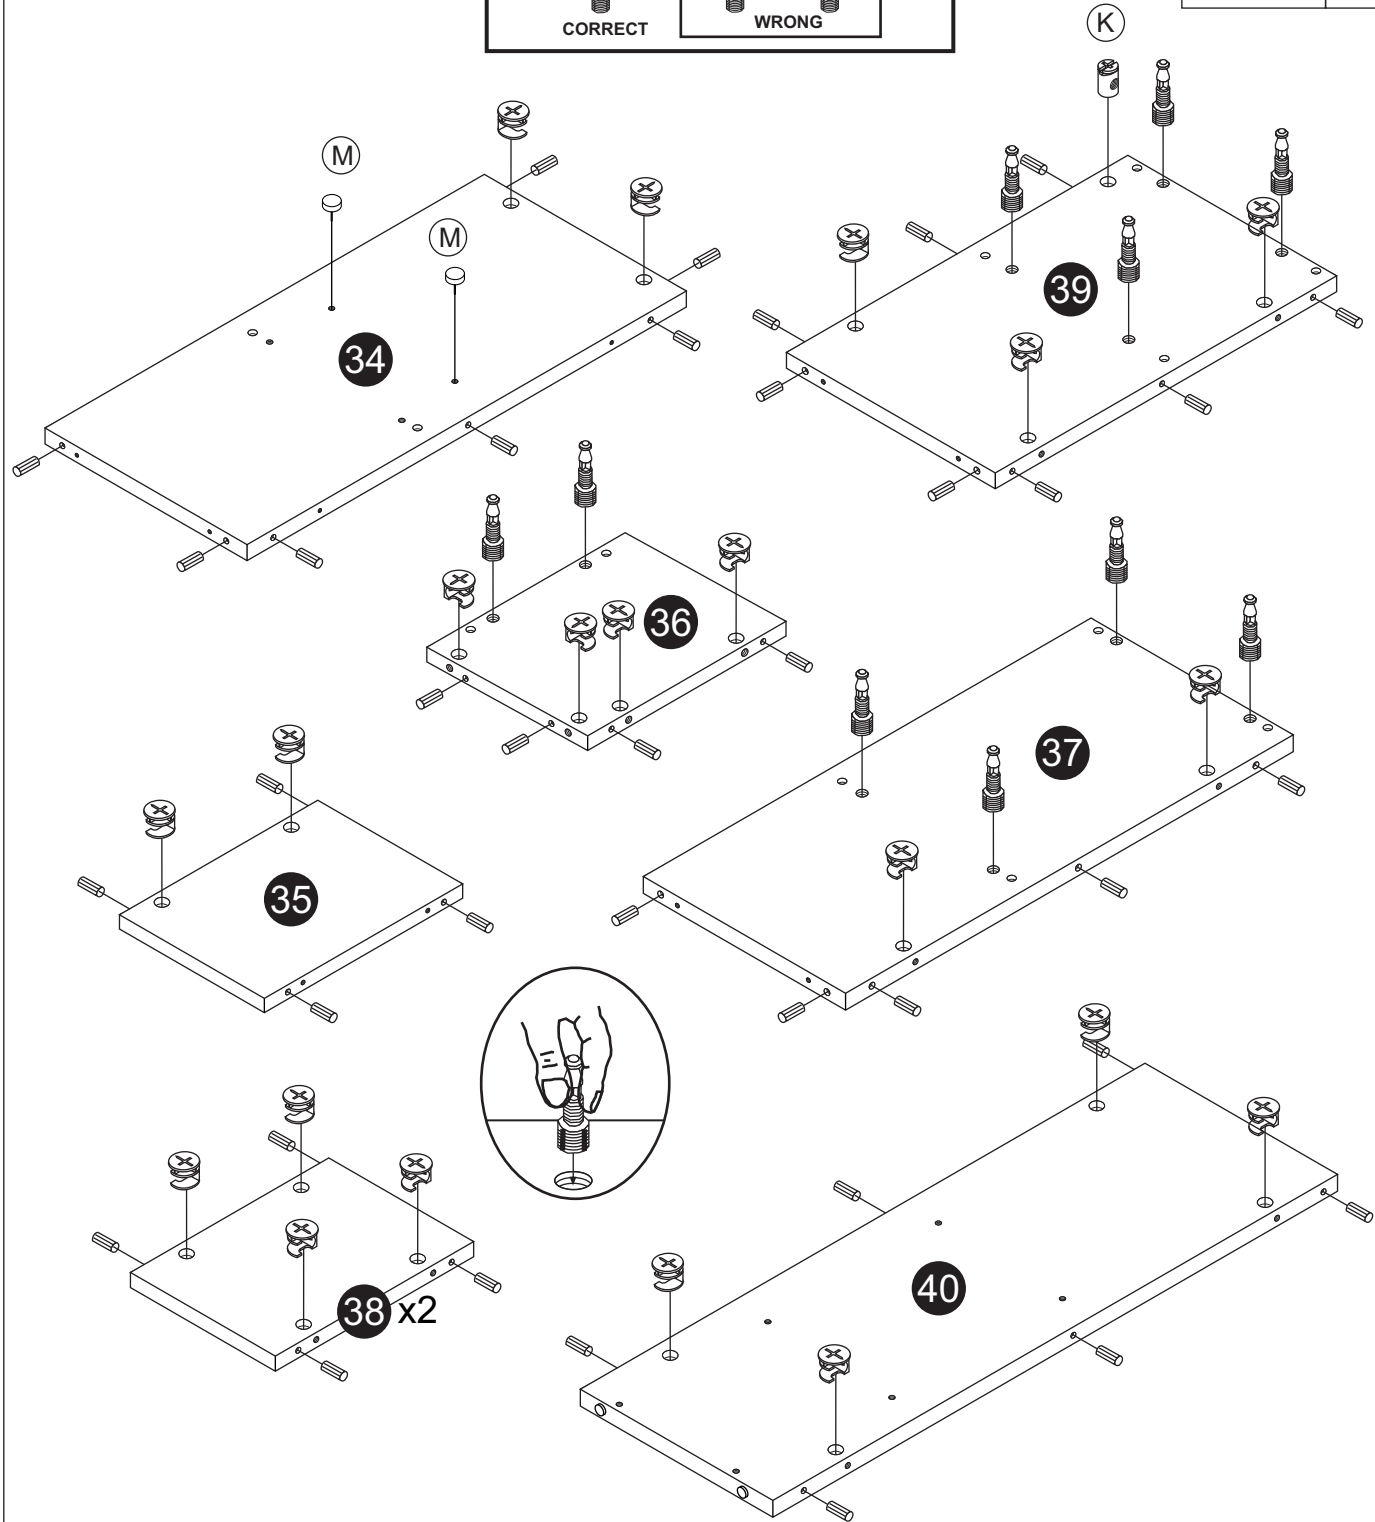


GUIDE TO ASSEMBLY


6
15

Model: CK 6216


STEP 2

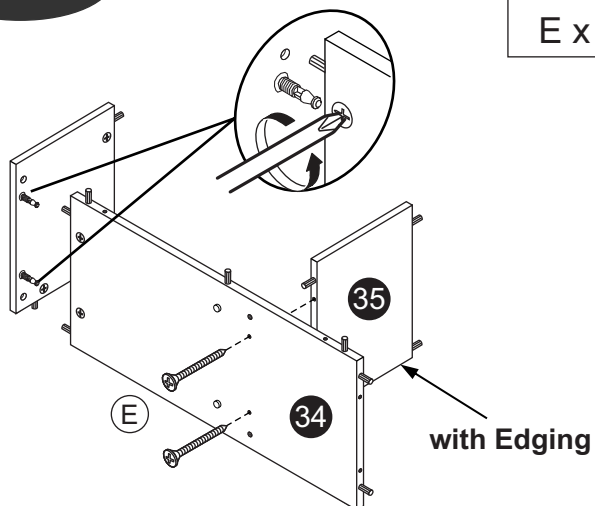


STEP 3

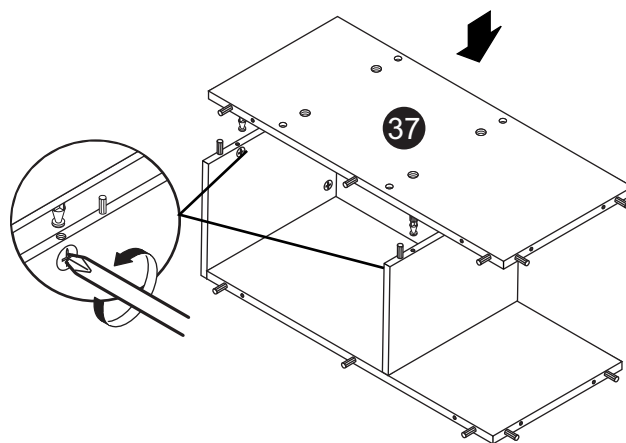


STEP 4

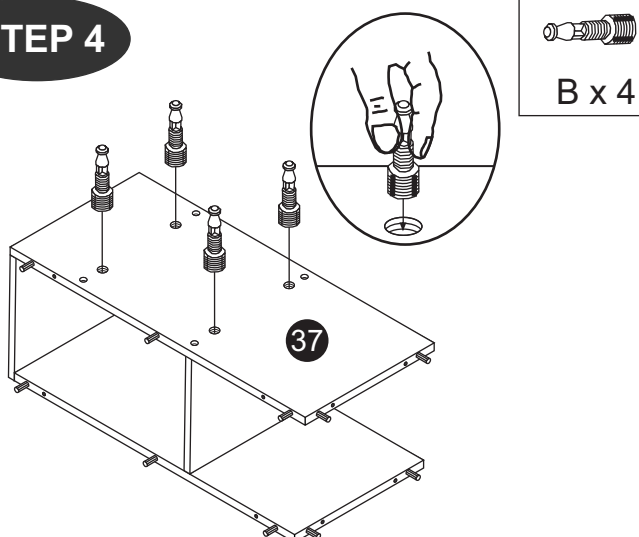


STEP 5

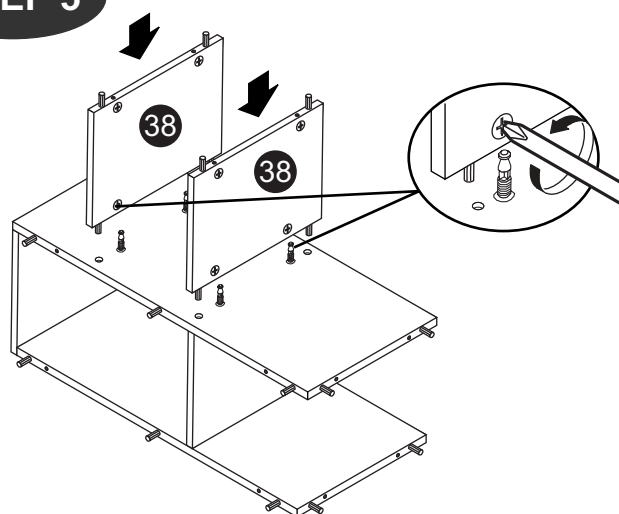

STEP 6

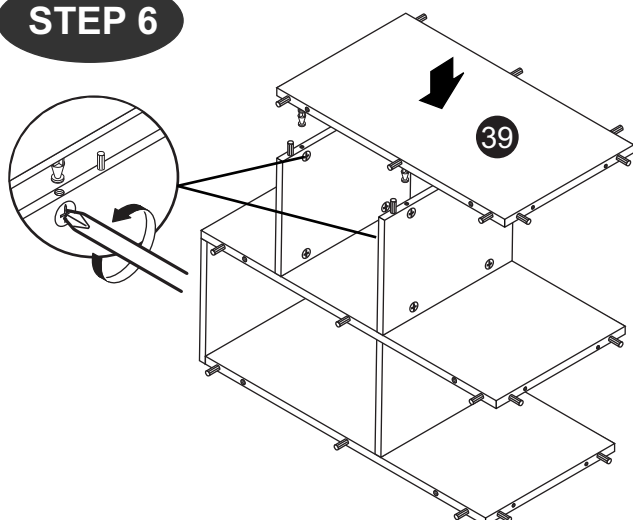


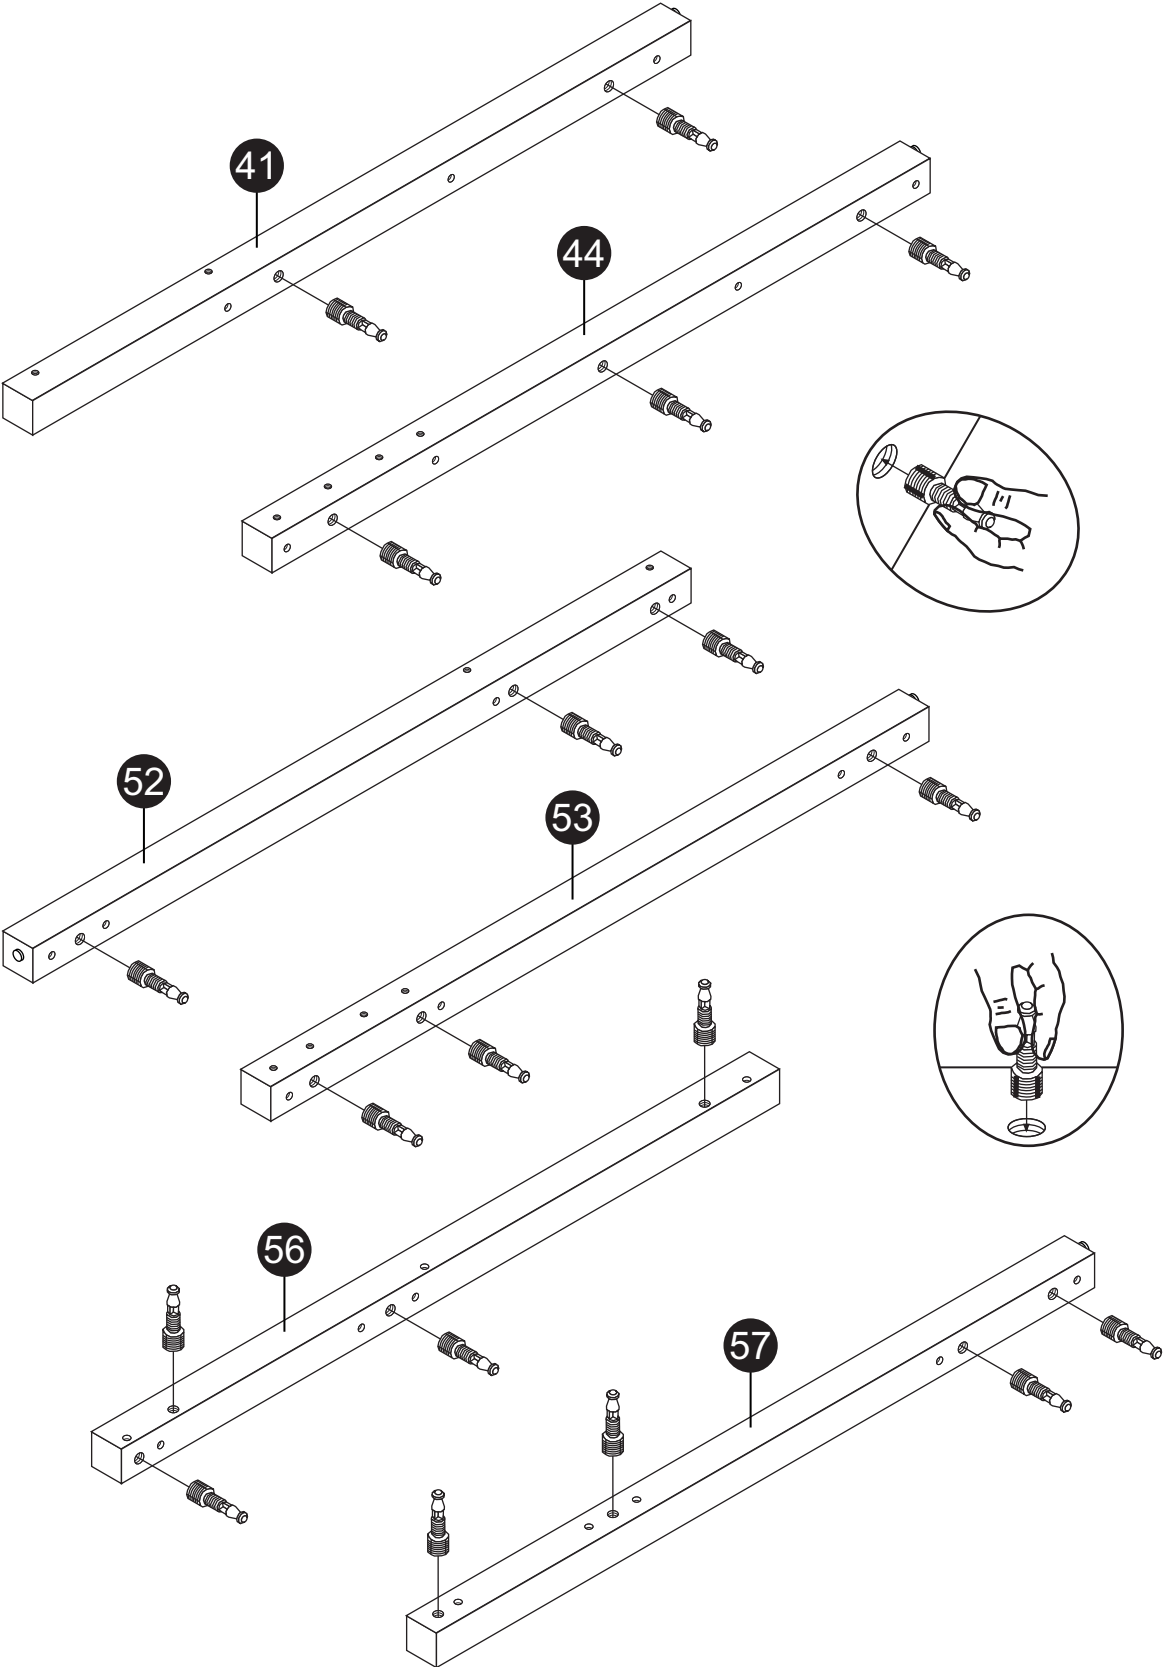
STEP 7

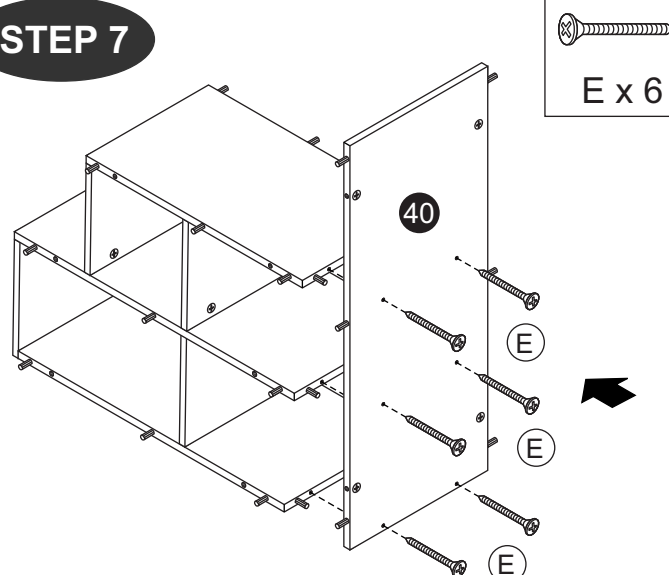

Model: CK 6216

STEP 8


B x 19



GUIDE TO ASSEMBLY

Model: CK 6216

STEP 9

WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

✓

CORRECT




✗


WRONG

✗

WRONG

✗



 A x 19	 B x 2
	 C x 25

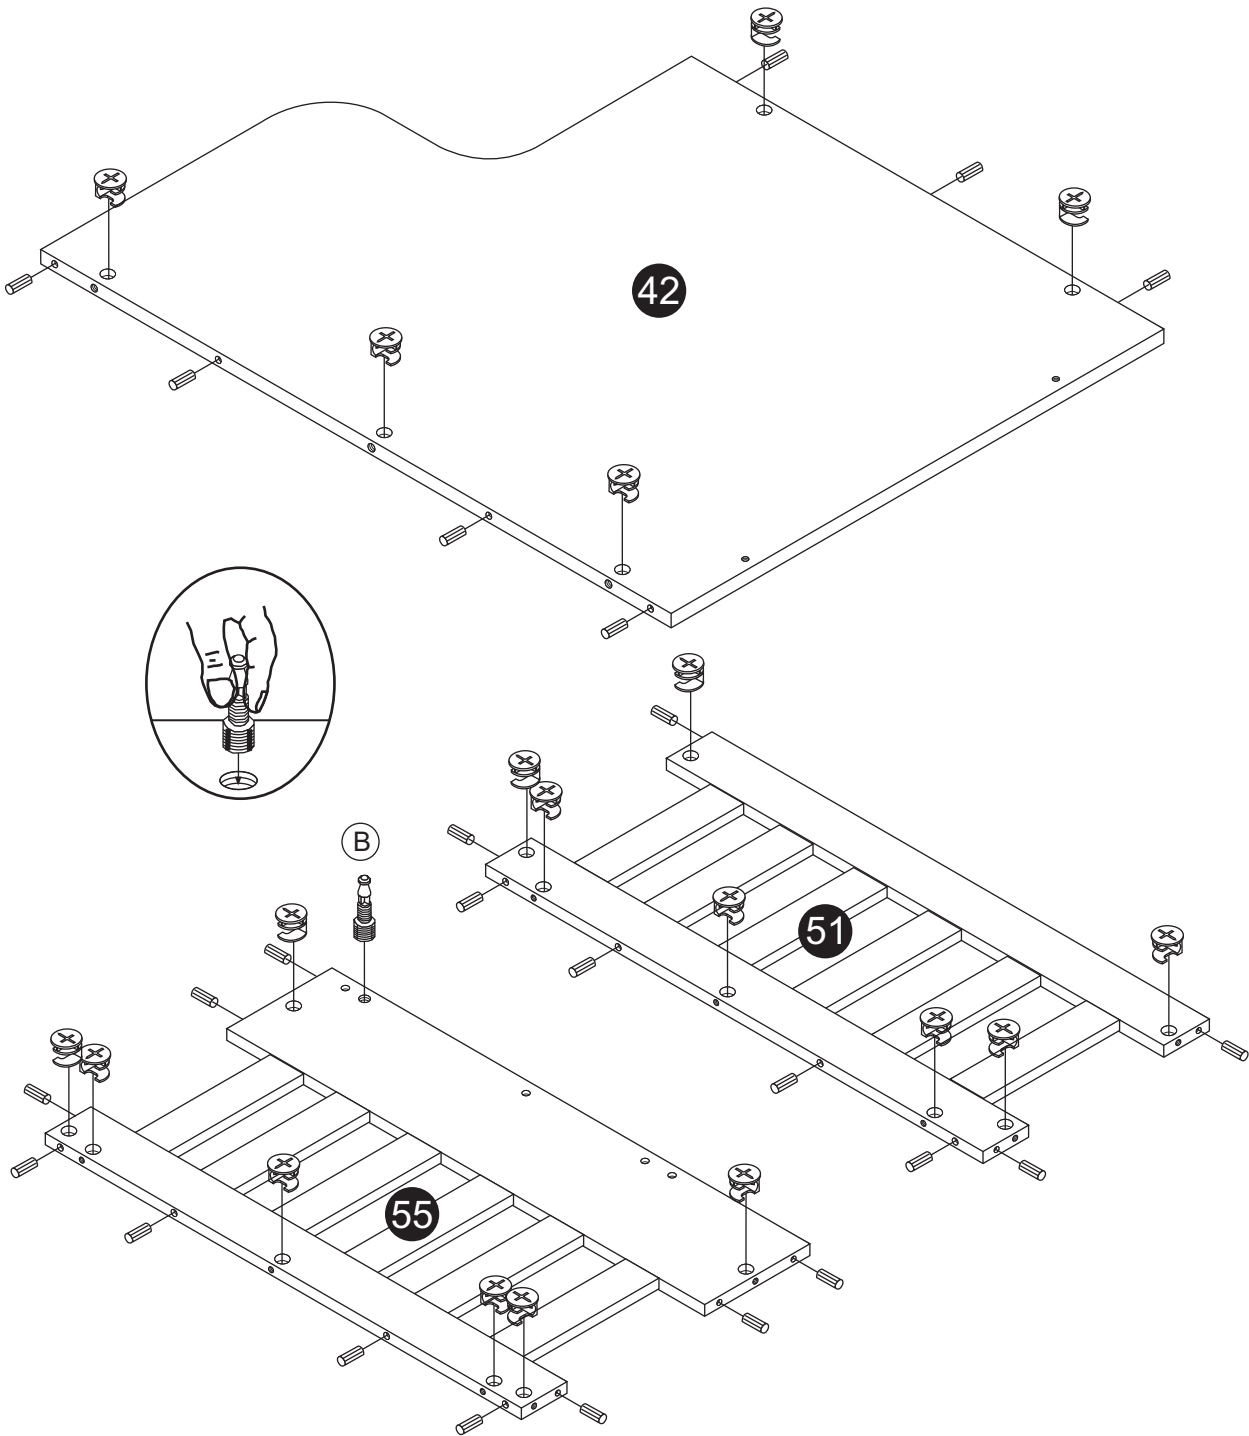


GUIDE TO ASSEMBLY

Model: CK 6216


STEP 10

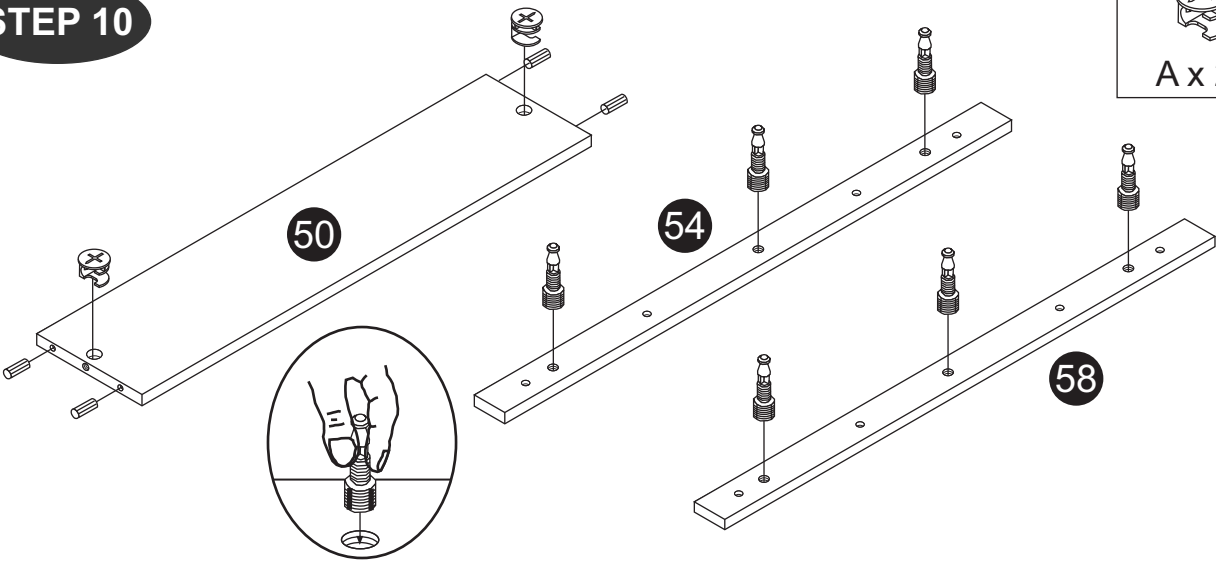

STEP 11

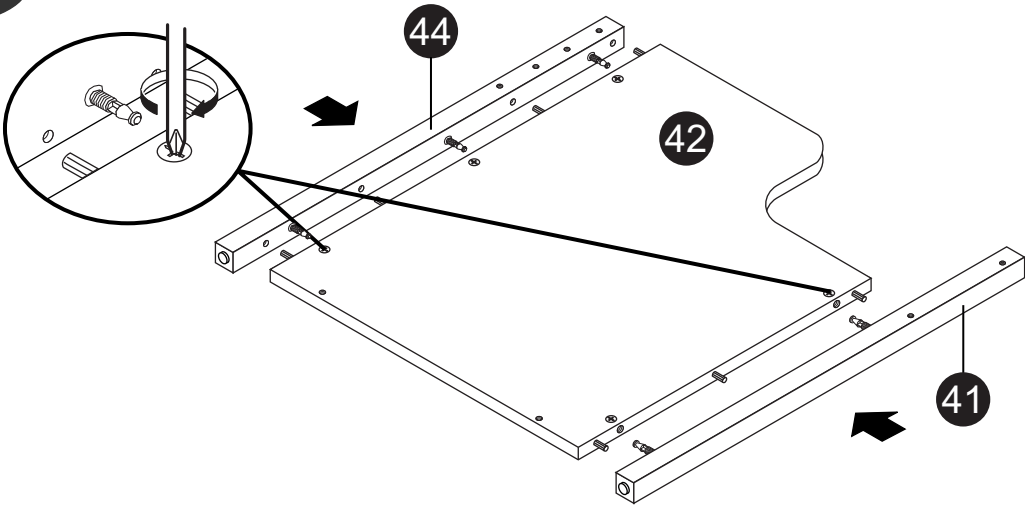


STEP 12

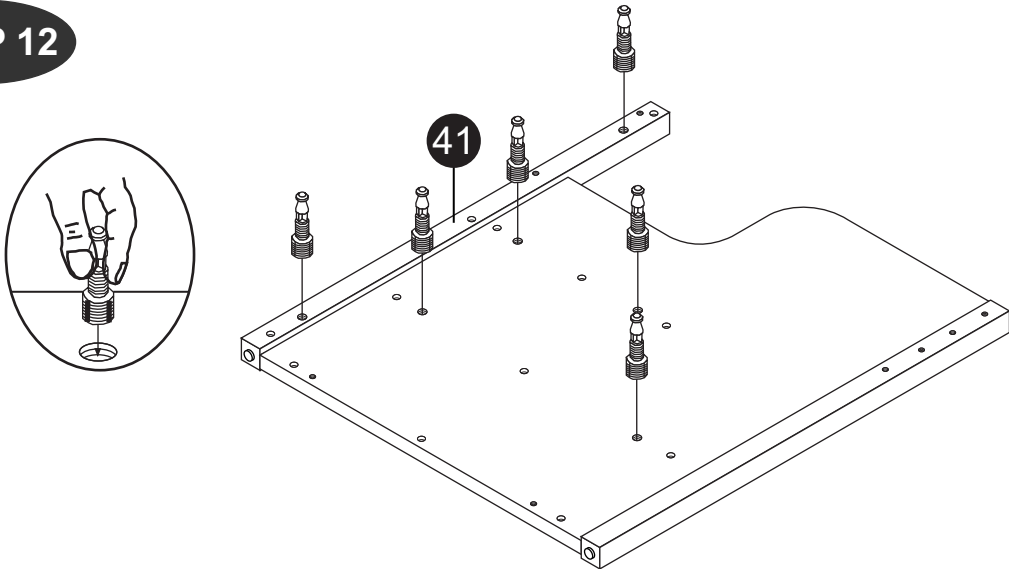


GUIDE TO ASSEMBLY

Model: CK 6216


STEP 13

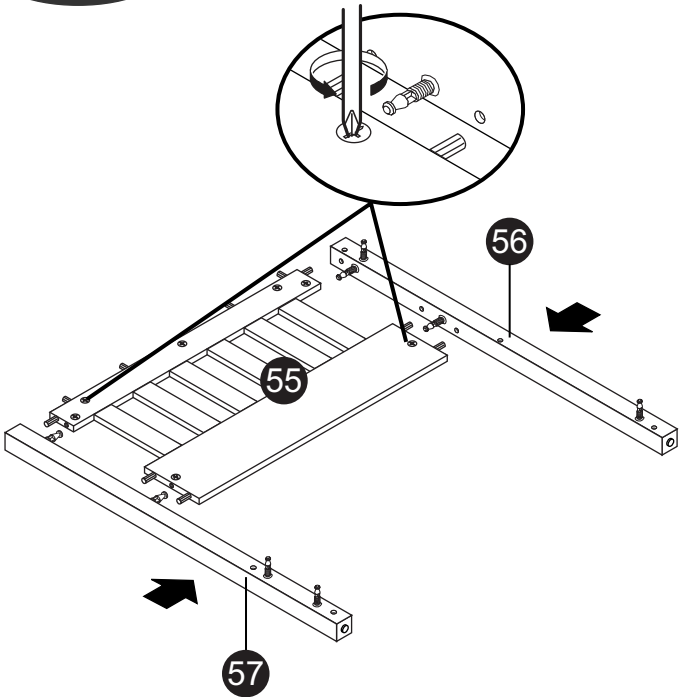


STEP 14

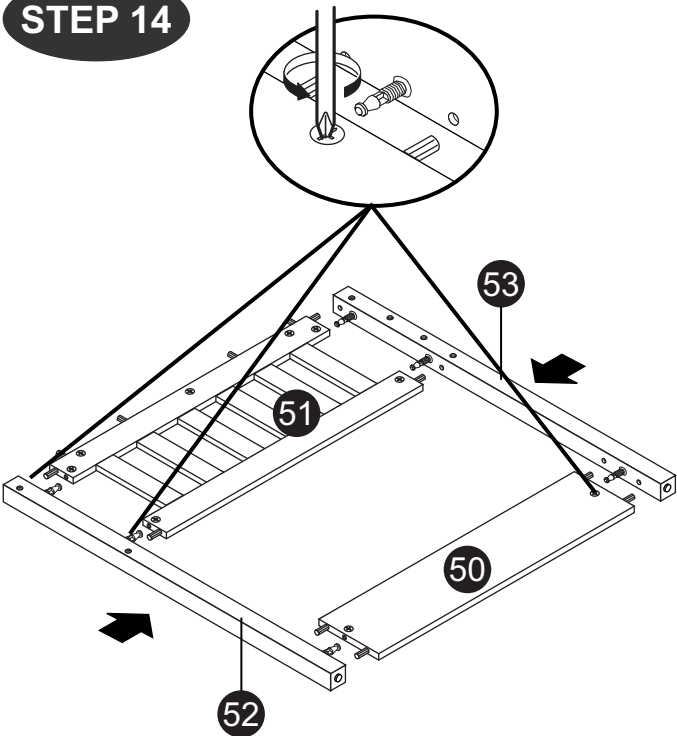

STEP 15

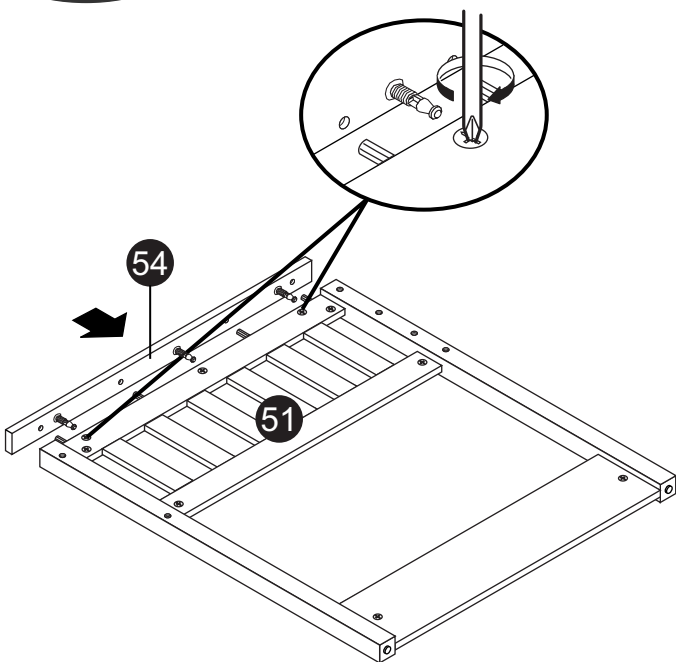


STEP 16

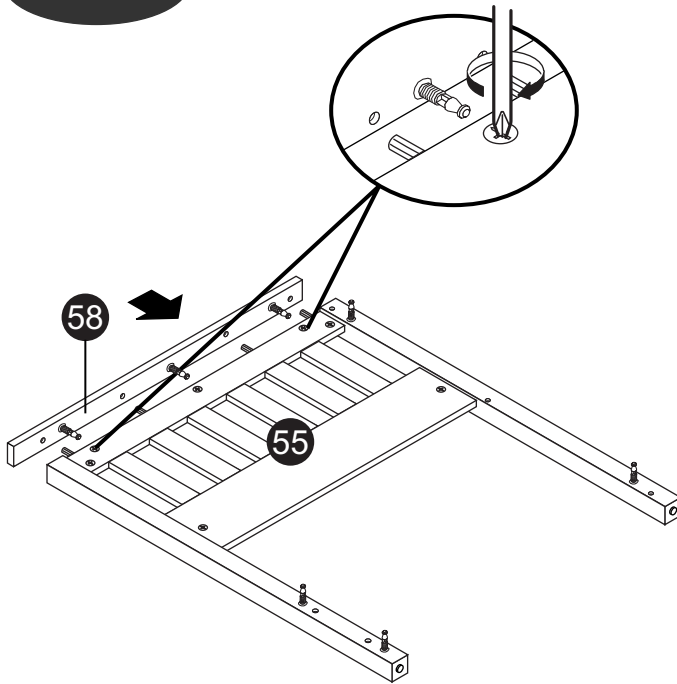


GUIDE TO ASSEMBLY

Model: CK 6216


STEP 17


N x 16

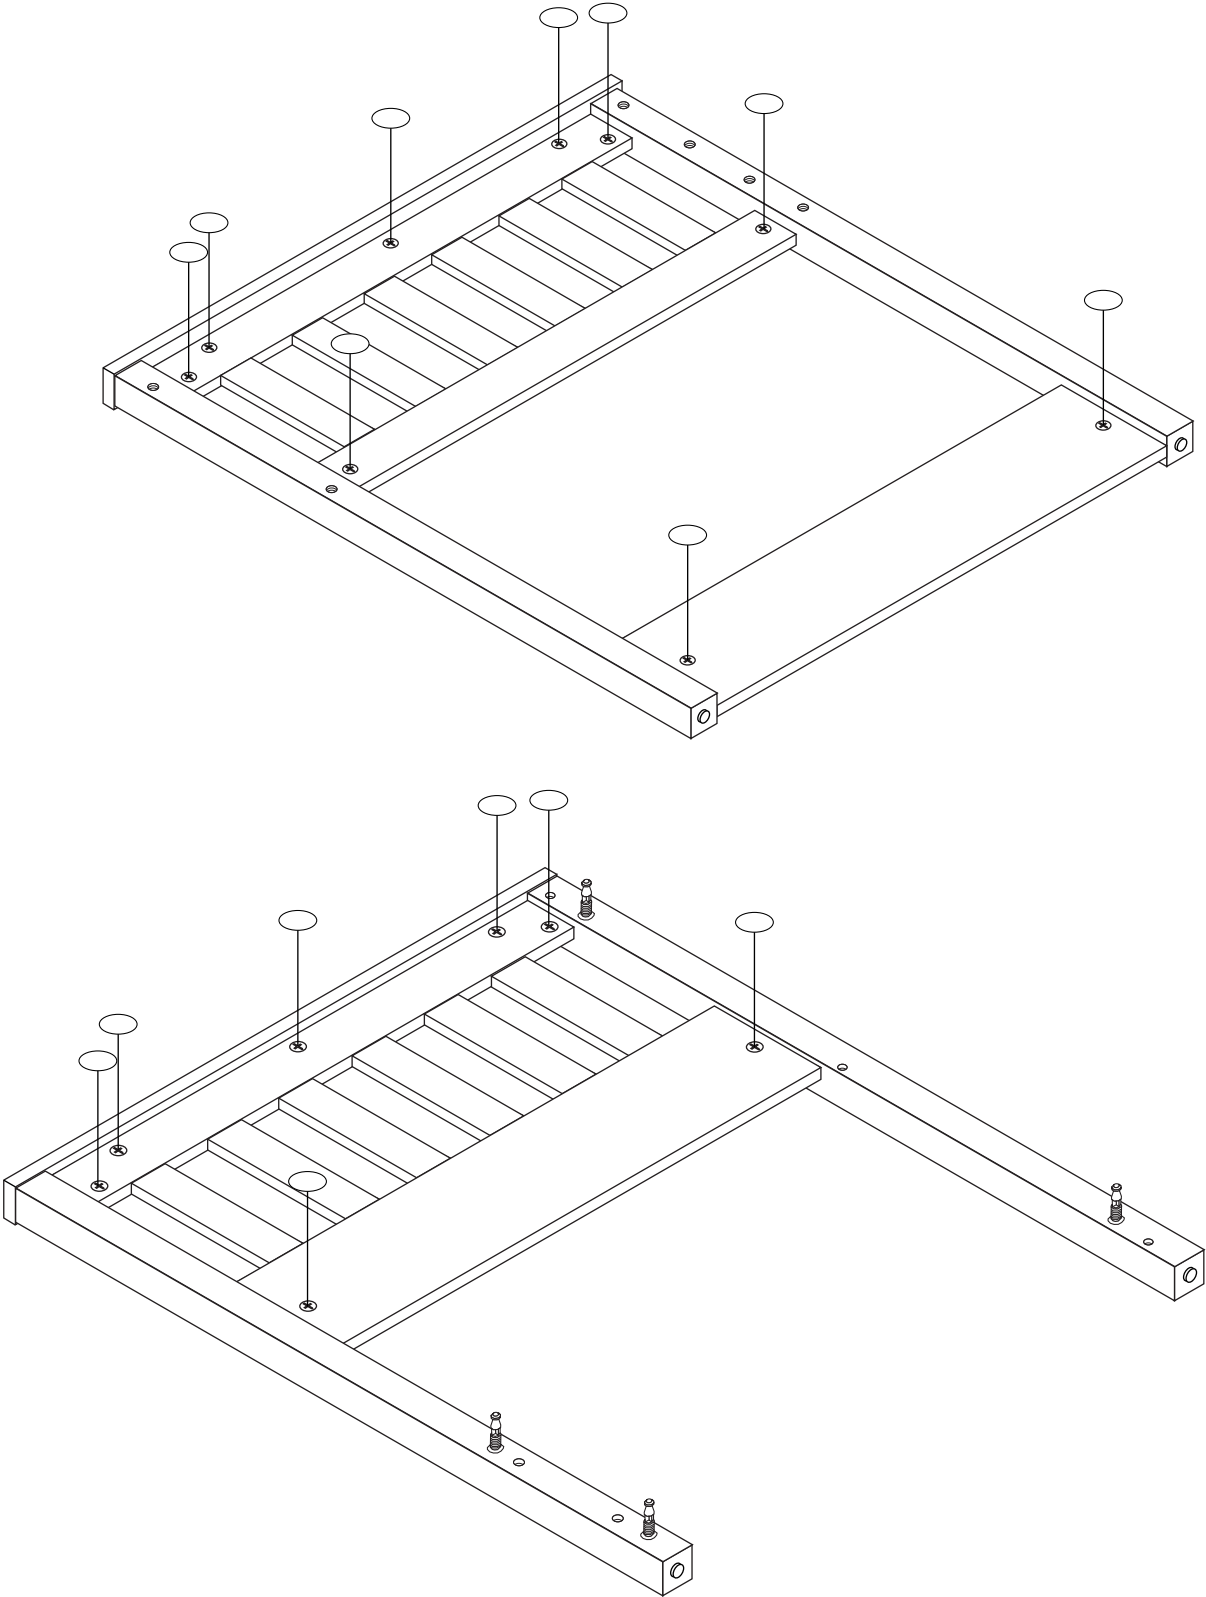



Model: CK 6216

STEP 18

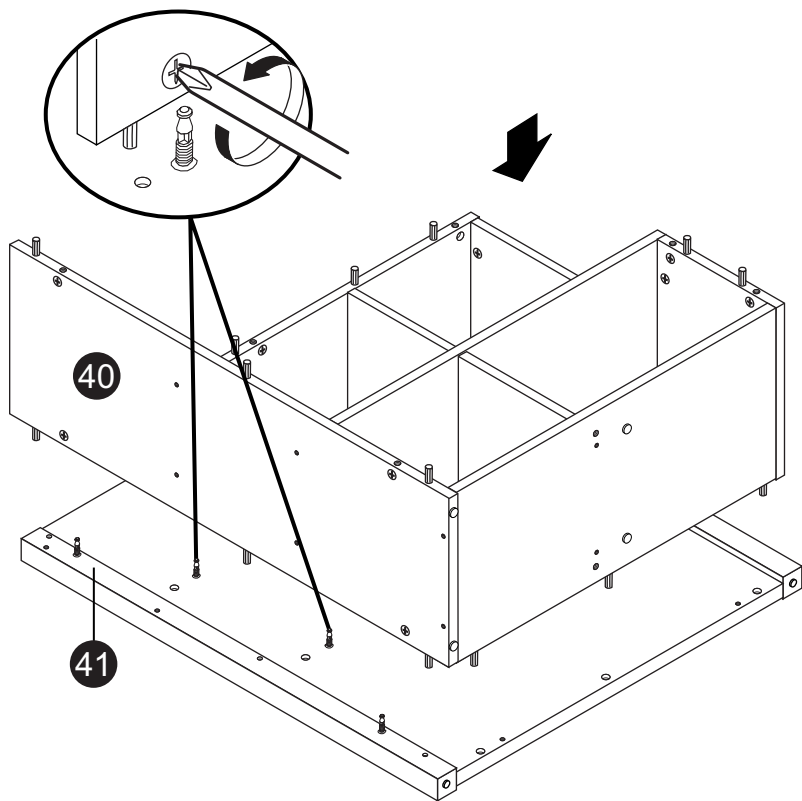

STEP 19

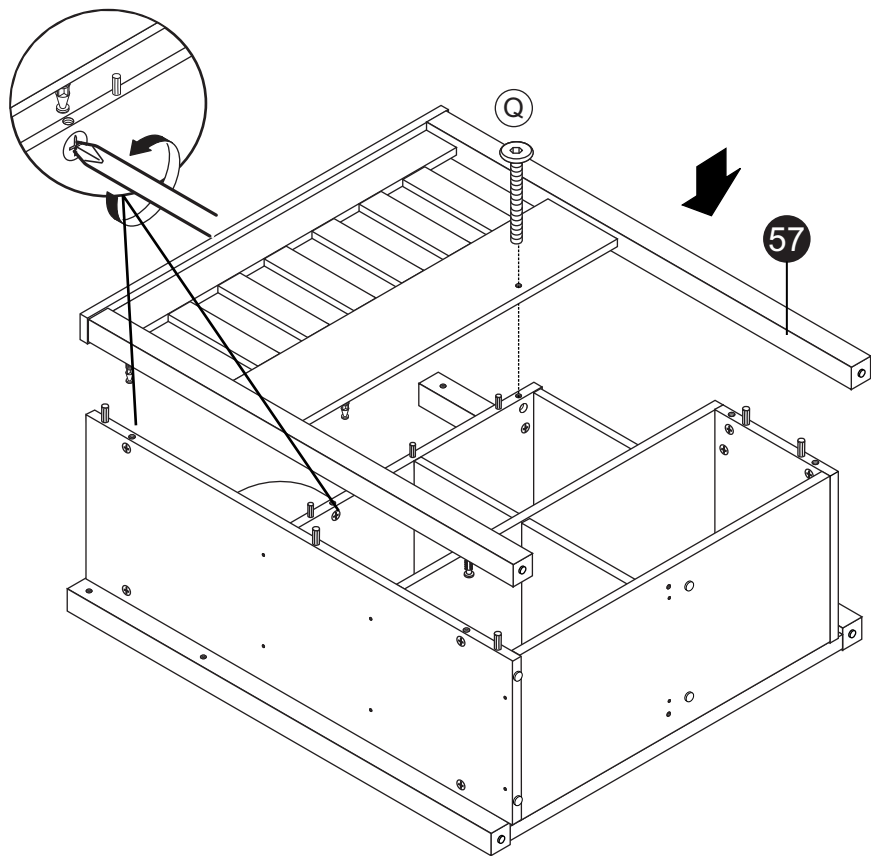

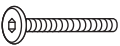



Q x 1

GUIDE TO ASSEMBLY



Model: CK 6216


STEP 20

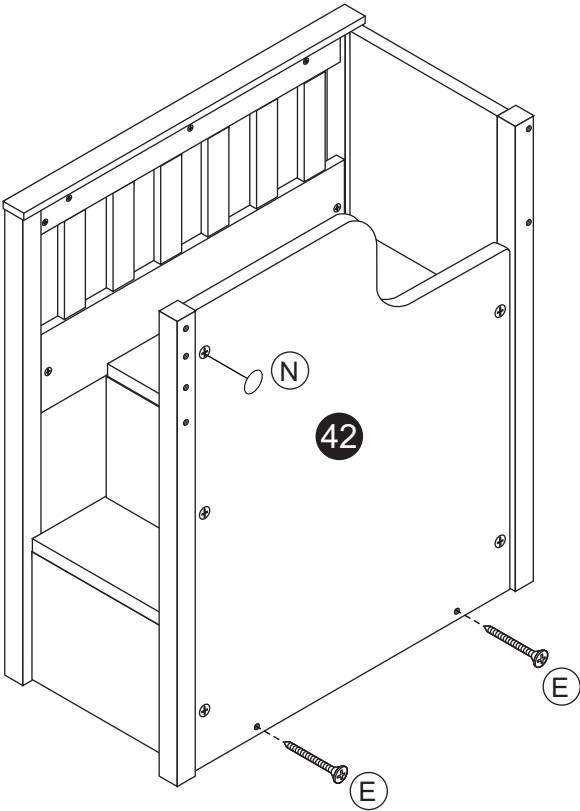	
N x 1	E x 2



STEP 21


	
N x 2	K x 12

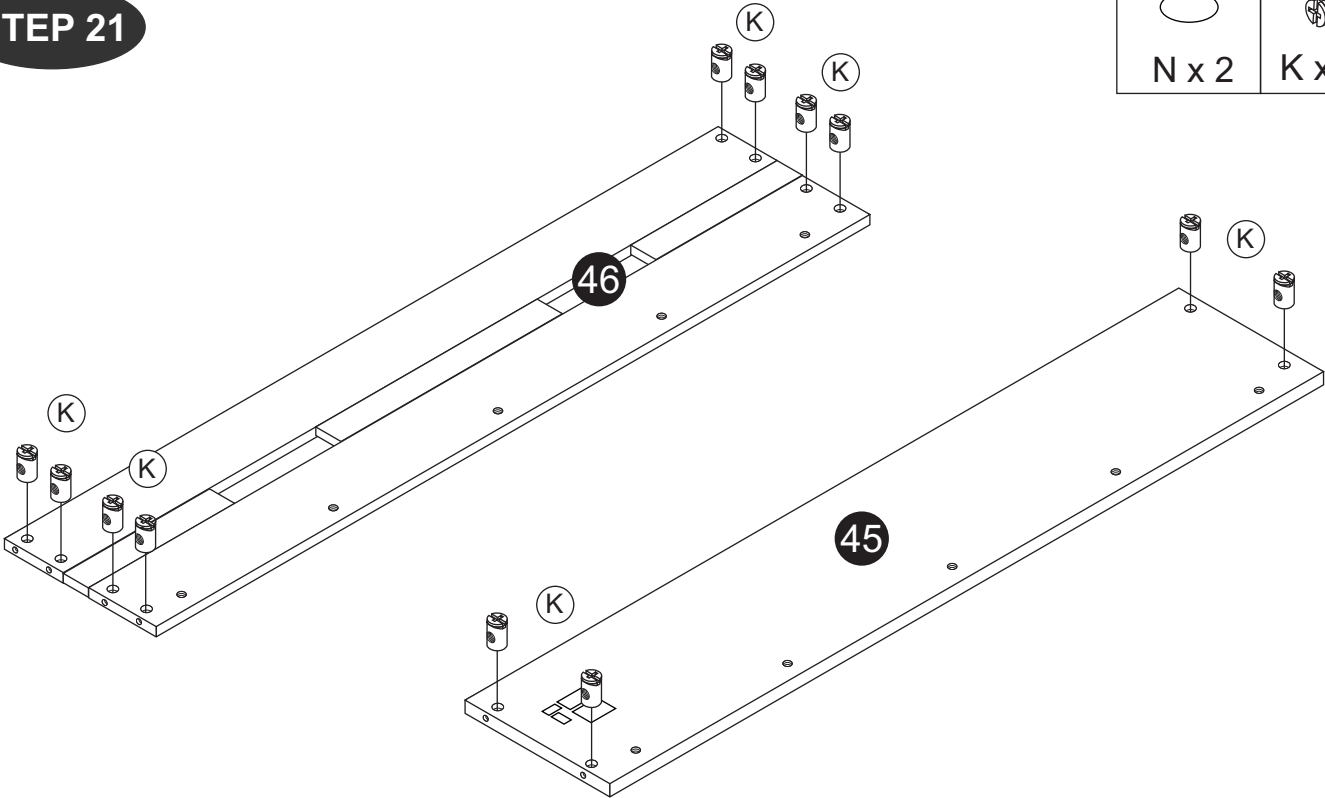


GUIDE TO ASSEMBLY


Model: CK 6216


STEP 22

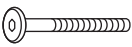
J x 4

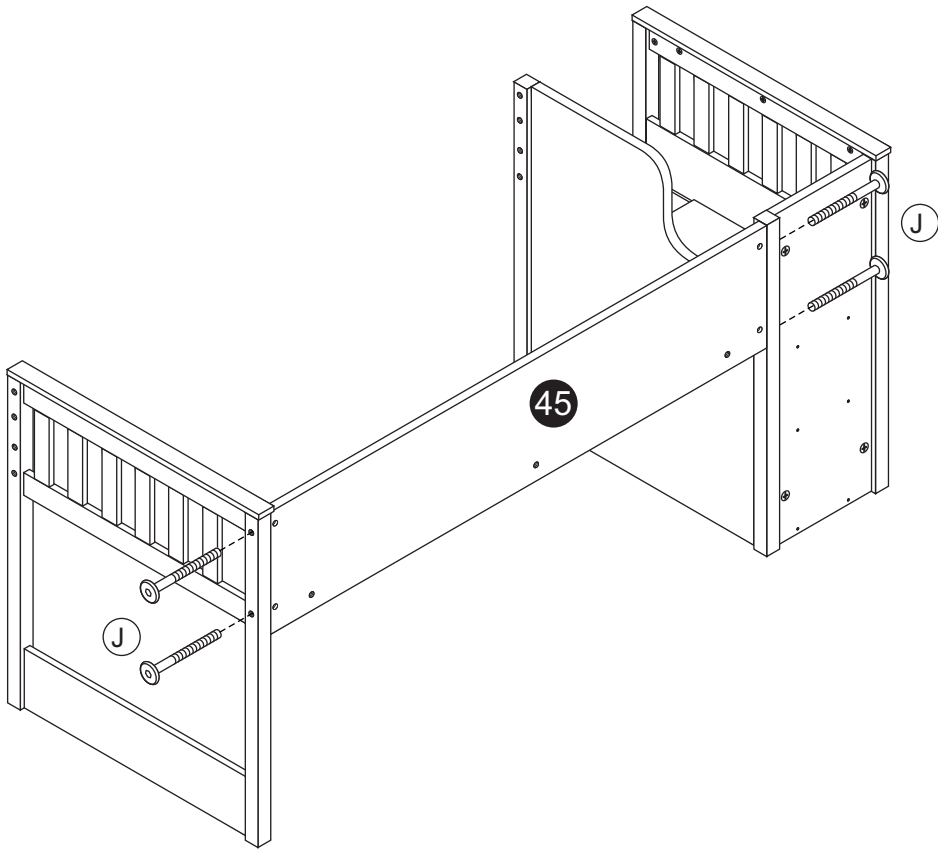

STEP 23

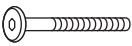
J x 8

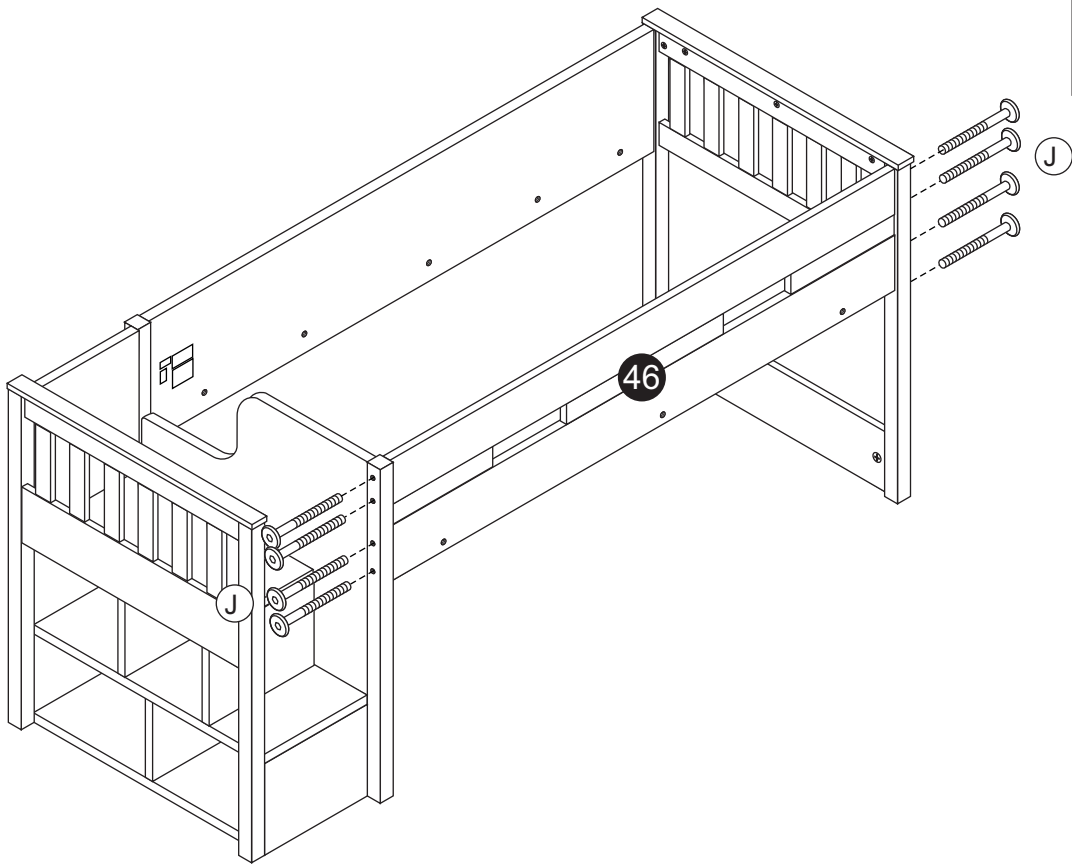


GUIDE TO ASSEMBLY


15 / 15

Model: CK 6216

STEP 24

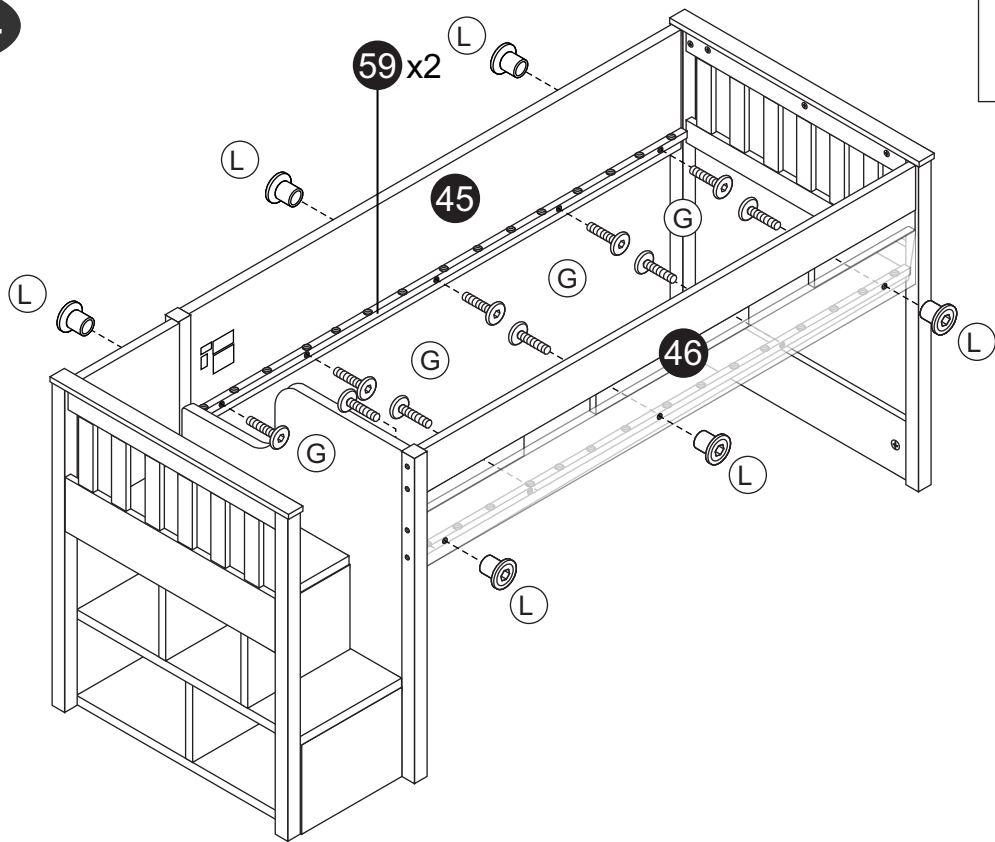

STEP 25

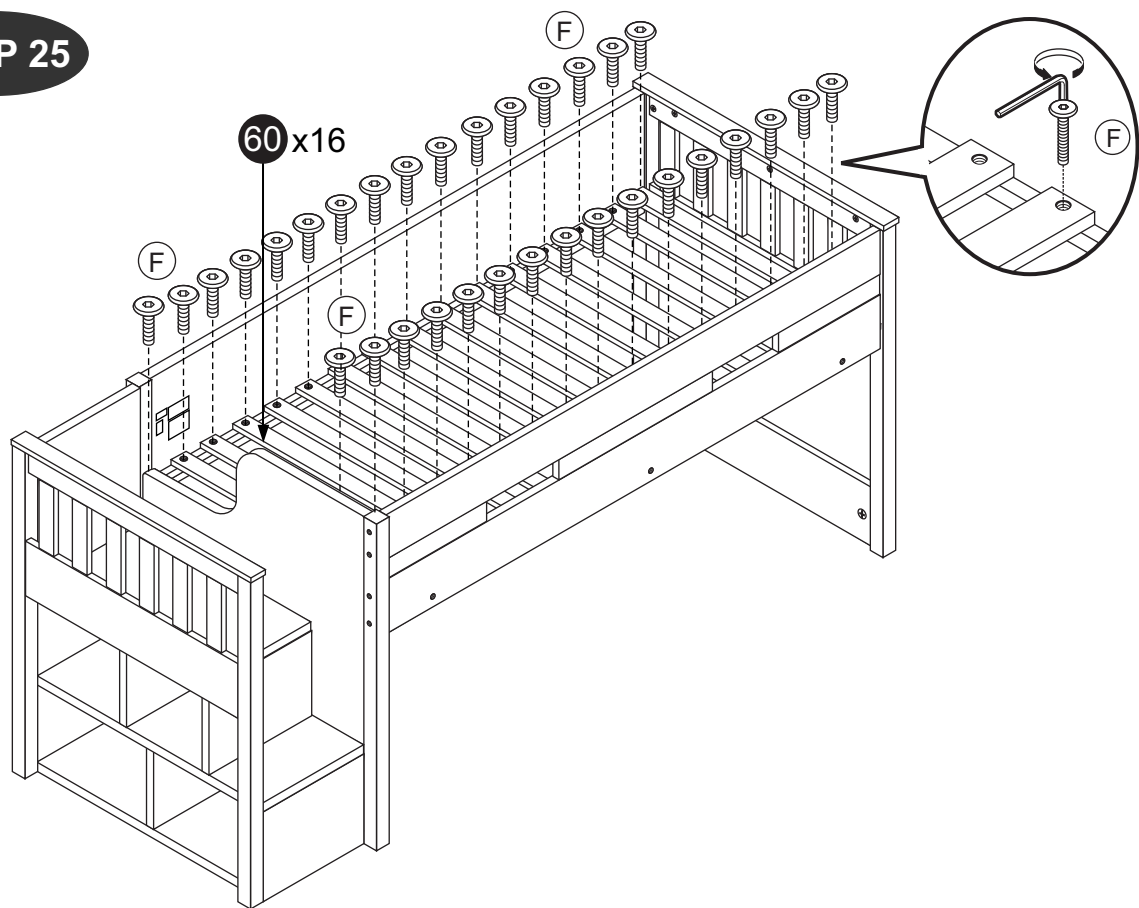

F x 32