



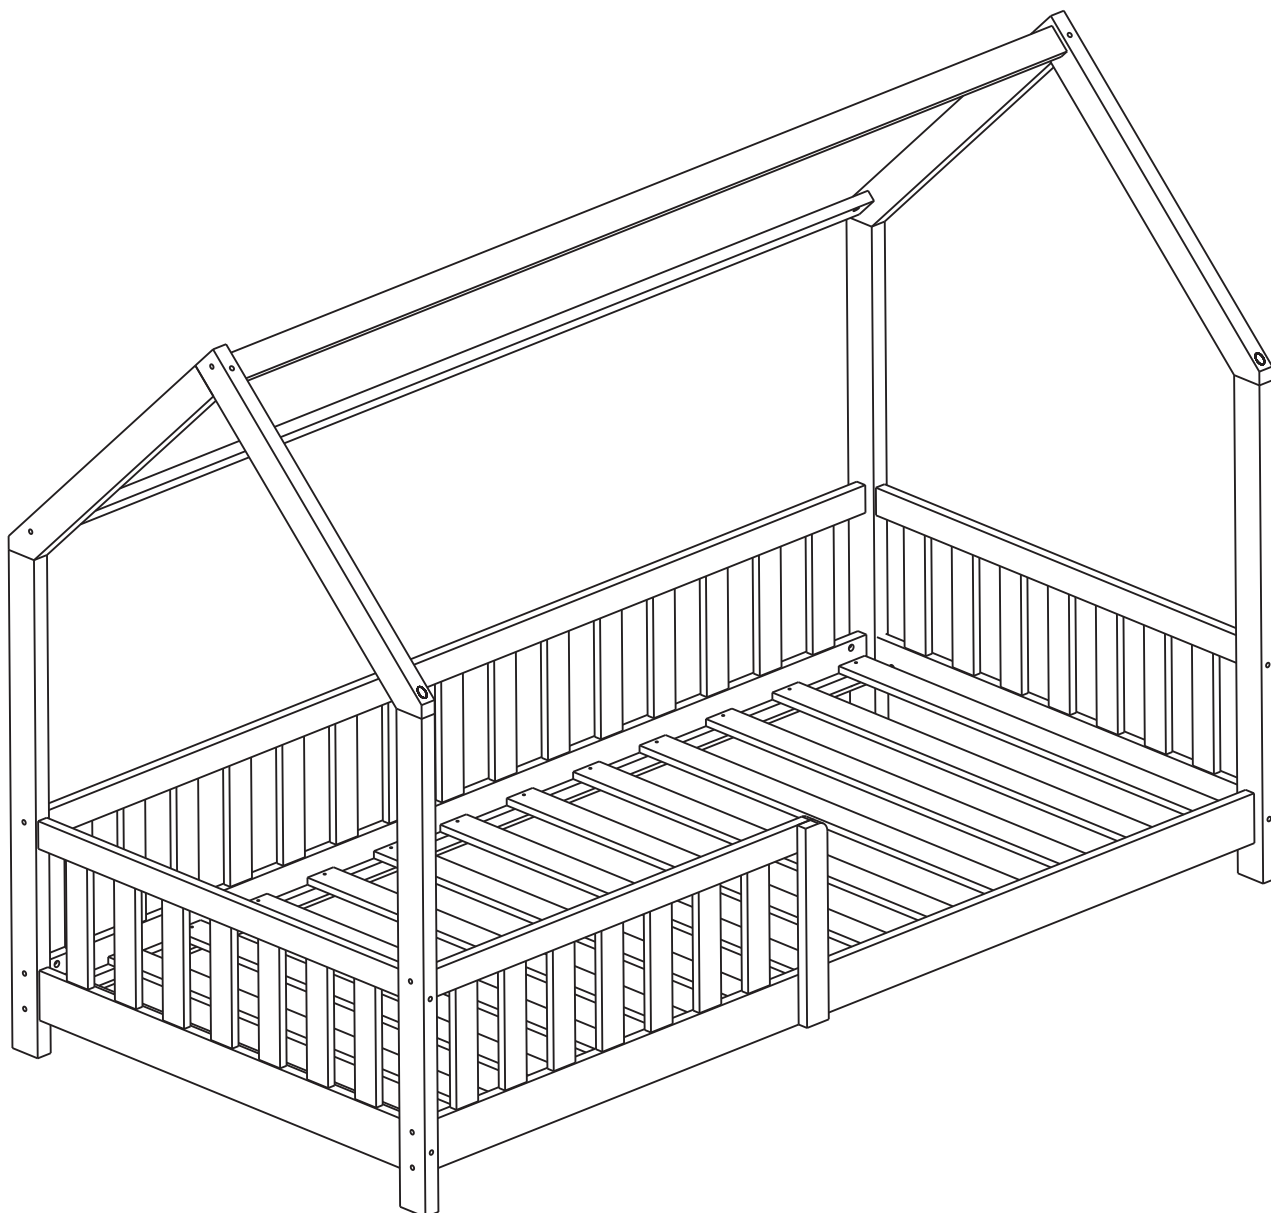


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE




NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

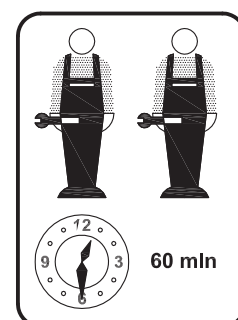



EXPLODED VIEW

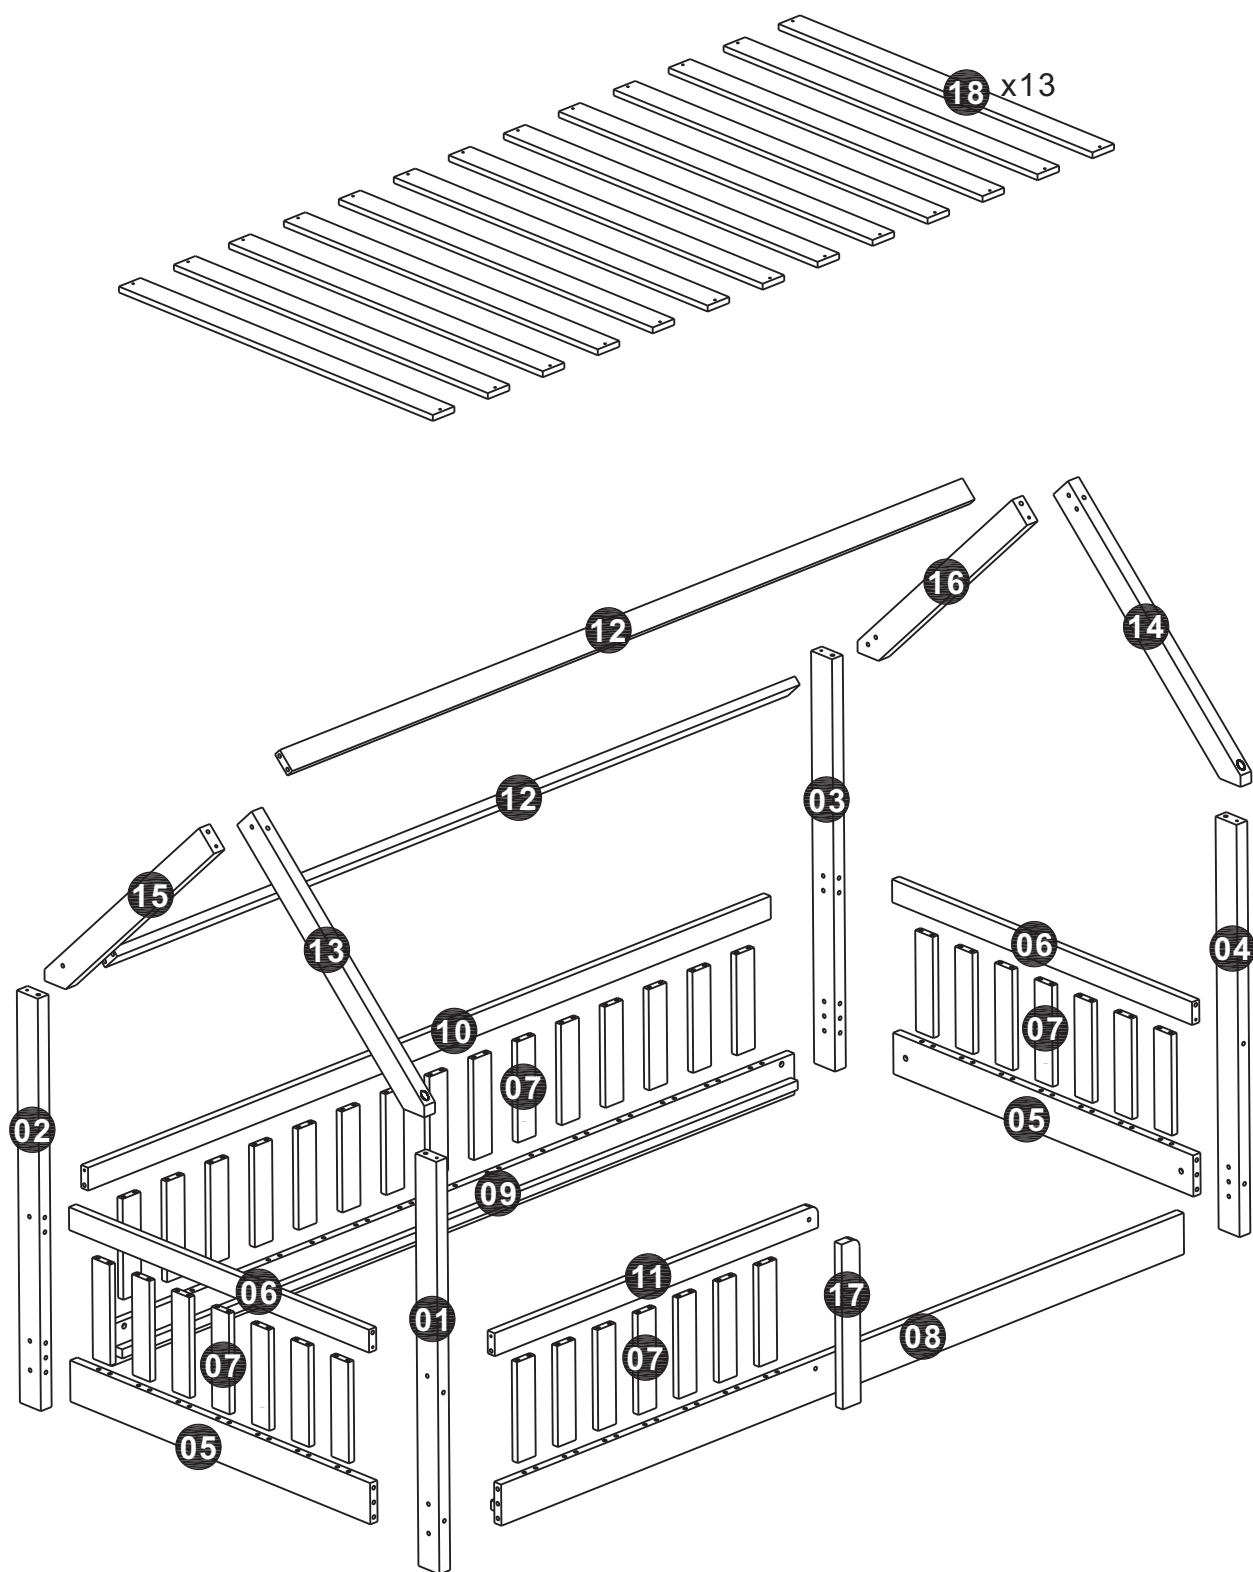


HARDWARE

A x8  M6x70mm	B x12  Ø6 x30mm	C x173  Ø8 x30mm	D x 11  Ø6 x70mm	E x 26  Ø4 x30mm
F x1  M6x30mm	G x6  Ø6 x100mm	H x4  M6 x100mm	I x2  M6x30mm	



TOOLS



Ruler - Use this ruler to help correctly identify the screws




01

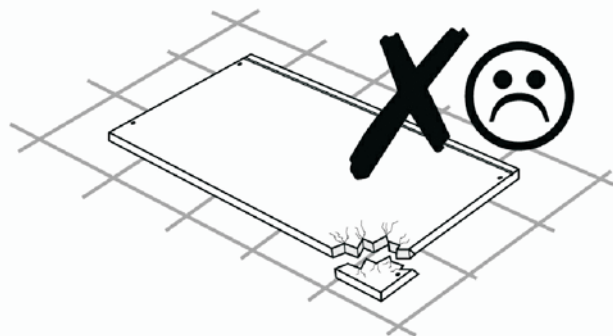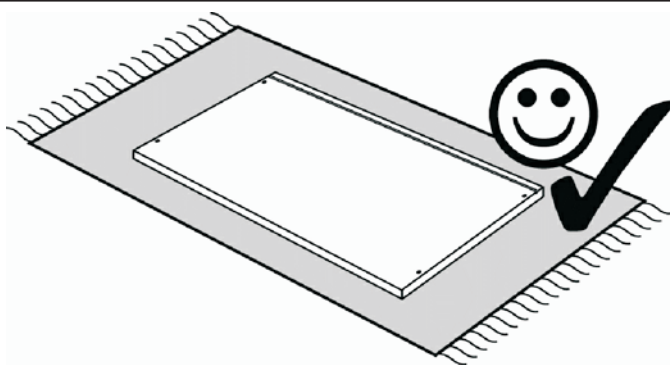


C x167



Ø8 x30mm

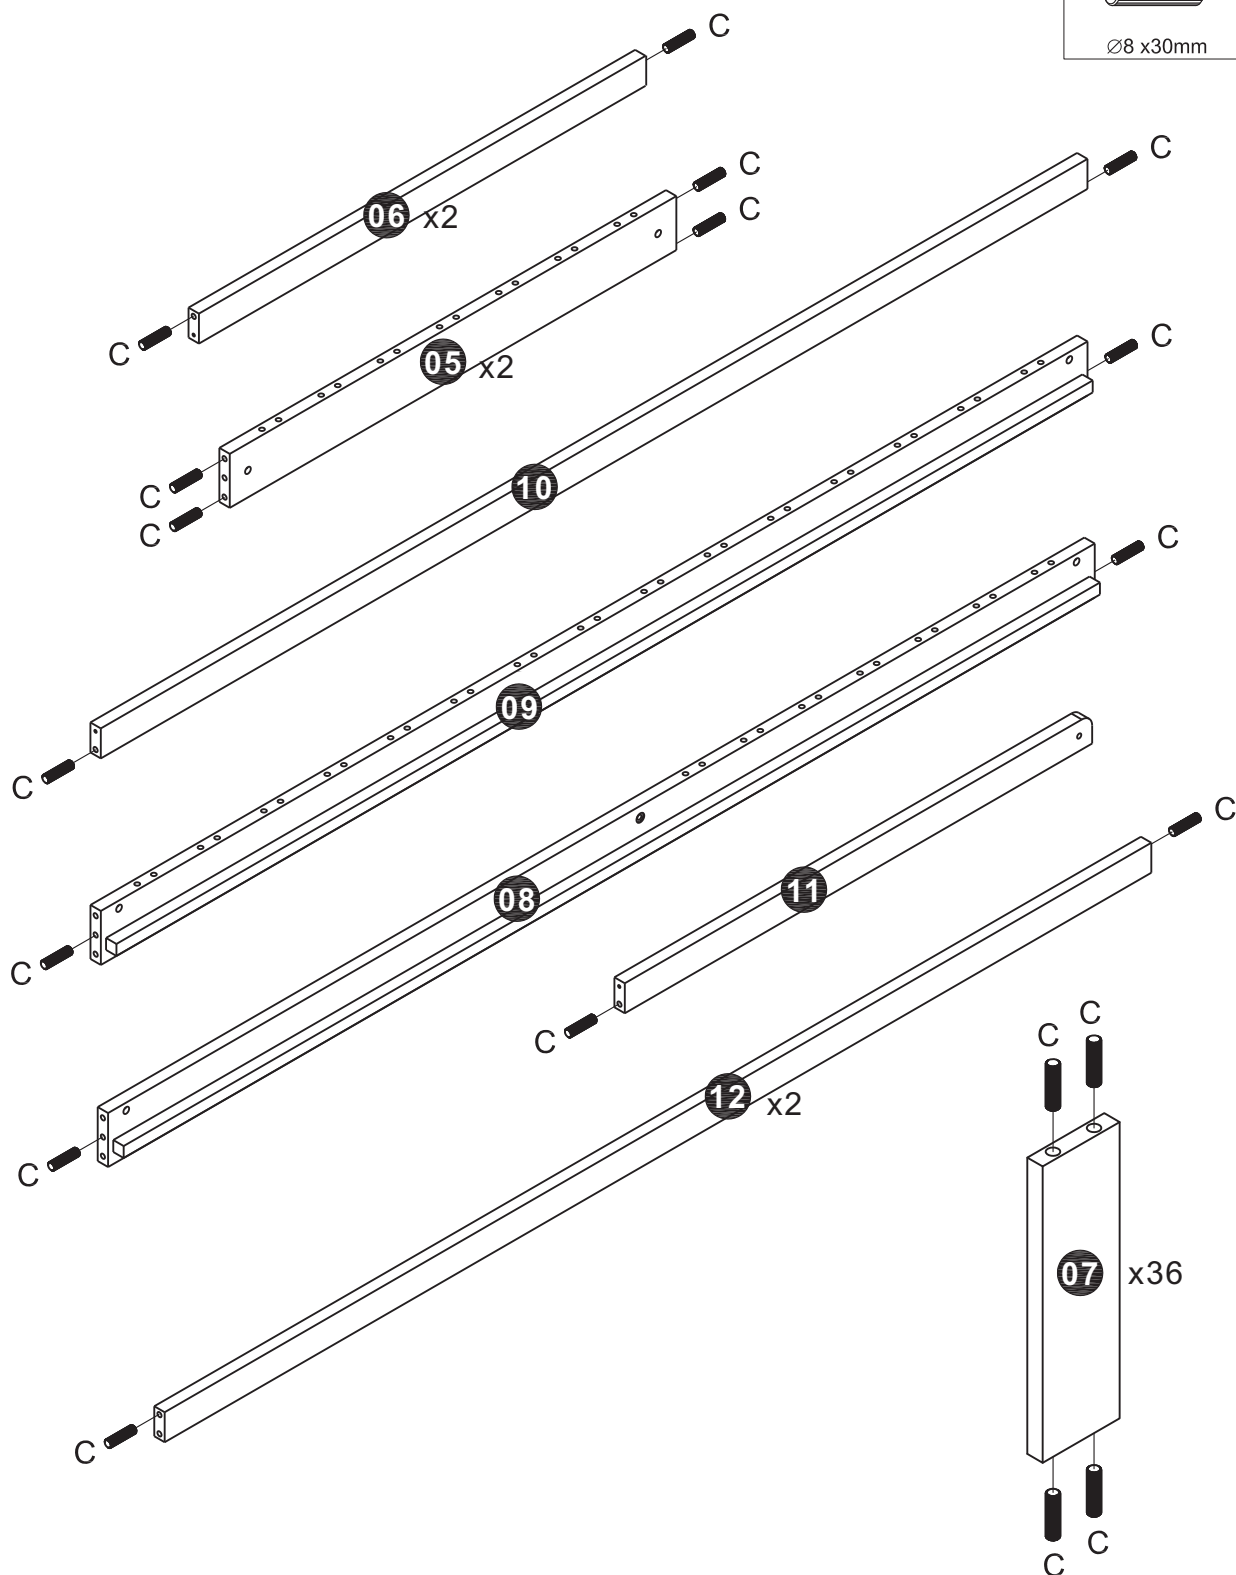


02

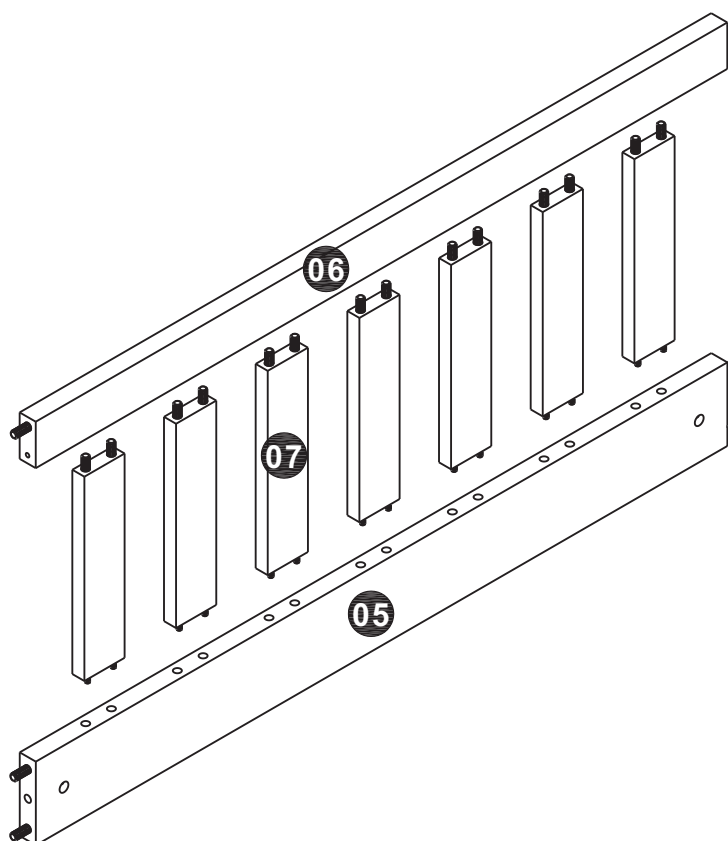

2 x

03

B x 2	G x 2	H x 2	F x 1
	Ø6 x100mm	M6 x100mm	

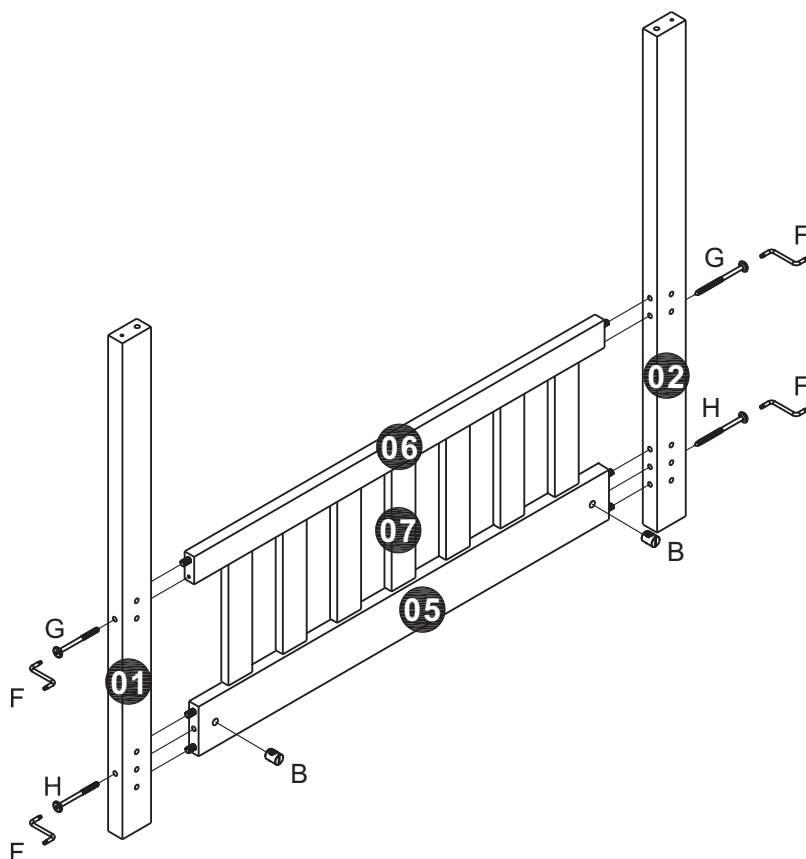

04

B x 2




G x 2




Ø6 x100mm

H x 2



M6 x100mm

F x1

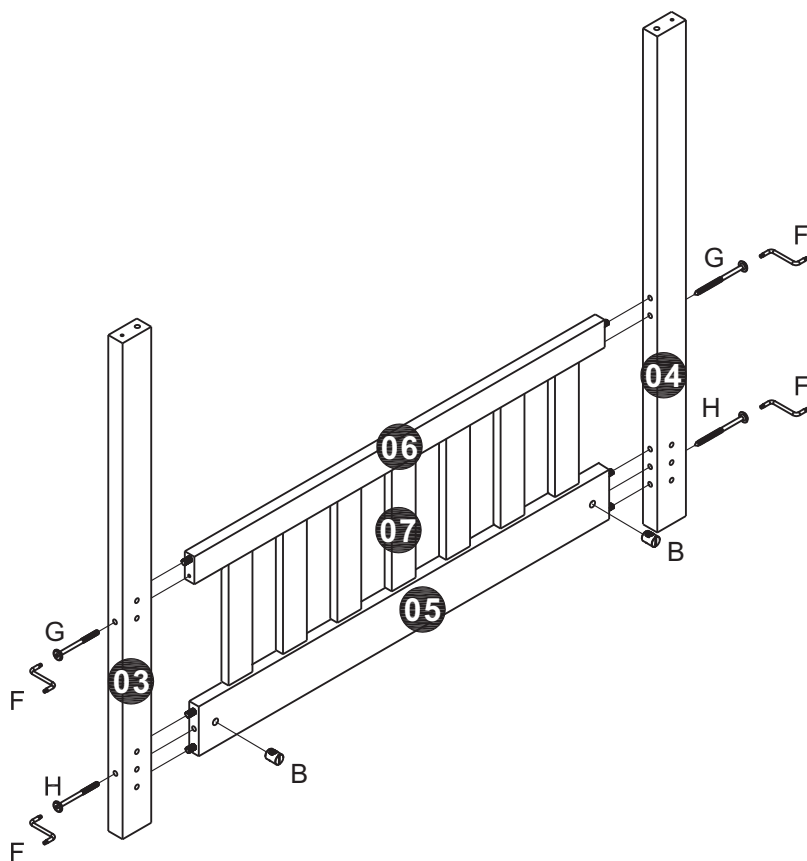


05

C x 2



Ø8 x30mm

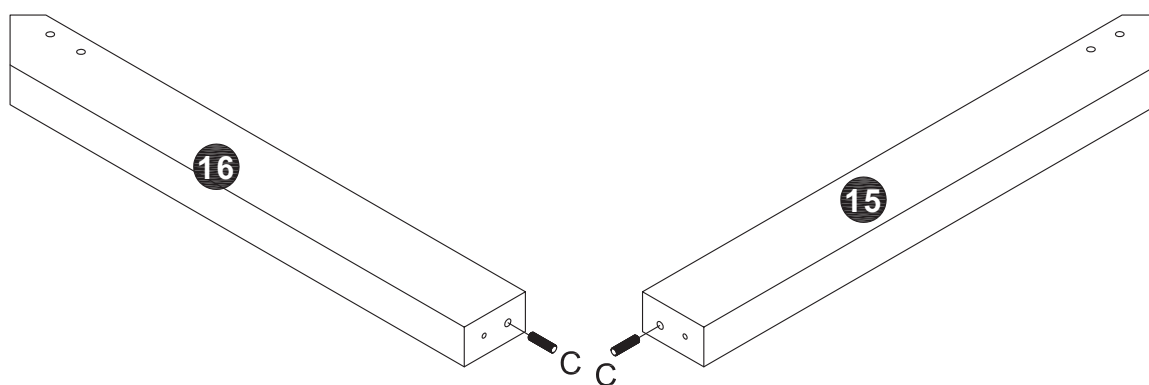


06

G x 2



Ø6 x100mm

F x1

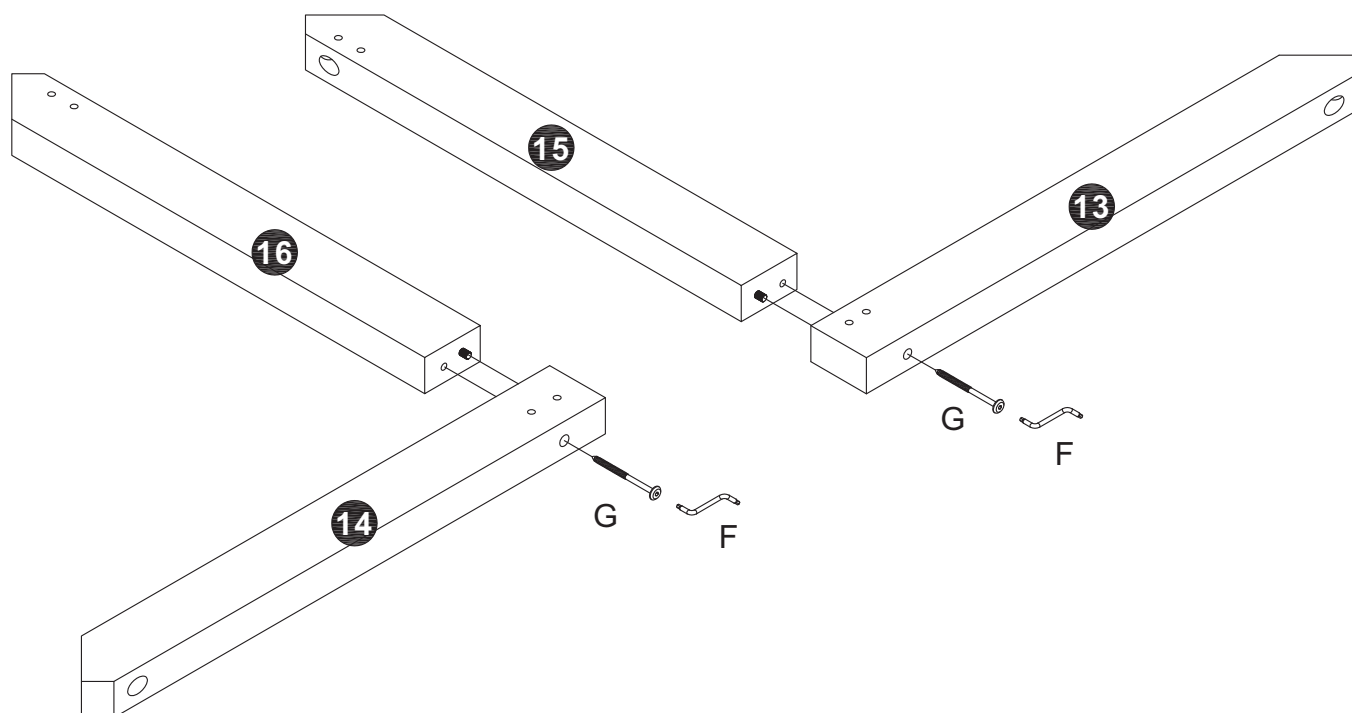

07

D x 2



Ø6 x70mm


F x1



C x2



Ø8 x30mm

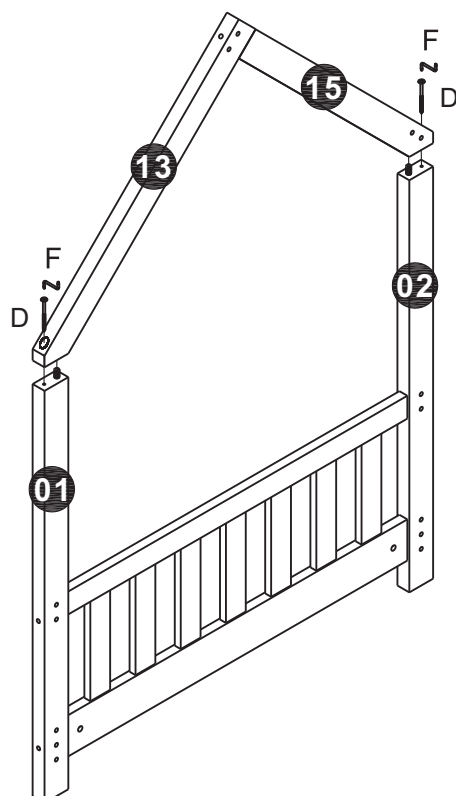



D x 2



Ø6 x 70mm



F x1



C x2




Ø8 x30mm

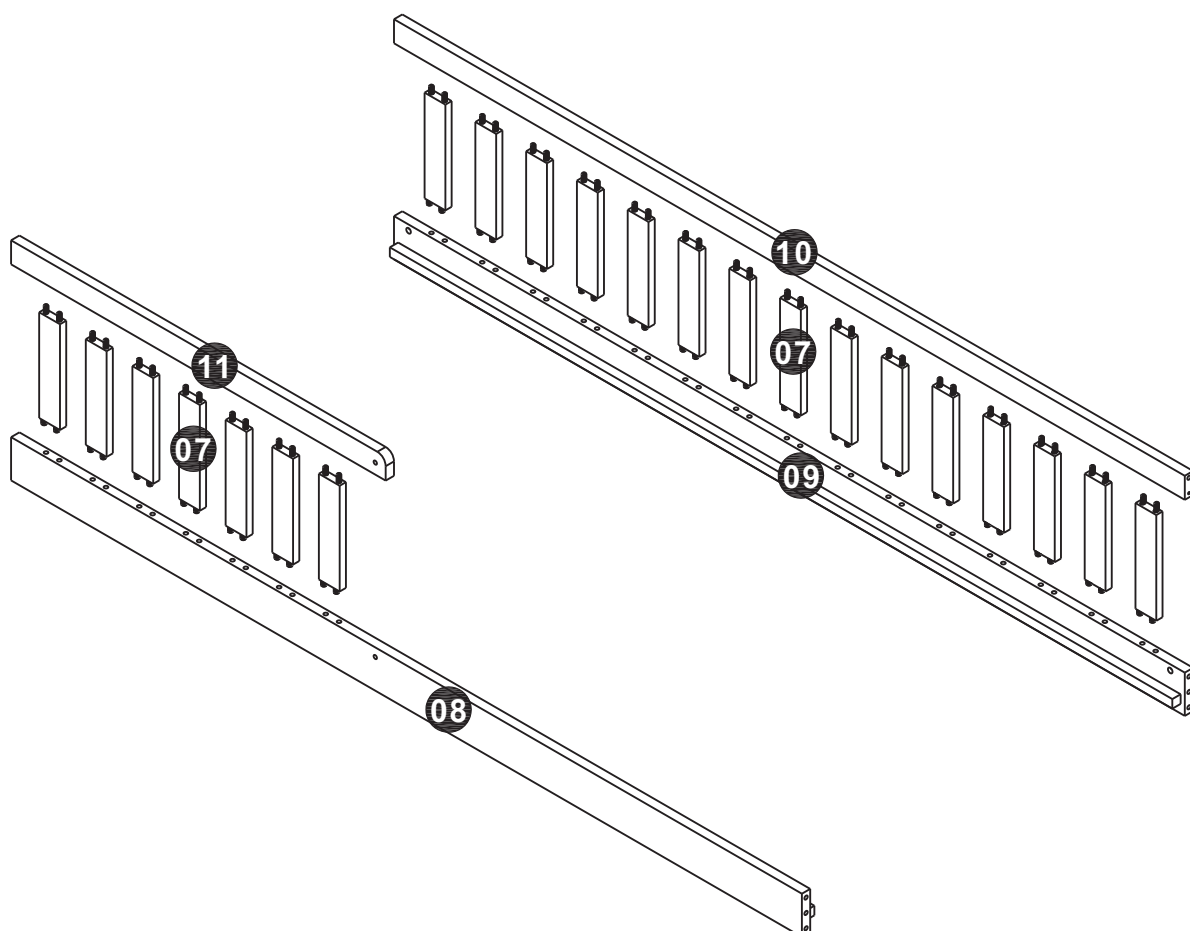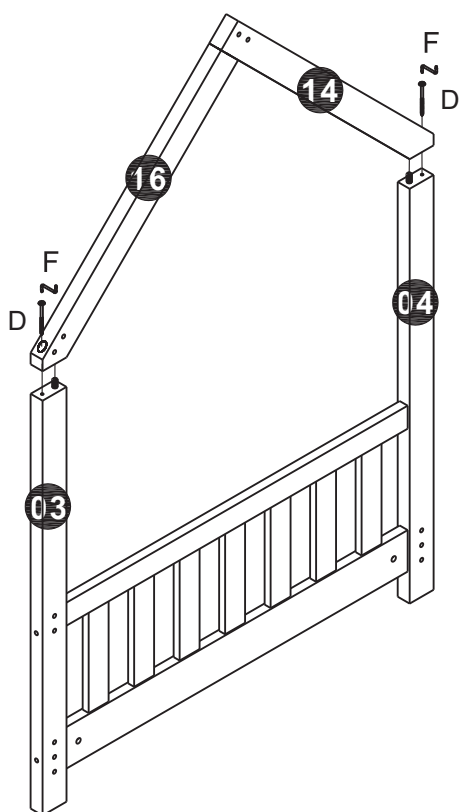


10

I x2	F x1
	
M6x30mm	

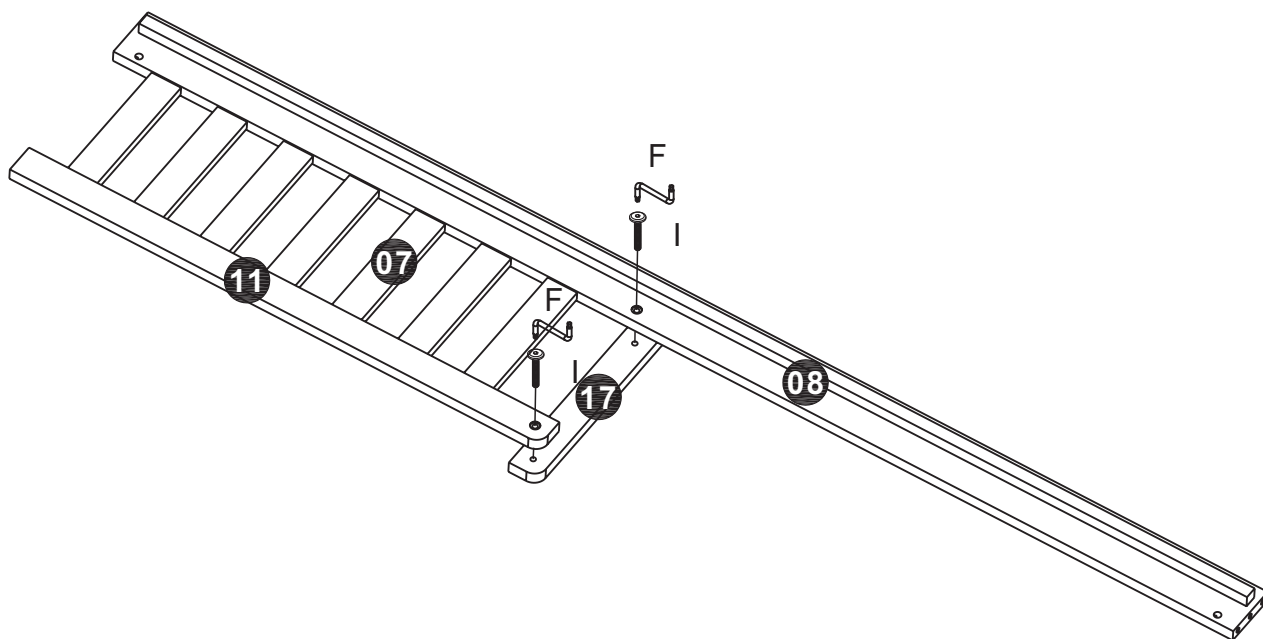

11

A x8	B x8	F x1	D x7
			
M6x70mm			Ø6 x70mm

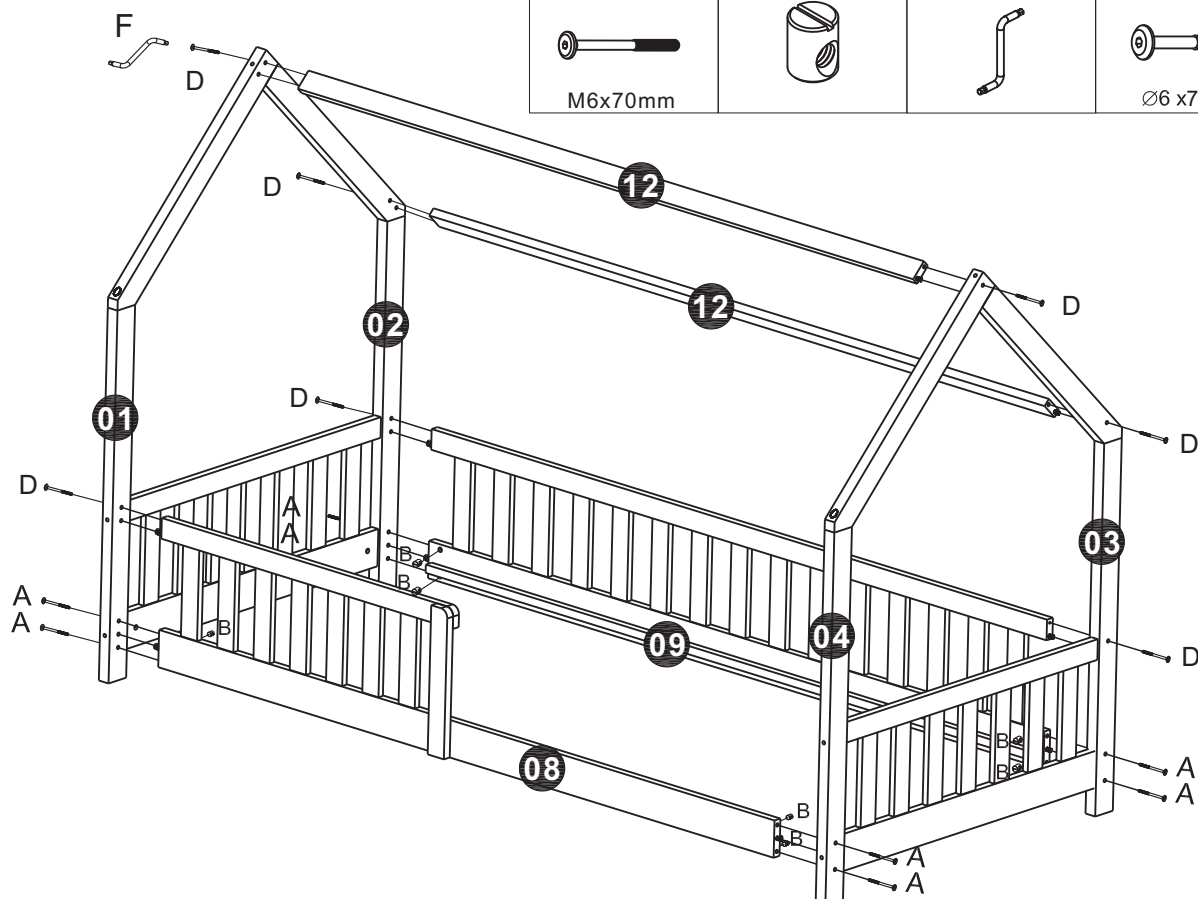

E x 26



Ø4 x30mm

