




# SOLACE+CO

## Velora Ottoman Double Bed Assembly Instructions

### Important

If for any reason you need to return this  
Item, you must return it in its original packaging.  
Assembled items cannot be returned.

- IMPORTANT NOTE \* PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START  
THE ASSEMBLY OF YOUR FURNITURE
- \* PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO  
PREVENT SCRATCHES.
  - \* KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY  
STEP.

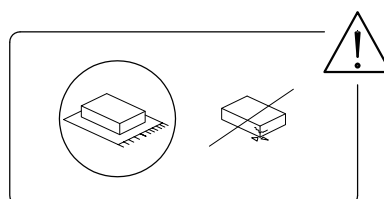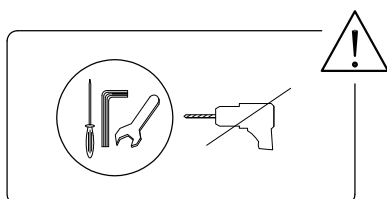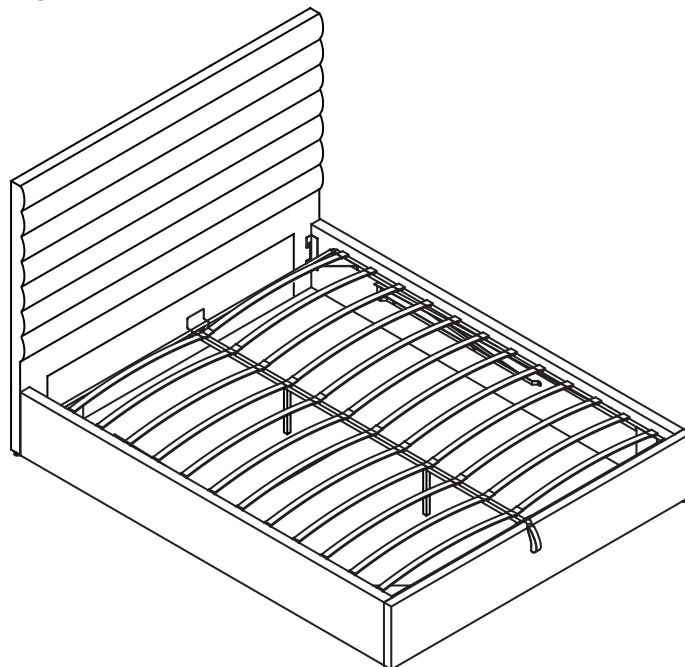


30'



2

# Parts

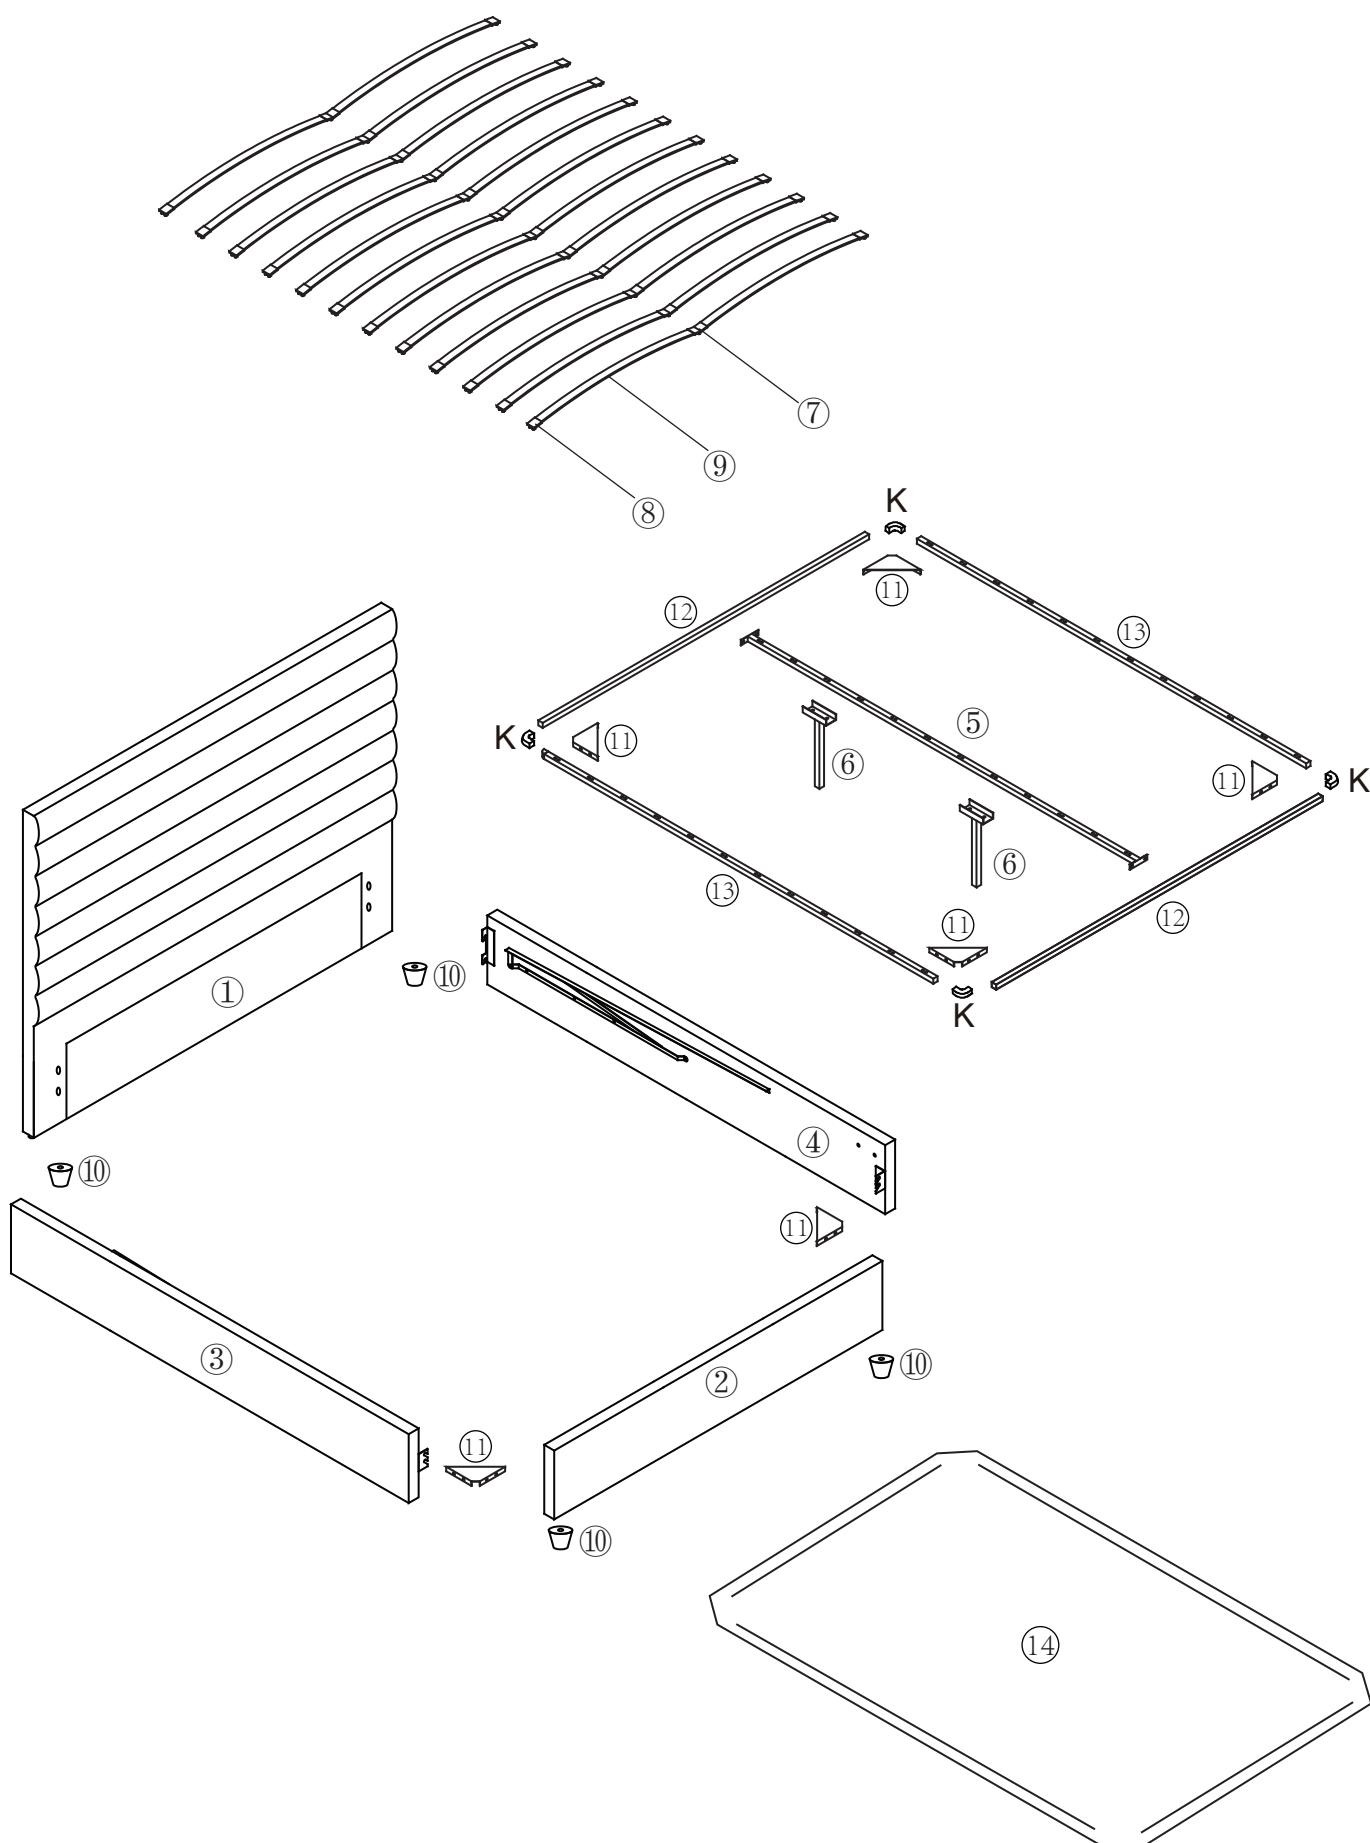

## PARTS LIST

## HARDWARE LIST: Carton 2 of 2

### Carton 1 of 2:

| Part | Description  | Qty |
|------|--------------|-----|
| 1    | Headboard    | 1   |
| 7    | Double Caps  | 12  |
| 8    | Single Caps  | 24  |
| 9    | Wooden Slats | 24  |


### Carton 2 of 2:

| Part | Description            | Qty |
|------|------------------------|-----|
| 2    | Footboard              | 1   |
| 3    | Sideboard Left         | 1   |
| 4    | Sideboard Right        | 1   |
| 5    | Middle Bar             | 1   |
| 6    | Supporting Legs        | 2   |
| 10   | Plastic Legs           | 4   |
| 11   | Metal Trapezium        | 6   |
| 12   | Metal Frame end        | 2   |
| 13   | Metal Frame side       | 2   |
| 14   | Black non-woven fabric | 1   |
|      | Assembly Instruction   | 1   |
|      | Hardware               | 1   |

| Part | Description                                                                                            | Qty |
|------|--------------------------------------------------------------------------------------------------------|-----|
| A    | M8x30mm Bolt        | 16  |
| B    | M8x40mm Bolt        | 30  |
| C    | M4x30mm Screw       | 4   |
| D    | M8 Nut              | 30  |
| E    | Spring Washer       | 16  |
| F    | Flat Washer         | 16  |
| G    | Allen Key           | 1   |
| H    | Spanner             | 1   |
| I    | Lift Strap          | 1   |
| J    | Mattress Stopper    | 1   |
| K    | Plastic Connector  | 4   |
| L    | Felt Pad          | 4   |


# Step 1

|                                                                                                                          |  |  |  |  |
|--------------------------------------------------------------------------------------------------------------------------|--|--|--|--|
| <b>Ⓒ x4</b><br><b>M4x30mm Screw</b><br> |  |  |  |  |
|--------------------------------------------------------------------------------------------------------------------------|--|--|--|--|

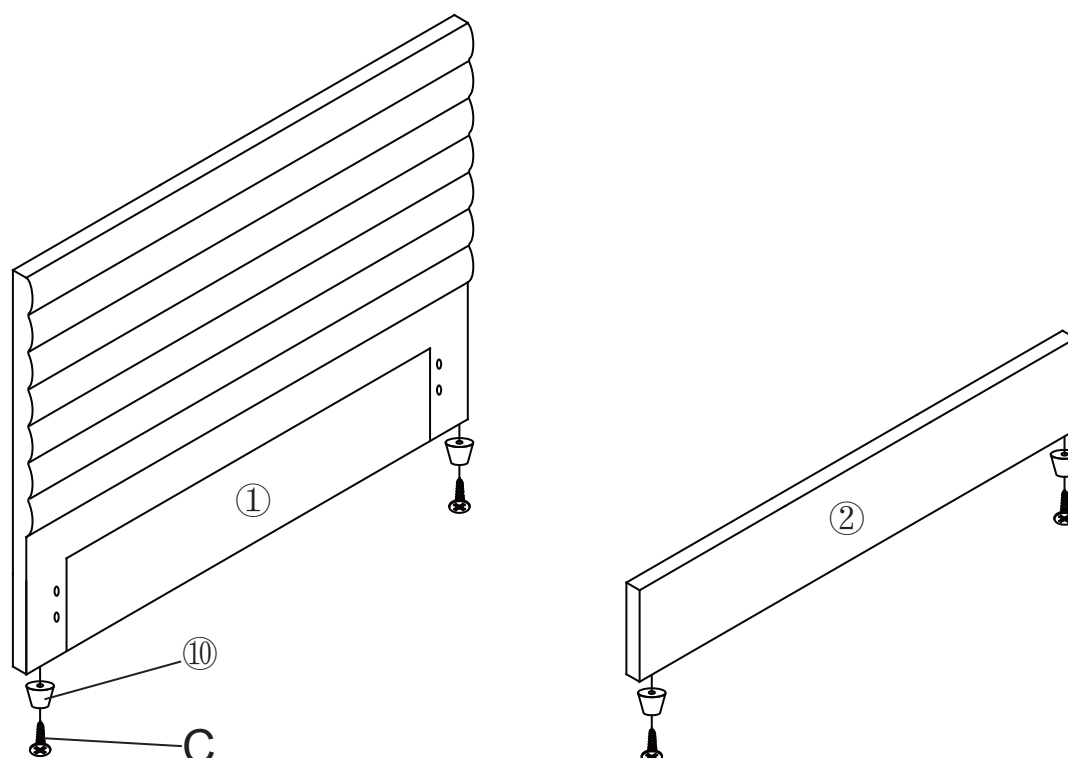


# Step 2

|                                                                                                                            |                                                                                                                             |                                                                                                                           |                                                                                                                          |                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Ⓐ x16</b><br><b>M8x30mm Bolt</b><br> | <b>Ⓔ x16</b><br><b>Spring Washer</b><br> | <b>Ⓕ x16</b><br><b>Flat Washer</b><br> | <b>Ⓖ x1</b><br><b>Allen Key</b><br> | <b>⒴ x4</b><br><b>Felt Pad</b><br> |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|

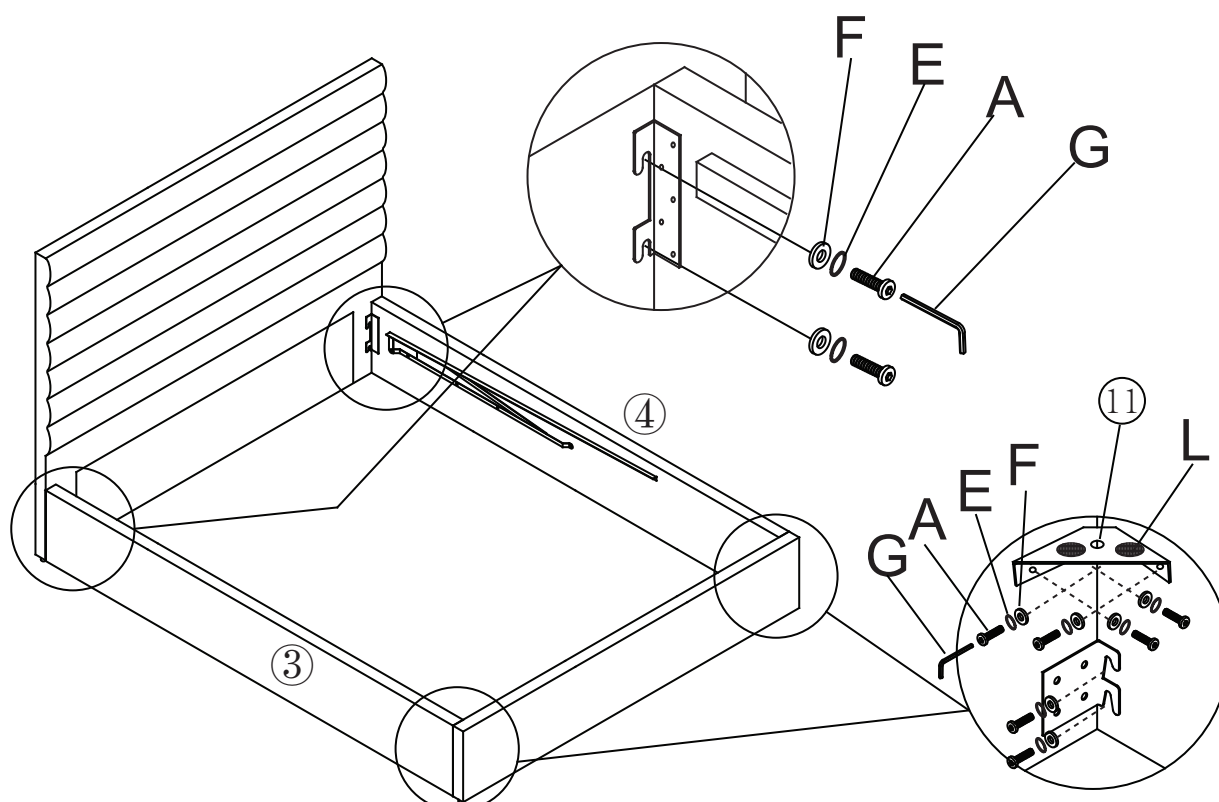


## Step 3

|                                                                                                                    |                                                                                                              |                                                                                                                 |                                                                                                                 |  |
|--------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|--|
| <b>(B)</b> x4<br>M8x40mm Bolt<br> | <b>(D)</b> x4<br>M8 Nut<br> | <b>(G)</b> x1<br>Allen Key<br> | <b>(H)</b> x1<br>Spanner<br> |  |
|--------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|--|

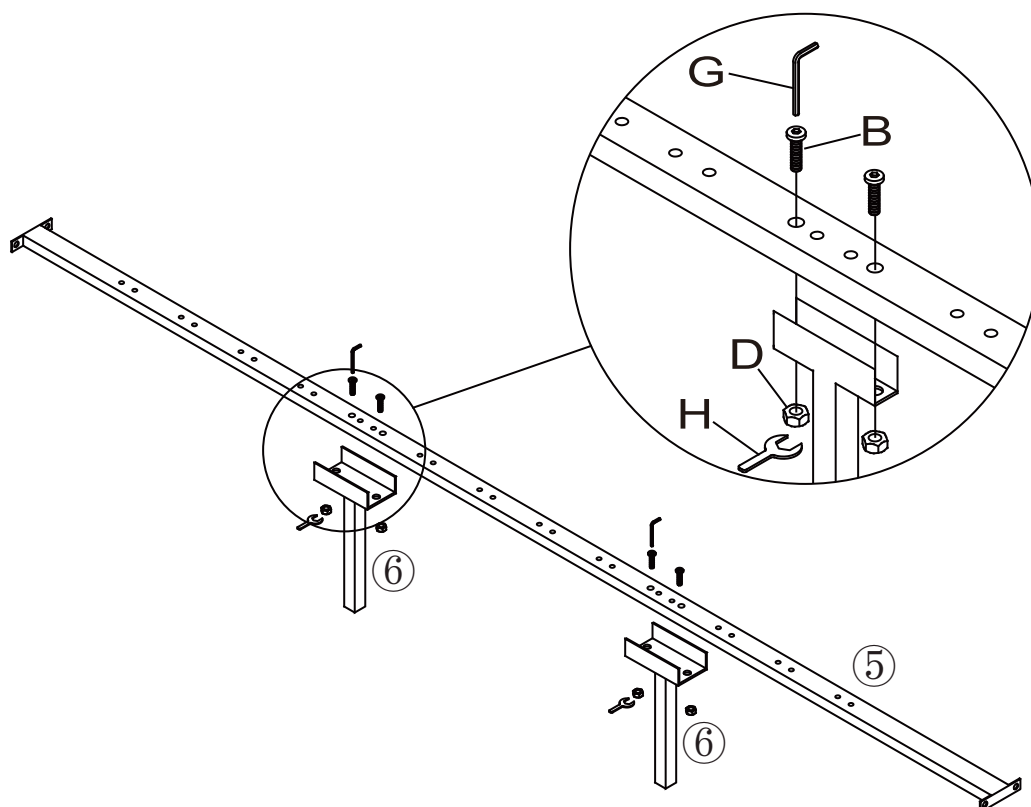


## Step 4

|                                                                                                                       |                                                                                                                 |                                                                                                                   |                                                                                                                   |                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>(B)</b> x20<br>M8x40mm Bolt<br> | <b>(D)</b> x20<br>M8 Nut<br> | <b>(G)</b> x1<br>Allen Key<br> | <b>(H)</b> x1<br>Spanner<br> | <b>(I)</b> x1<br>Lift Strap<br>        |
|                                                                                                                       |                                                                                                                 |                                                                                                                   |                                                                                                                   | <b>(K)</b> x4<br>Plastic Connector<br> |

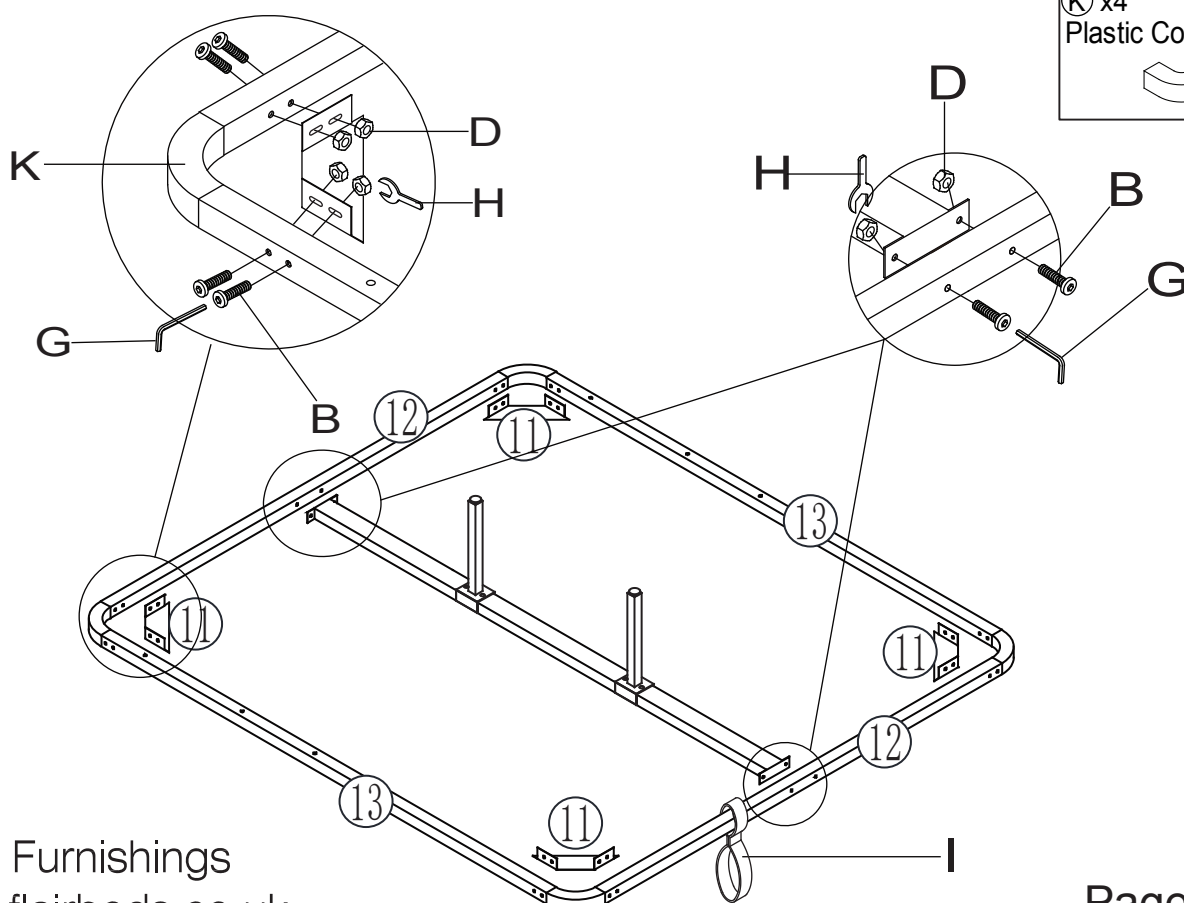

## Step 5

|                                                                                                                         |                                                                                                                   |                                                                                                                      |                                                                                                                      |  |
|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--|
| <b>Ⓑ x6</b><br><b>M8x40mm Bolt</b><br> | <b>Ⓓ x6</b><br><b>M8 Nut</b><br> | <b>Ⓖ x1</b><br><b>Allen Key</b><br> | <b>Ⓗ x1</b><br><b>Spanner</b><br> |  |
|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--|

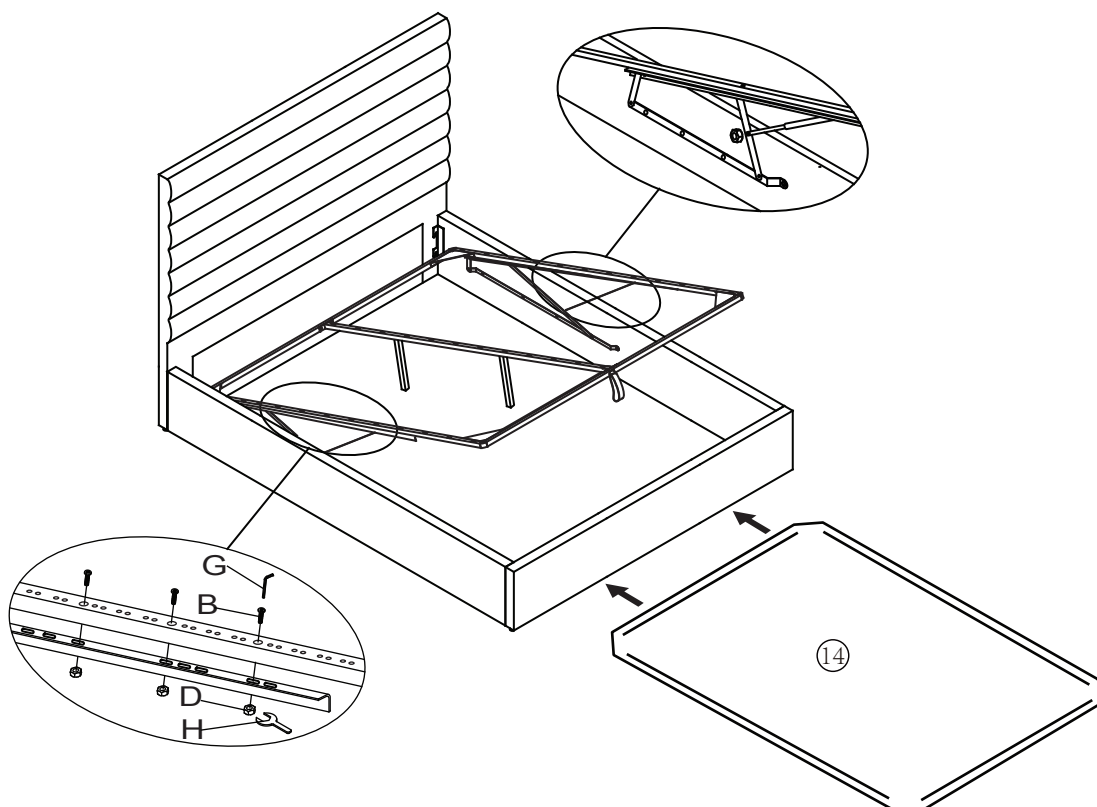

## Step 6

|                                                                                                                               |  |  |  |  |
|-------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|
| <b>Ⓙ x1</b><br><b>Mattress Stopper</b><br> |  |  |  |  |
|-------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|

