










ASSEMBLY INSTRUCTIONS

Tiggy Single Ottoman Bed



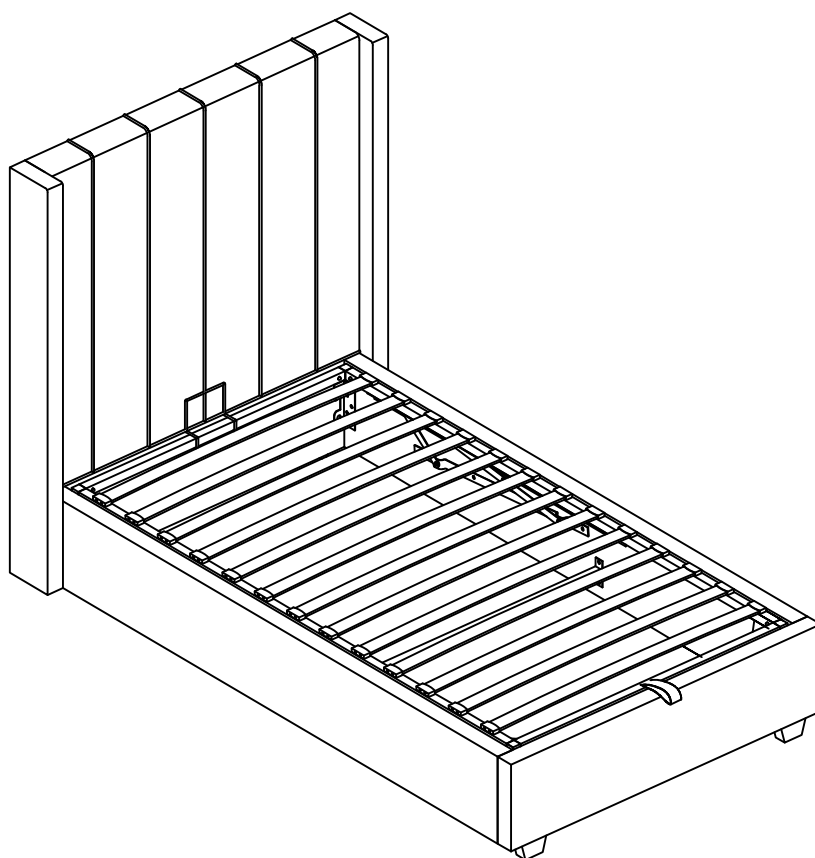


Assembly in 30 minutes for two adults

Parts List

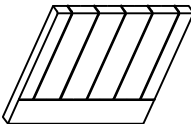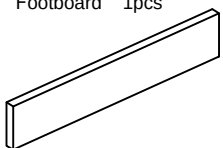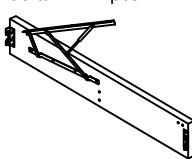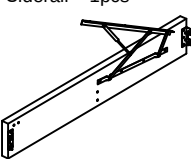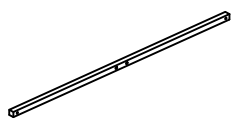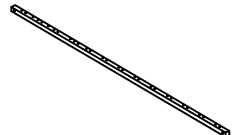1 Headboard 1pcs 	2 Footboard 1pcs 	3 Siderail A 1pcs 	4 Siderail 1pcs 
5 Cross Rail of Metal Frame 2pcs 	6 Siderail of Metal Frame 2pcs 	7 Wooden Slats 13pcs 	8 Single Plastic Cap 26pcs 
9 Cross Rail-Centre 1pcs 	10 Bed Feet 2pcs 	11 Storage Frame Connector 4pcs 	12 Digging rope 1pcs 
13 Corner Angle Bracket 2pcs 	14 Non-woven fabric 1pcs 	15 Mattress Stopper 1pcs 	16 Wingback 2pcs 

Hardware List

A Bolt M8*30 16pcs 	B Bolt M8*40 6pcs 	C Nut 6pcs 	D Washer 8pcs 
E Washer 16pcs 	F Allen Key M5 1pcs 	G Socket Spanner 1pcs 	H Screwdriver 1pcs 
J Bolt M8*50 8pcs 	K Bolt M8*25 4pcs 		

PARTS LIST

Carton 1 of 2:

Part	Description	Qty
1	Headboard	1
7	Wooden Slats	13
8	Single Plastic Cap	26
14	Non-woven Fabric	1
16	Wingback	2


Carton 2 of 2:

Part	Description	Qty
2	Footboard	1
3	Siderail A	1
4	Siderail B	1
5	Cross Rail of Metal Frame	2
6	Siderail of Metal Frame	2
9	Cross Rail-Centre	1
10	Bed Feet	2
11	Storage Frame Connector	4
12	Digging Rope	1
13	Corner Angle Bracket	2
15	Mattress Stopper	1
	Assembly Instructions	1
	Hardware	1


HARDWARE LIST:Carton 2 of 2

Part	Description	Qty
A	Bolt M8*30 	16
B	Bolt M8*40 	6
C	Nut 	6
D	Washer 	8
E	Washer 	16
F	Allen Key 	1
G	Socket Spanner 	1
H	Screwdriver 	1
J	Bolt M8*50 	8
K	Bolt M8*25 	4

The bed slats 7 and plastic caps 8 are in the back of headboard.
Please take them out before you assemble the bed.

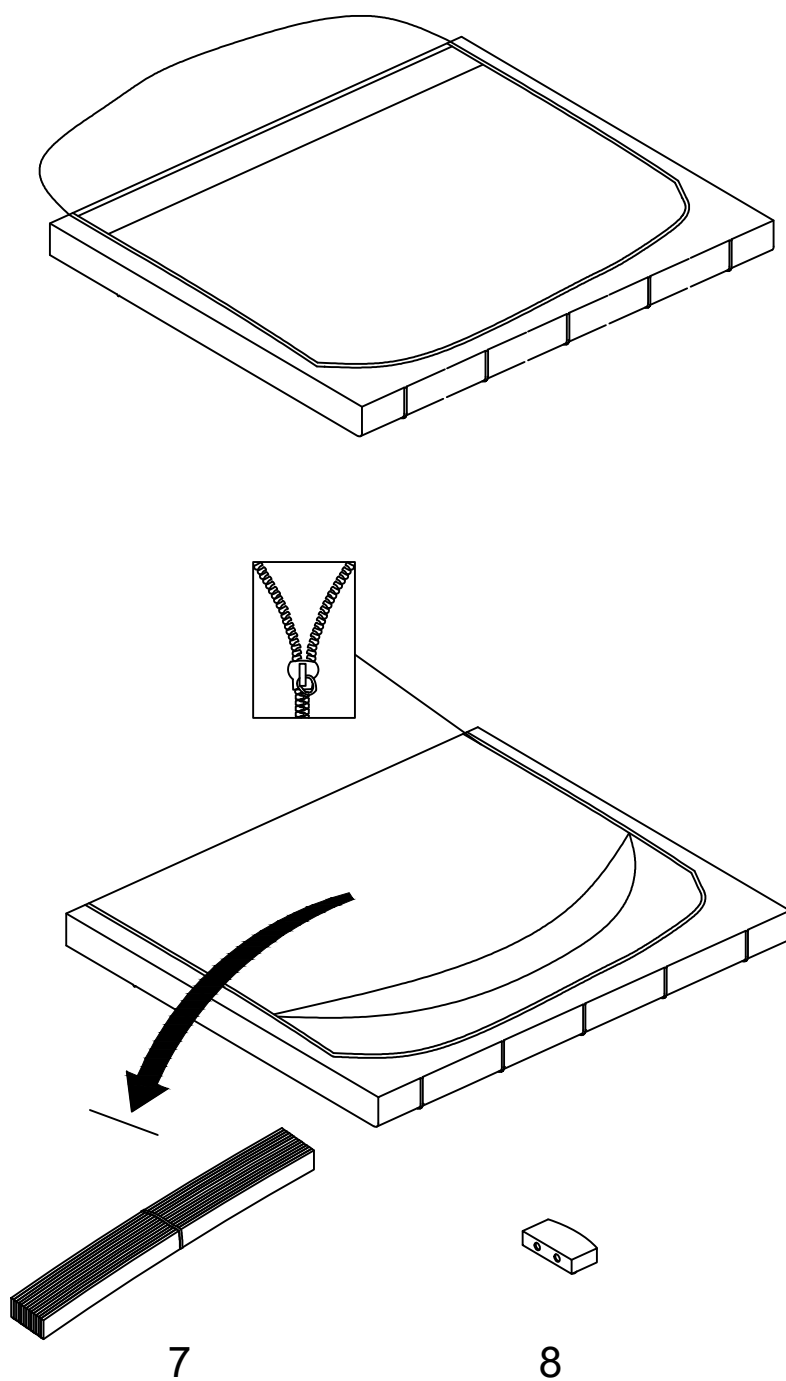


Step 1

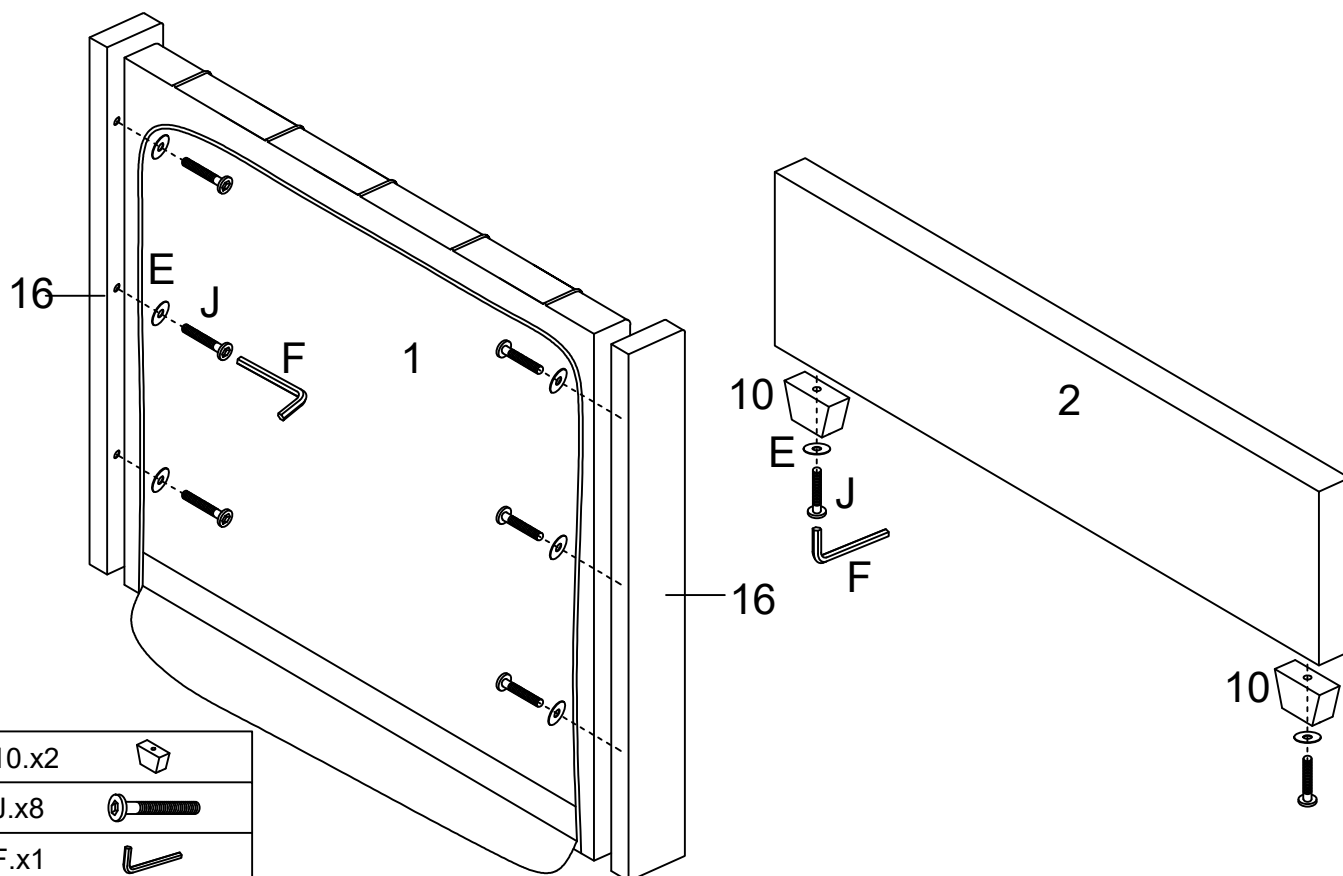


10.x2	
J.x8	
F.x1	
E.x8	

Step 2

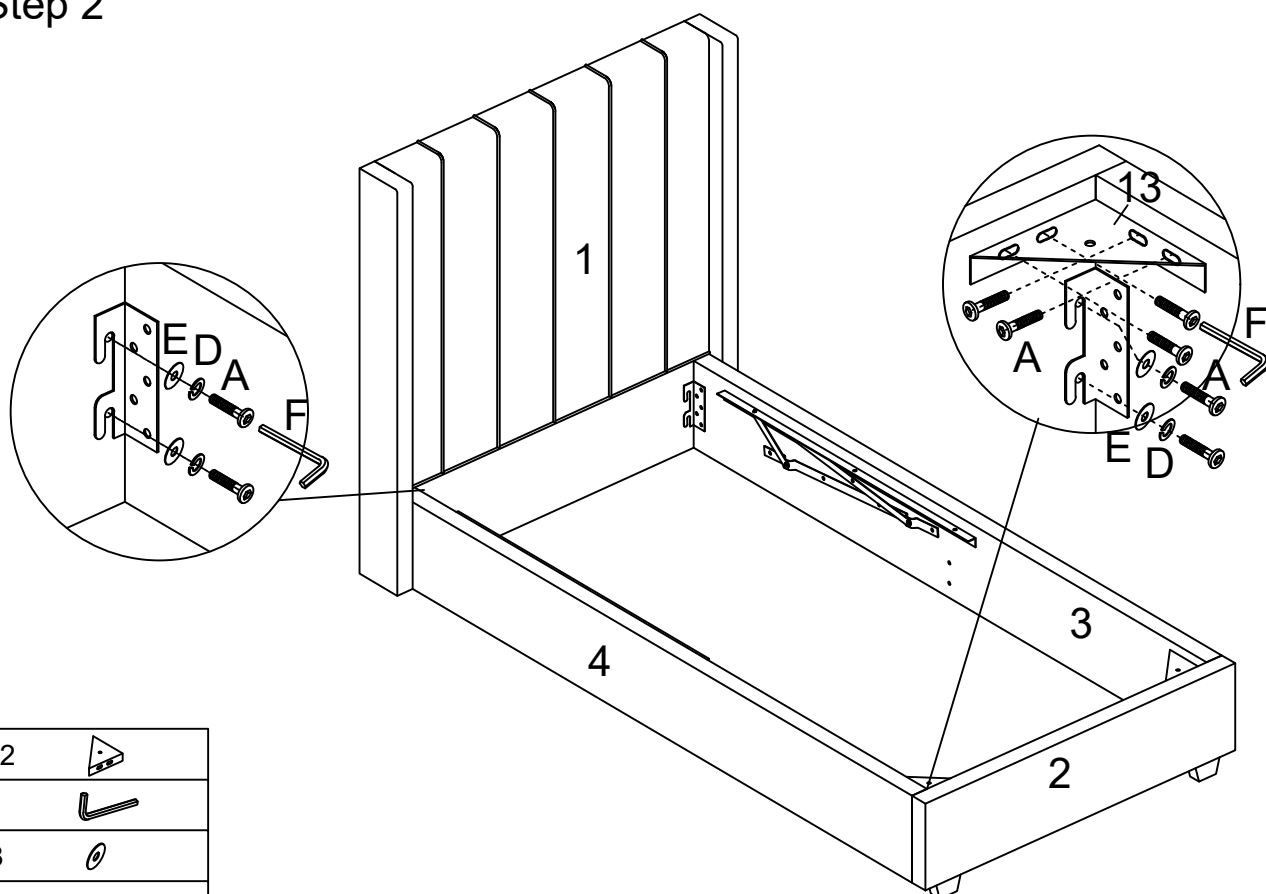

13.x2	
F.x1	
E.x8	
D.x8	
A.x16	


Step 3

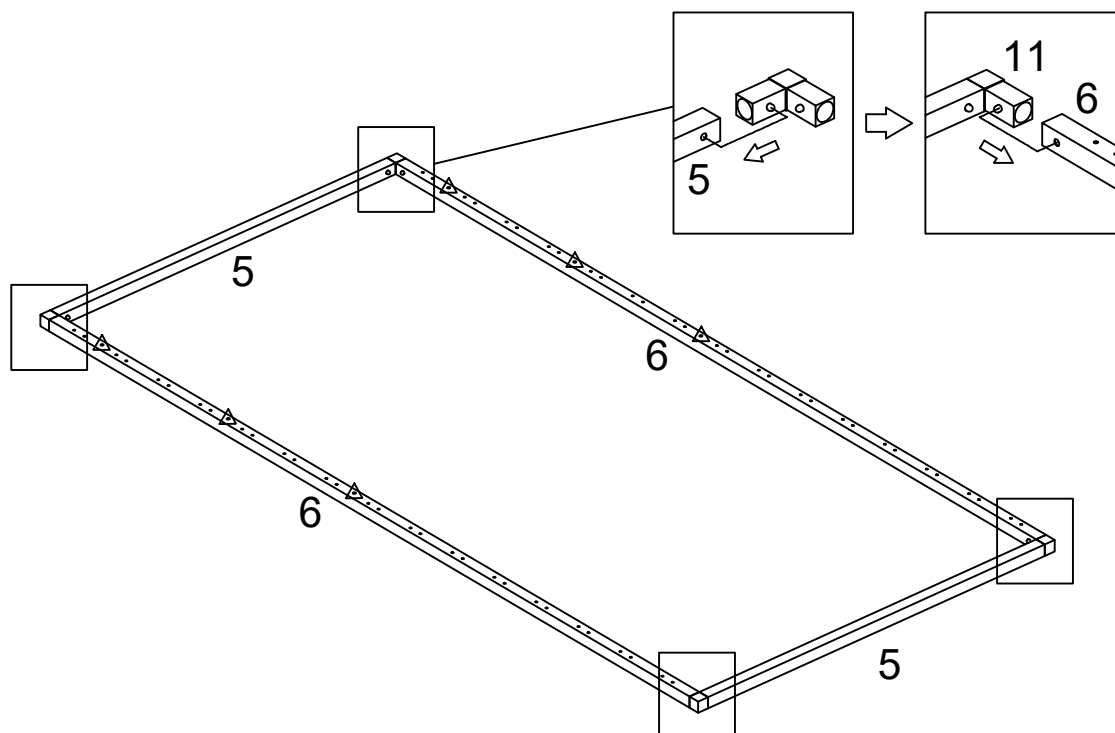

11.x4



Step 4

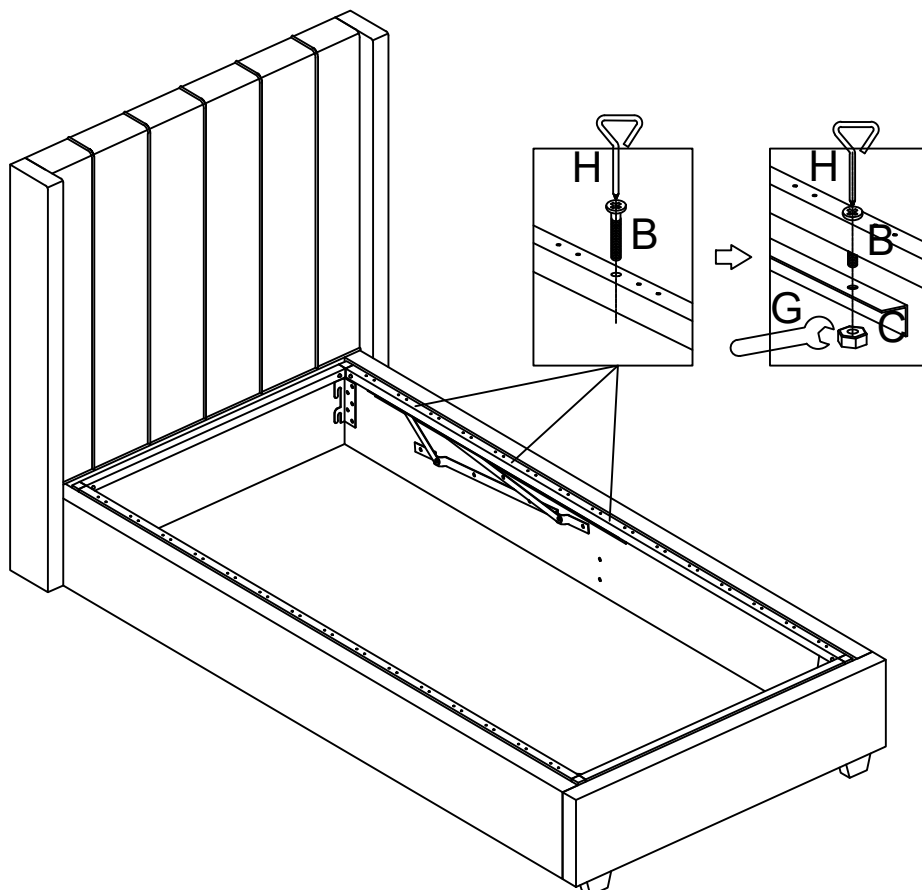

H.x1



G.x1




C.x6



B.x6




Step 5

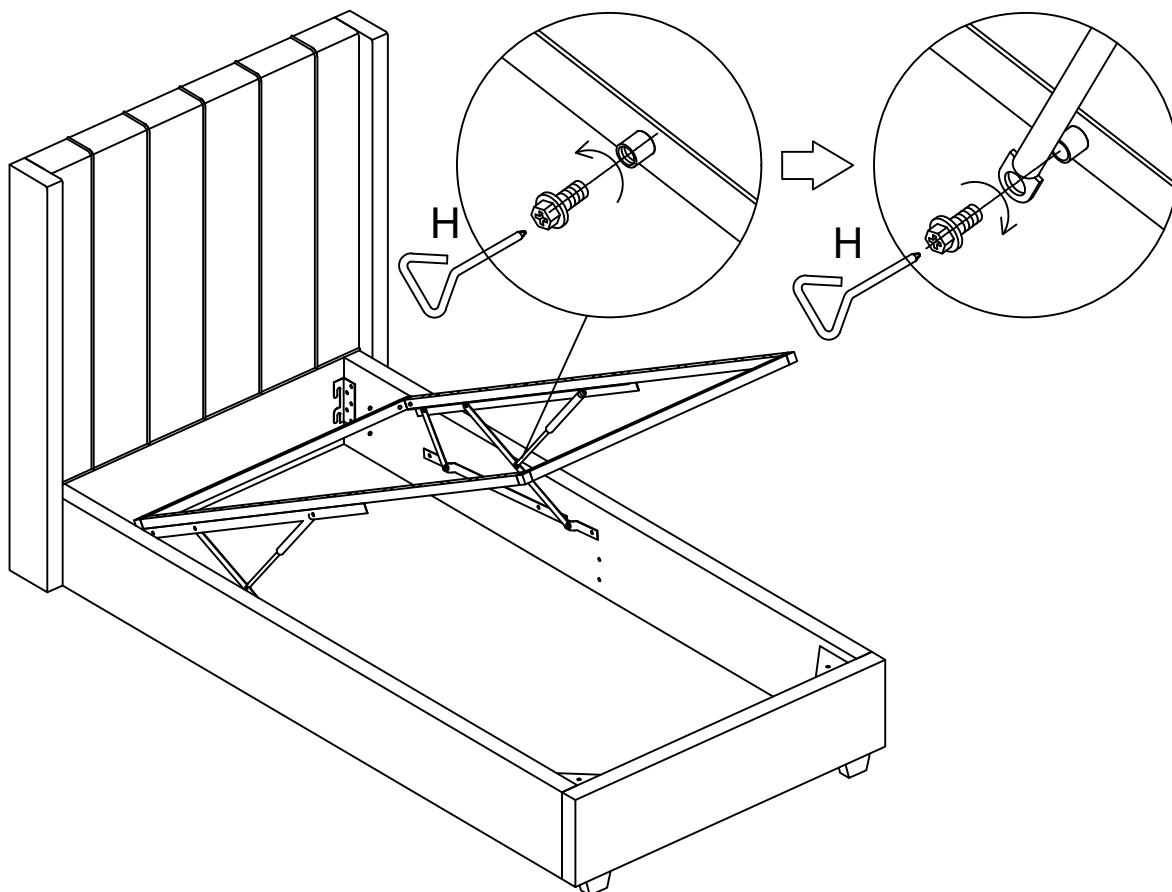

H.x1



Step 6

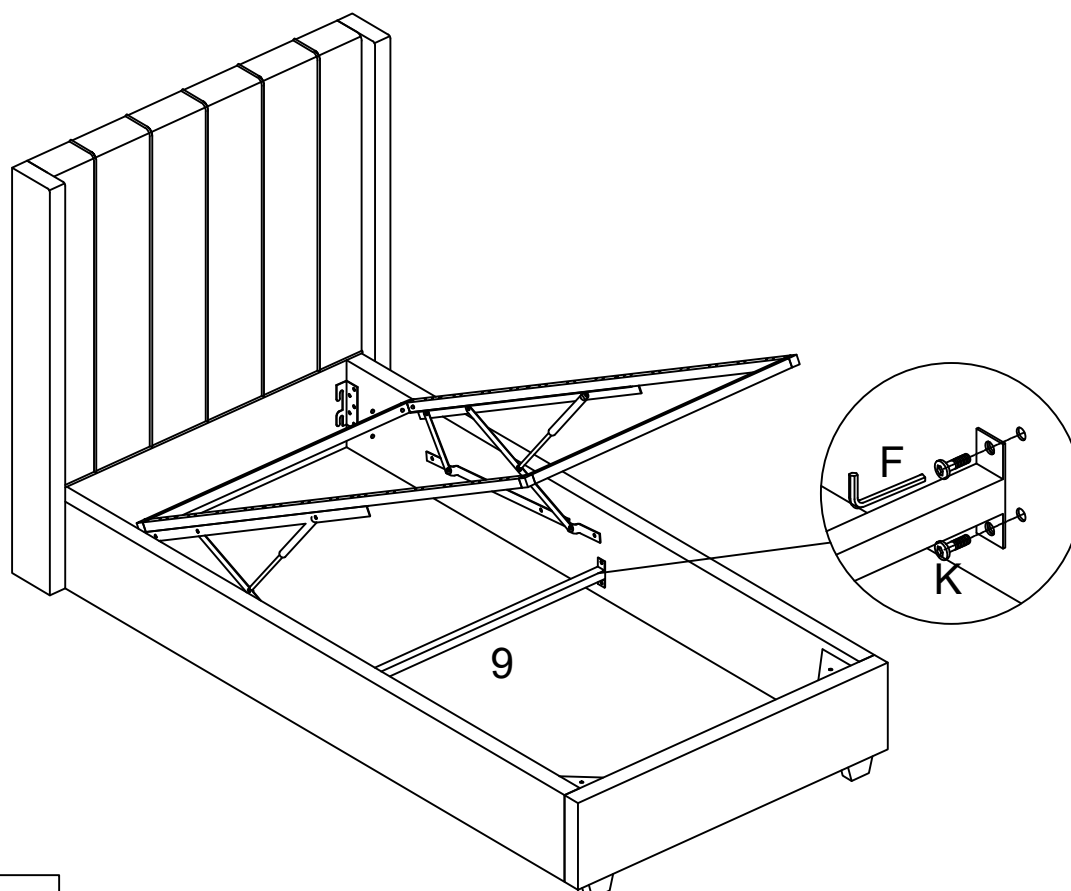


K.x4



F.x1



Step 7

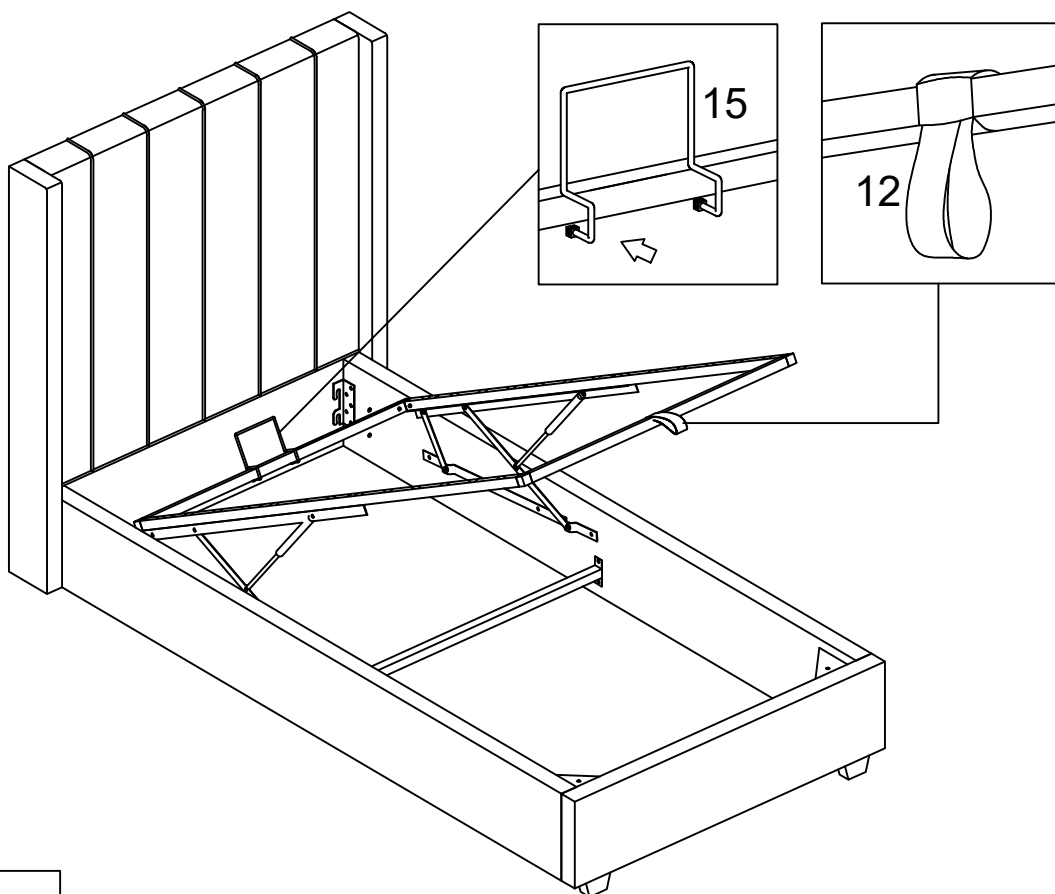


15.x1



12.x1



Step 8

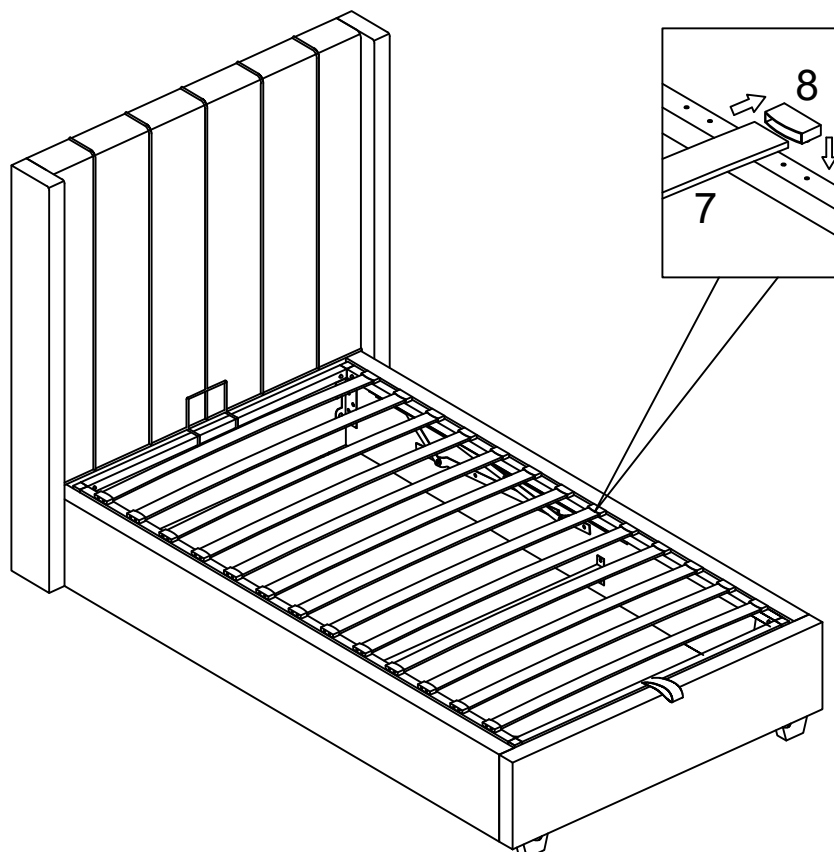


8.x26




7.x13



Step 9

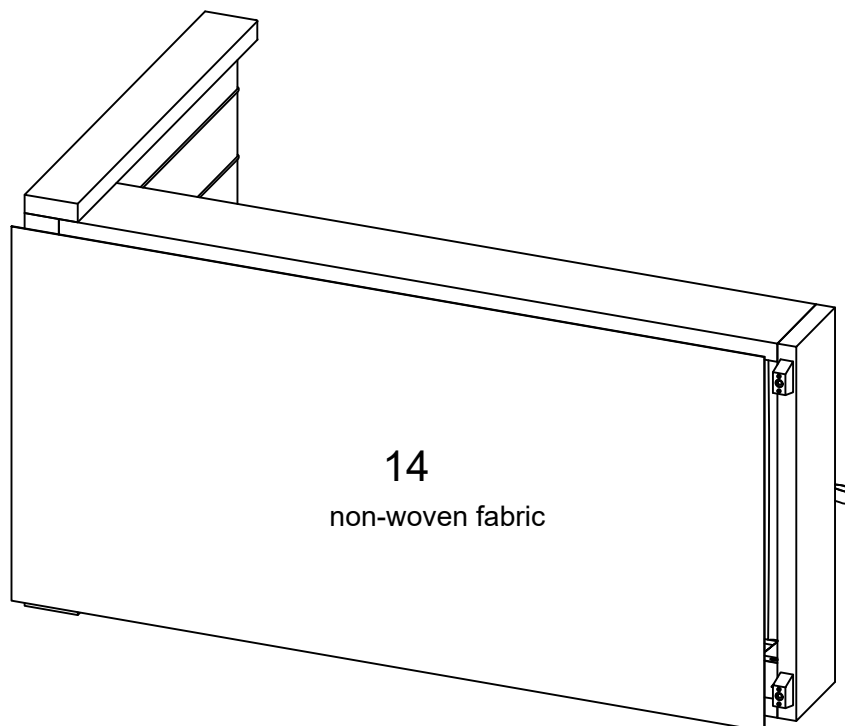

Stick non-woven fabric
to the bottom of the bed.



14x1



Step 10

