

SOLACE+CO

MODEL : SVEDB-CRM

PARTS LIST

Carton 1 of 3:

Part	Description	Qty.
A1	HEADBOARD LEFT	1
A2	HEADBOARD RIGHT	1
G	NIGHT STAND	2

Carton 2 of 3:

Part	Description	Qty.
B	FOOTBOARD	1

Carton 3 of 3:

Part	Description	Qty.
C	SIDE RAIL	2
D	SLAT	12
E	CENTER RAIL	1
F	SUPPORT LEG	2


HARDWARE LIST

HARDWARE LIST: Carton 3 of 3


Part	Description	Qty.
1	JCBB M8 X 30mm 	8
2	JCBC M6 X 40mm 	2
3	M5 X 70mm 	1
4	M4 X 65mm 	1
5	CSK M4 X 25mm 	1
6	CSK M4 X 32mm 	27
7	Small Adjuster 	2
8	U Bracket 	1
9	Spring Washer 	10
10	Flat Washer 	10
11	JCBC M6 X 50mm 	2
12	CSK M3.5 X 16mm 	4
13	JCBC M6 X 60mm 	8

ASSEMBLY INSTRUCTION


Step 1 : Unzip the black non-woven fabric on the back of headboard (A1). Tighten the headboard (A1+A2) as shown.

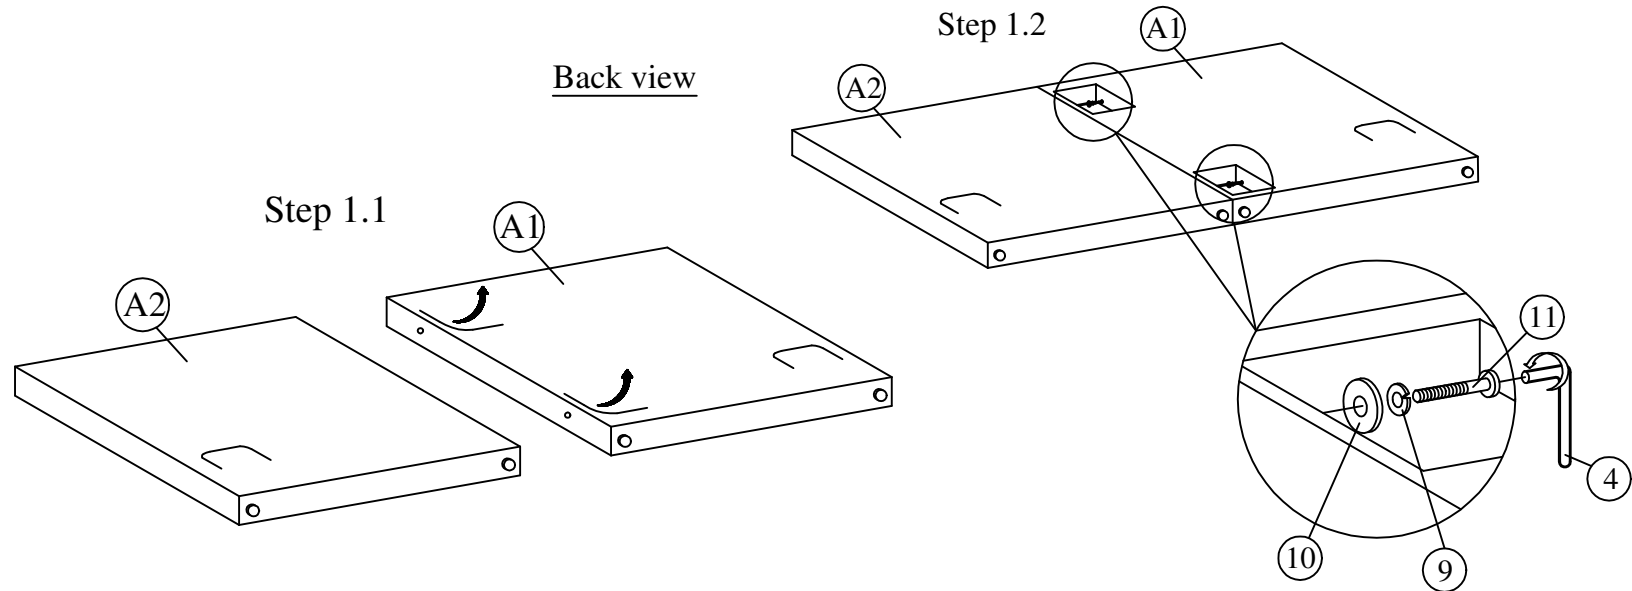


Step 2 : Attach U bracket (8) to headboard (A1+A2) as shown.

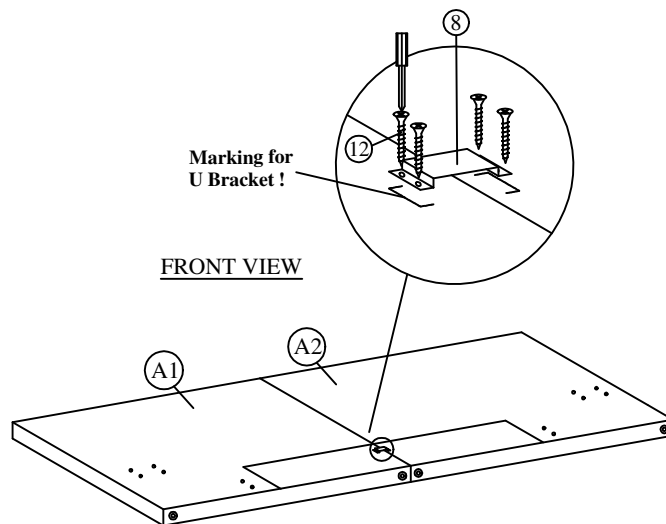


Step 3 : Attach side rail (C) to footboard (B) and headboard (A) with JCBB (1).

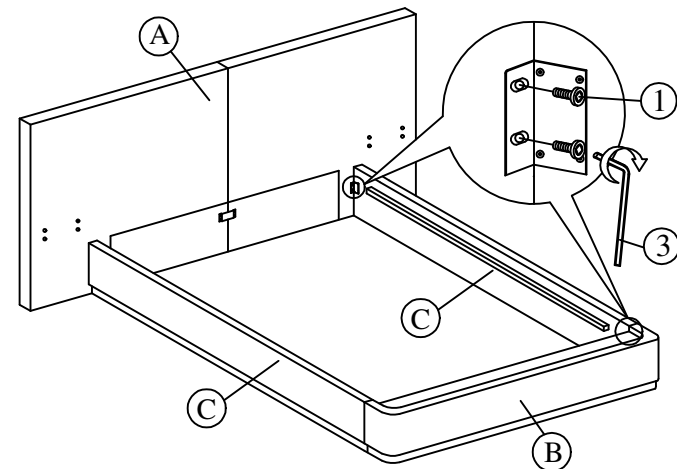


Step 4 : Attach the night stand (G) to the headboard (A) as shown.

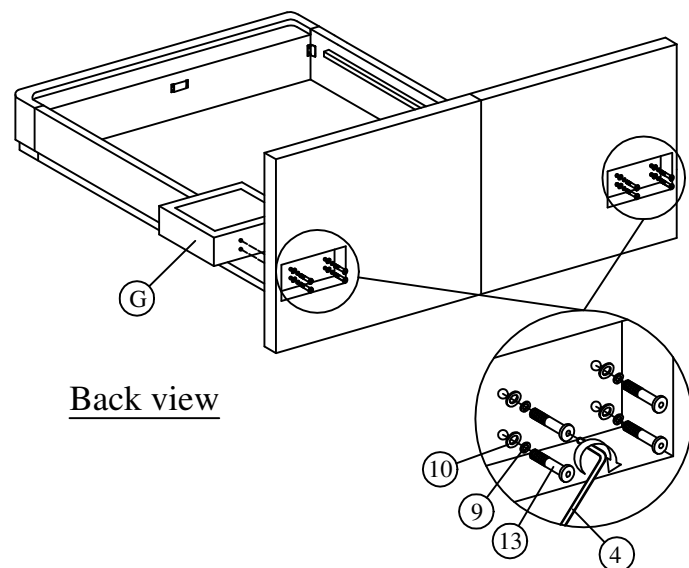

Step 5 : Attach the support legs (F) to the center rail (E) of the bed as shown.

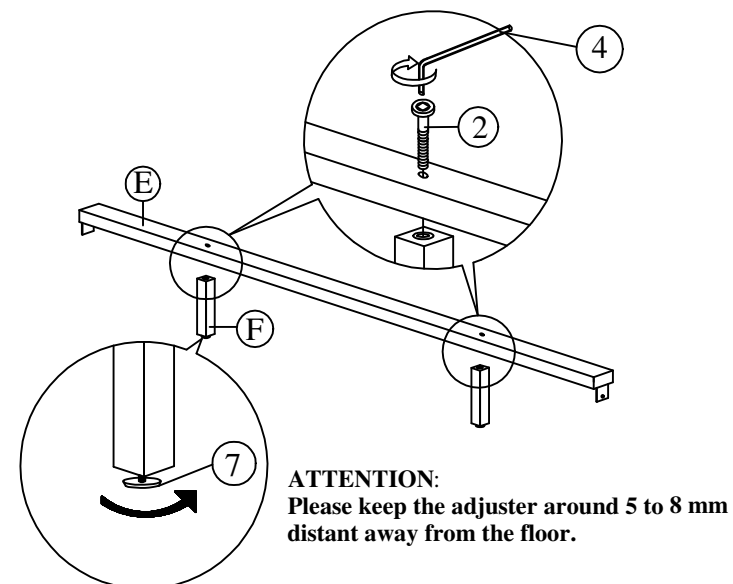

Step 6 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (5) using screw driver (not included) to the headboard (A) and footboard (B).

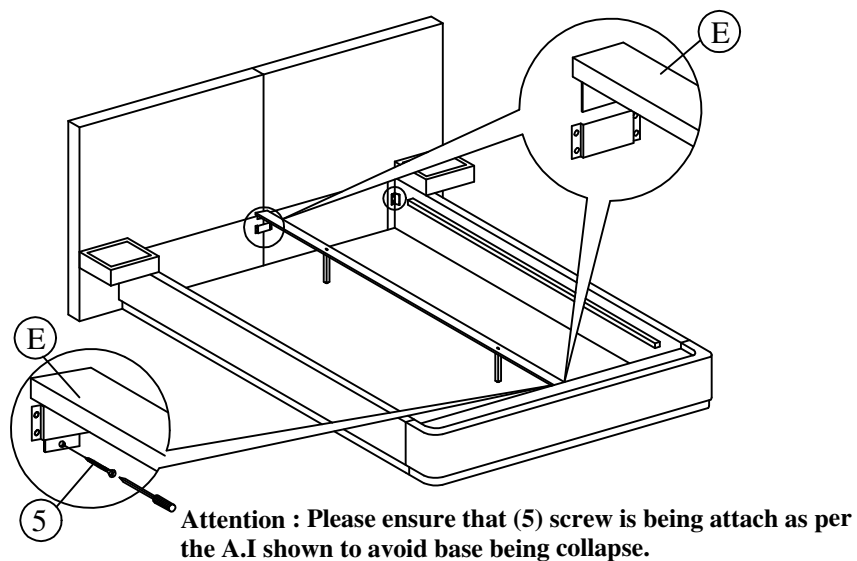

Step 7 : Affix the slat (D) to the side rail support wood and the center rail (E). Tighten the screw at all the four corner.

