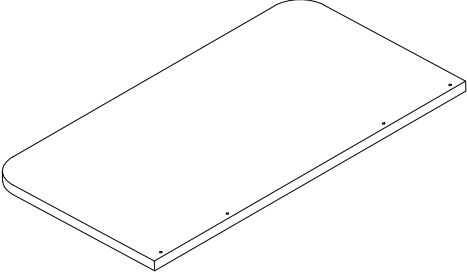
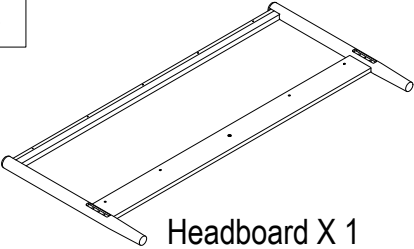
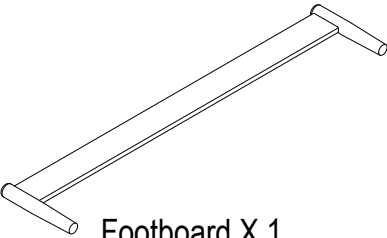
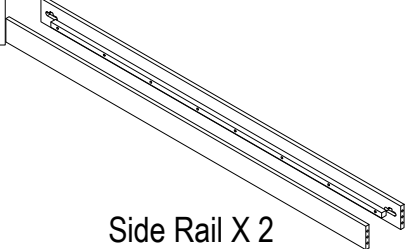
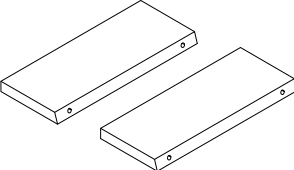
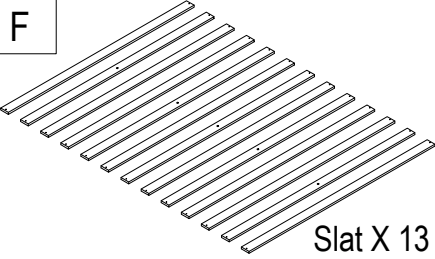
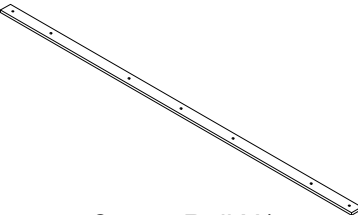
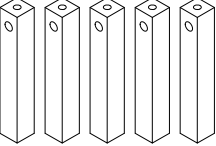





ASSEMBLY TIPS : Remove hardware from box and sort by size. Check that all hardware and parts are present before assembling. Following instruction below in proper sequence to ensure fast, easy and correct assembly.

WARNING : DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.


PART LIST

A  Headboard Cushion X 1	B  Headboard X 1	C  Footboard X 1
	D  Side Rail X 2	E  HB Support Panel X 2
F  Slat X 13	G  Center Rail X1	H  Support Leg X 5


HARDWARE LIST

1  JCBC M6 x 60MM=4pcs	2  JCBC M6 x 30MM=8pcs	3  JCBC M6 x 16MM=4pcs	4  JCBB M8 x 70MM=5pcs	5  Wood Dowel 10 x 30mm=8pcs
6  Spring Washer M6=4pcs	7  Bend Washer 3014=4pcs	8  L -Bracket=2pcs	9  Flat Washer M6=4pcs	10  Adjuster Screw=5pcs
11  Barrel Nut M8=5pcs	12  CSK M4 x 25MM=31pcs	13  Allen Key M4 x 100MM With Ball=1pc	14  Allen Key M5 =1pc	


Step 01

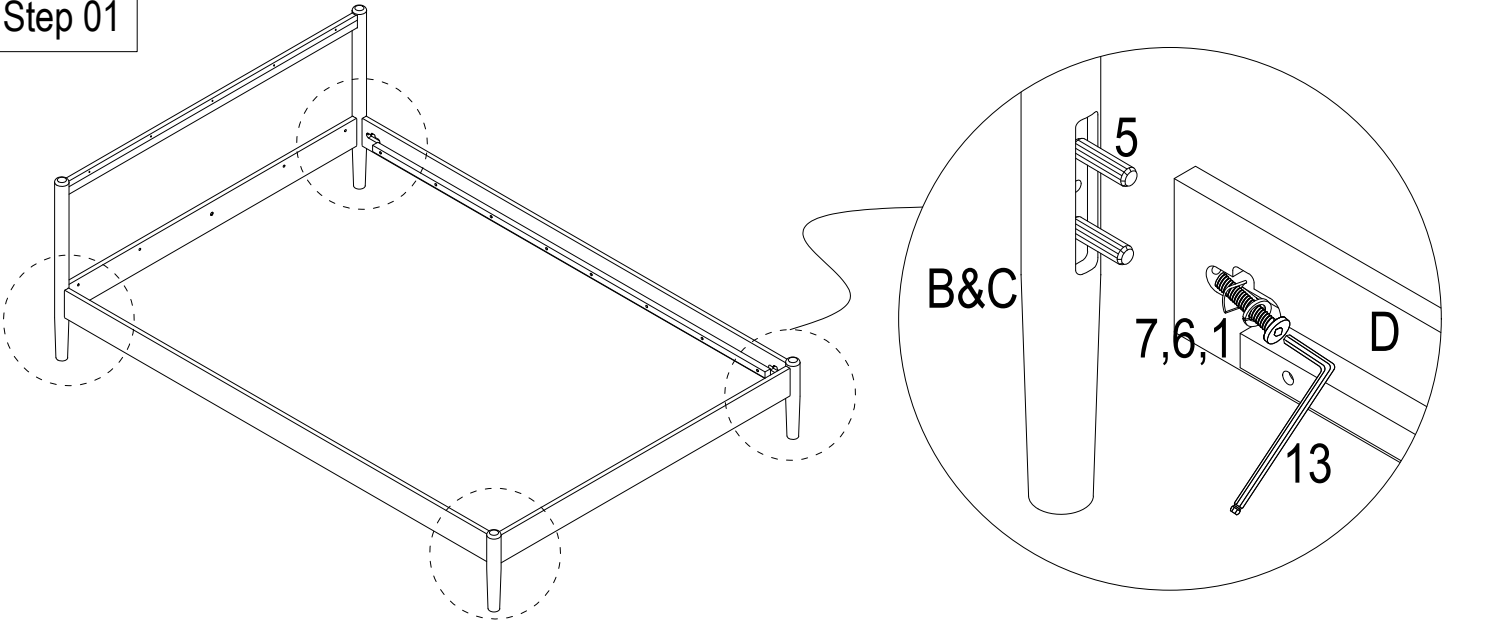


Step 02

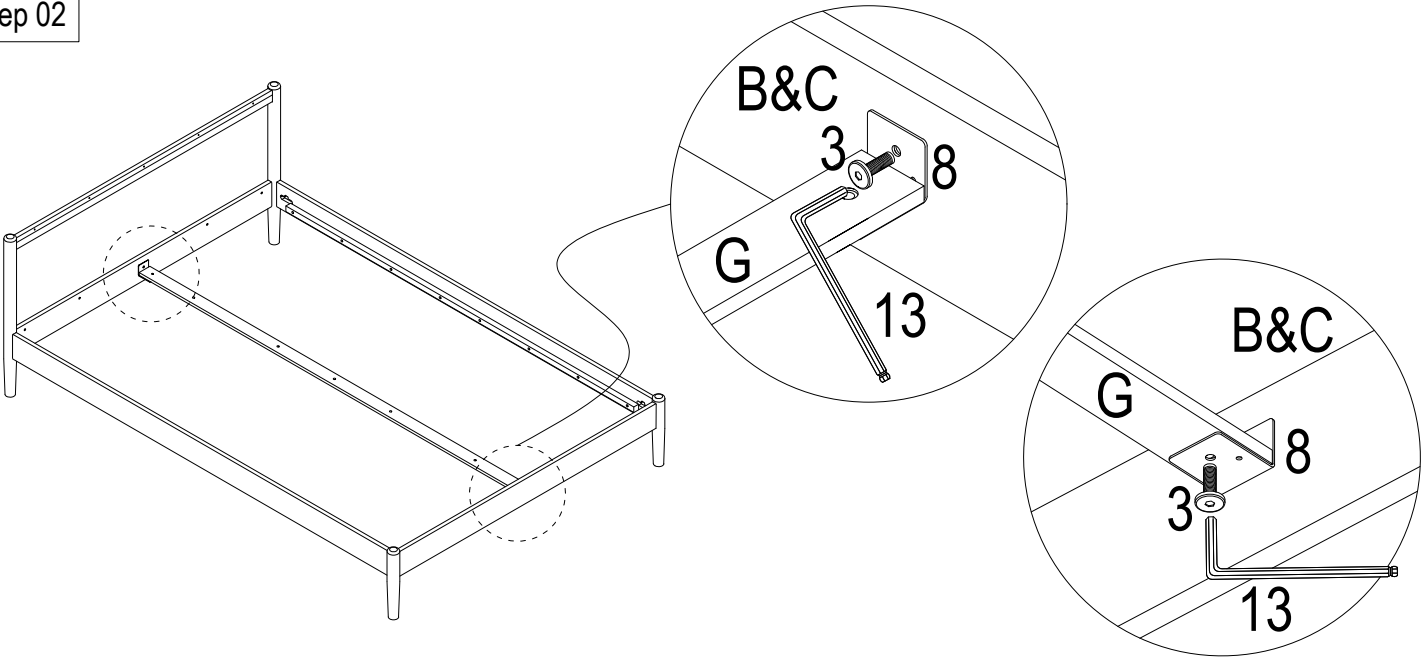


Step 03

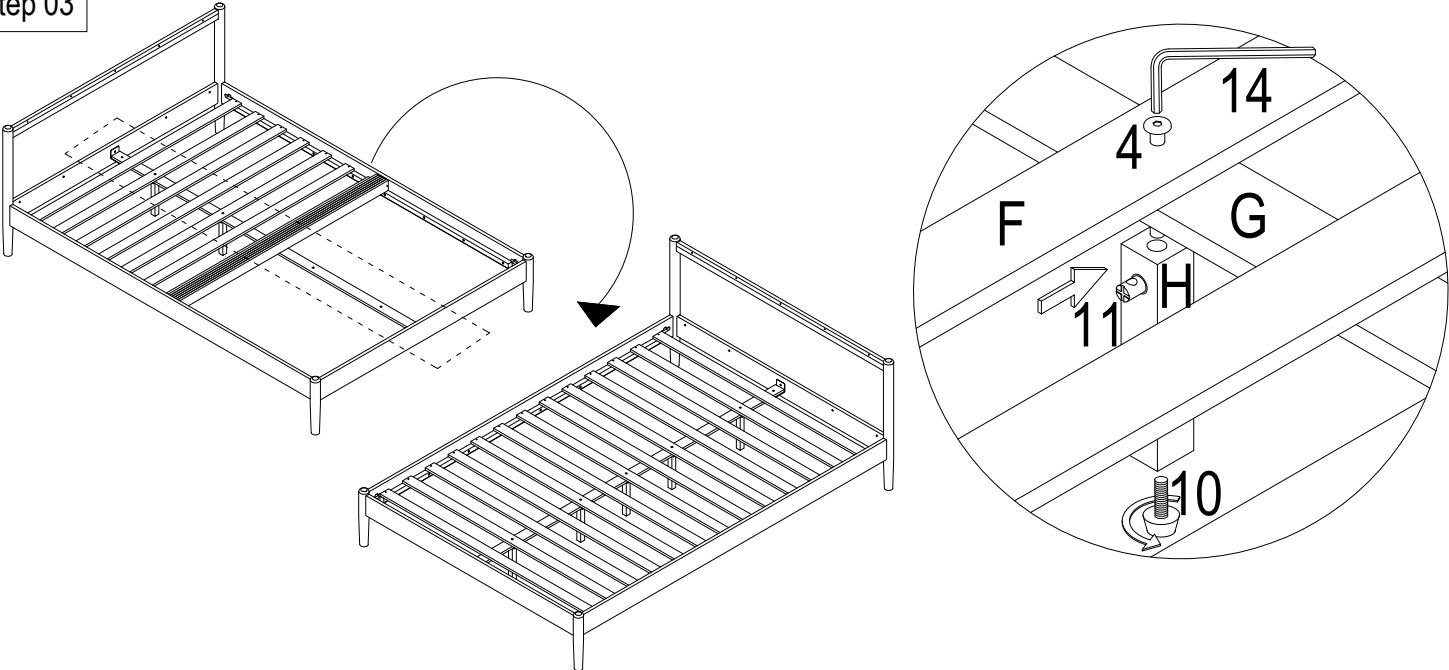



Step 04

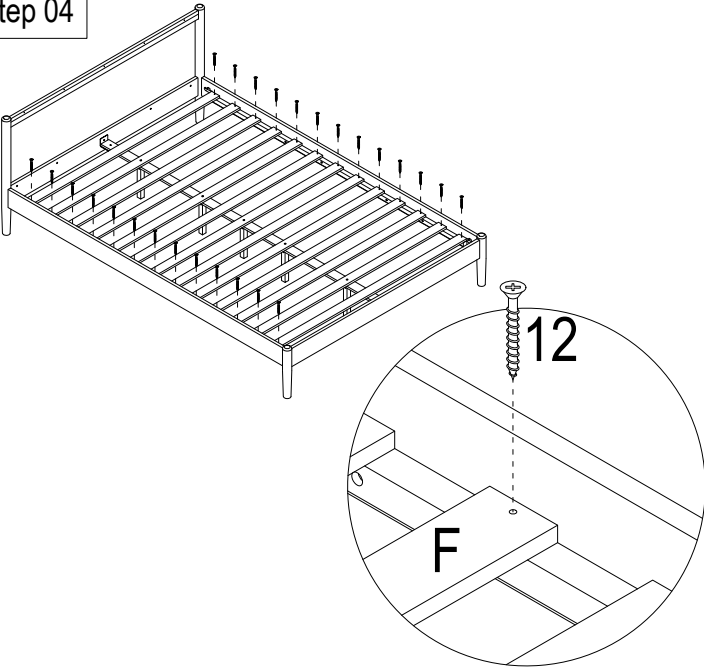




Step 05

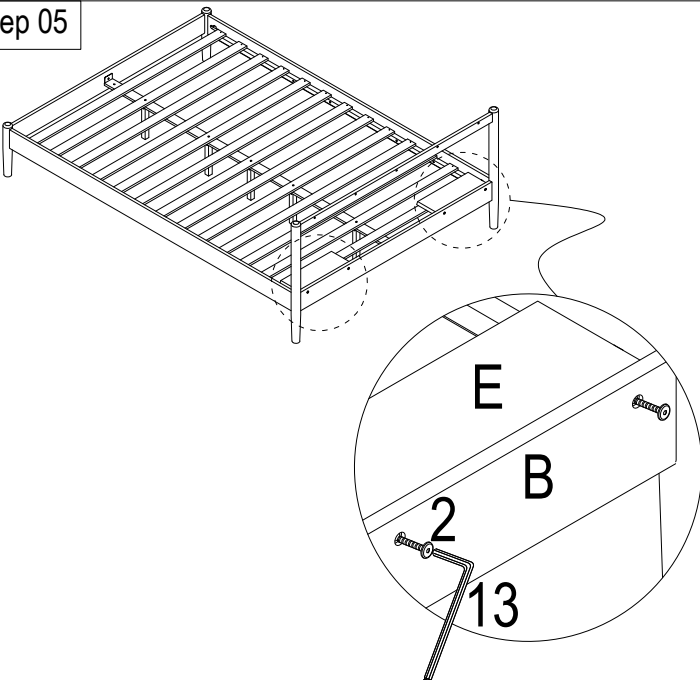

Step 06

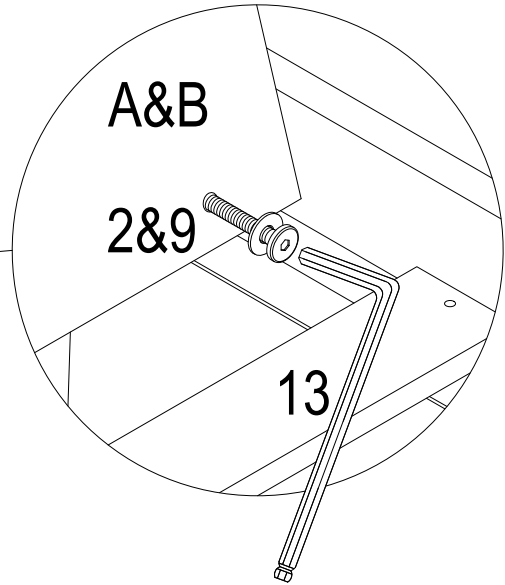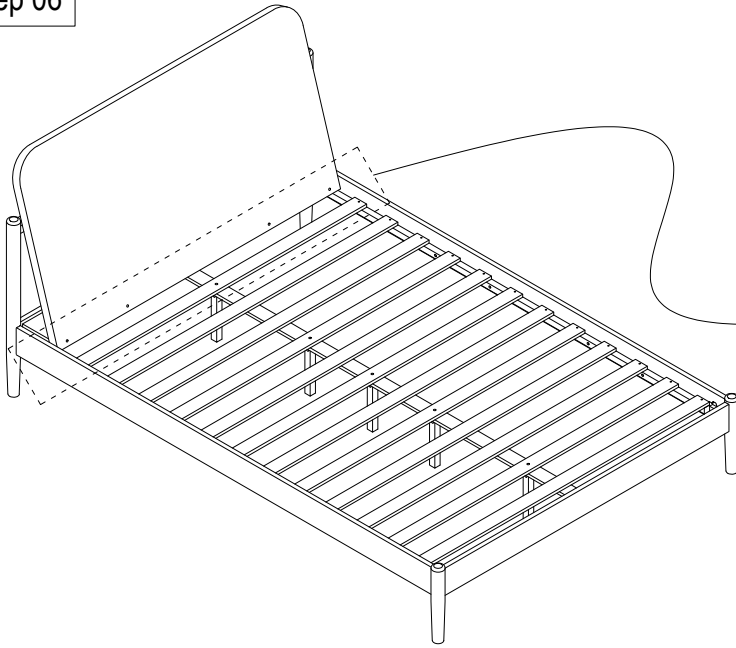

Step 07

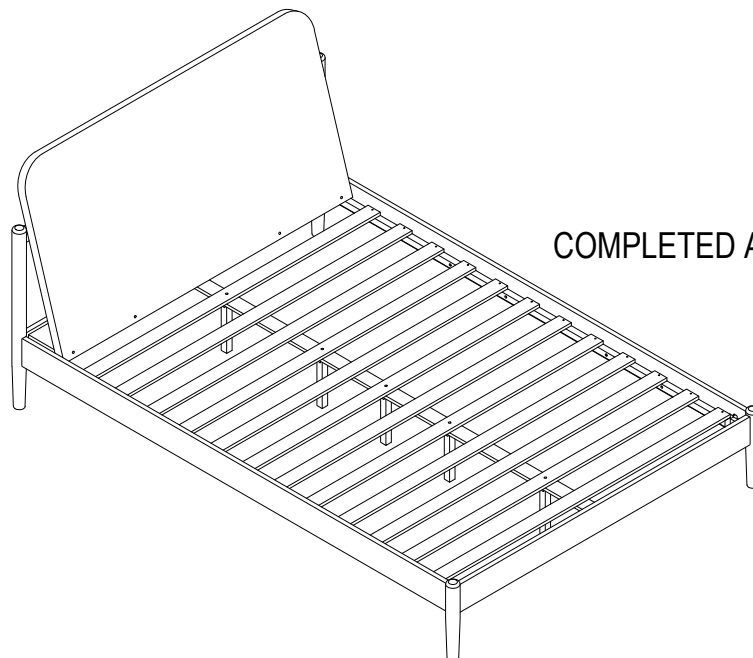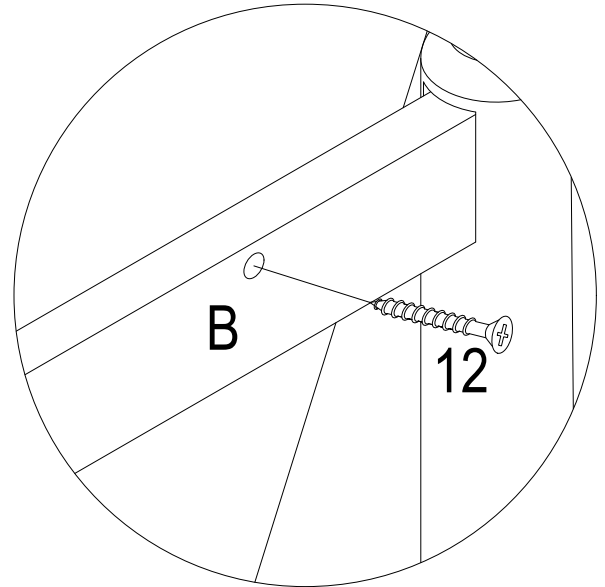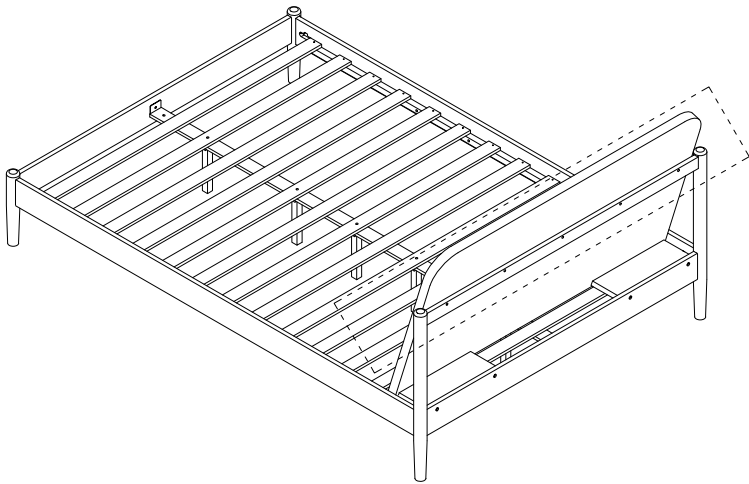

COMPLETED ASSEMBLY