



MODEL : FLAIR INES DAYBED WITH TRUNDLE CREAM
FINDBT

PARTS LIST

Carton 1 of 2:

Part	Description	Qty.
A	HEADBOARD	1
B	FOOTBOARD	1
C	UPPER SLAT	13
F	LEGS	4
G	BOTTOM SLAT	12
HARDWARE LIST		

Carton 2 of 2:


Part	Description	Qty.
D	SIDE RAIL	2
E	TRUNDLE PANEL	2

HARDWARE LIST: Carton 1 of 2


Part	Description	Qty.
1	M5 X 70mm 	1
2	M4 X 100mm 	1
3	JCBB M8 X 30mm 	8
4	JCBC M6 X 60mm 	8
5	CSK M3.5 X 16mm 	16
6	CSK M4 X 32mm 	76
7	ROLLER 	6
8	L-BRACKET 	4

ASSEMBLY INSTRUCTION


Step 1: Attach leg (F) to headboard (A) and footboard (B) as shown.

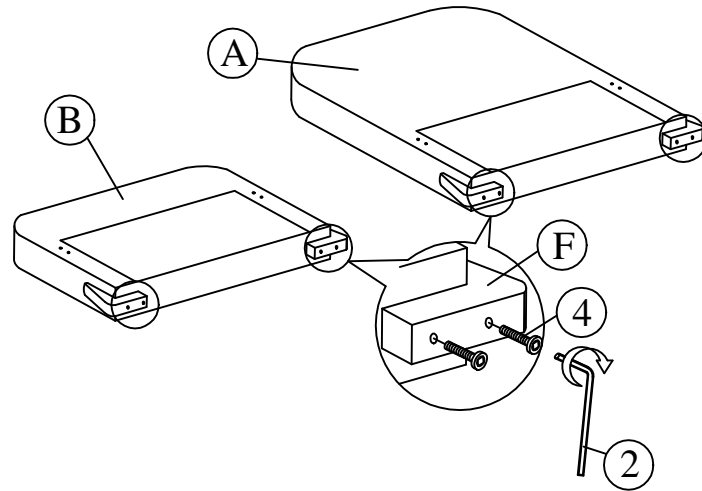


Step 2: Attach side rail (D) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

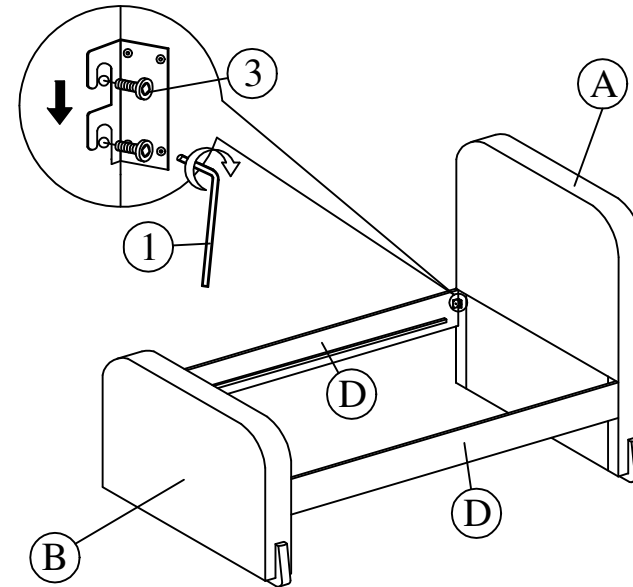


Step 3: Tighten the 4 Corner with Allen Key (1). Install the slats (C) to side rail. Tighten the slats with CSK screw (6).
The distance of the slats should be sufficient to obtain desirable bed stability.

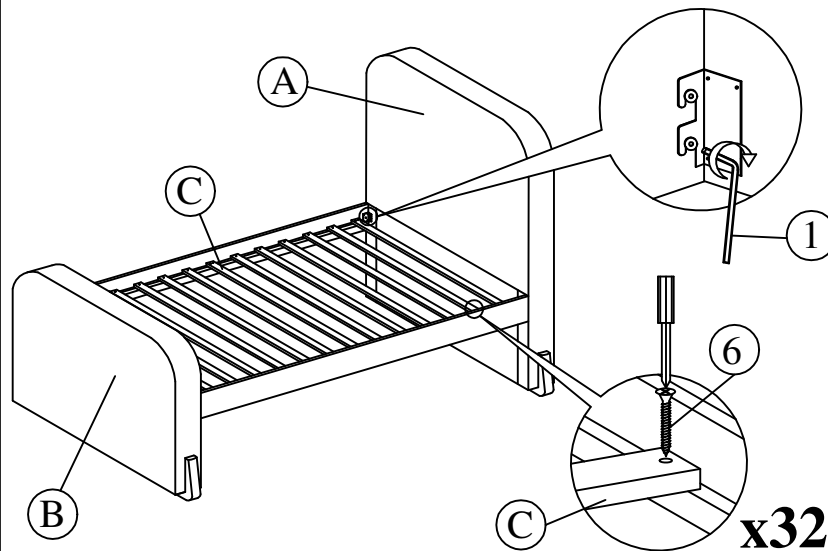


Step 4: Attach slat (G) to trundle panel (E) as shown.

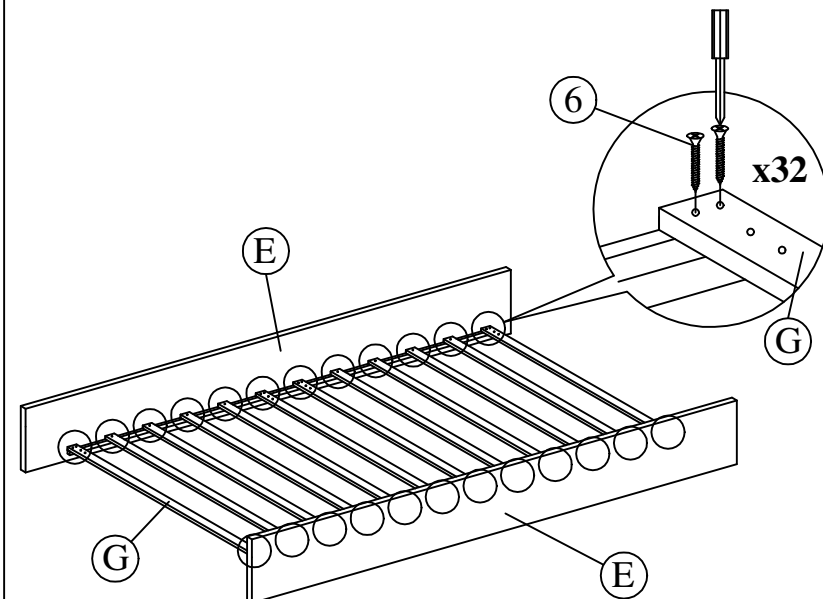

Step 5: Affix the L-Bracket (8) to the slat (G) as shown.

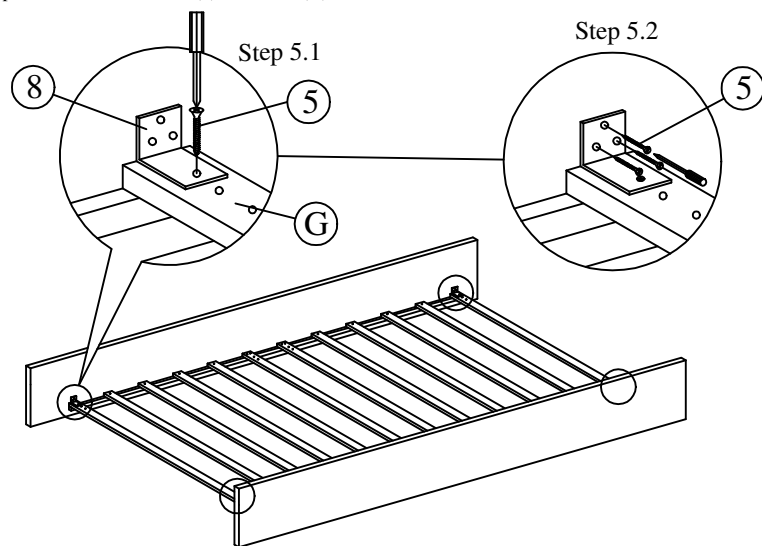

Step 6: Affix the roller (7) to the slat (G) as shown.

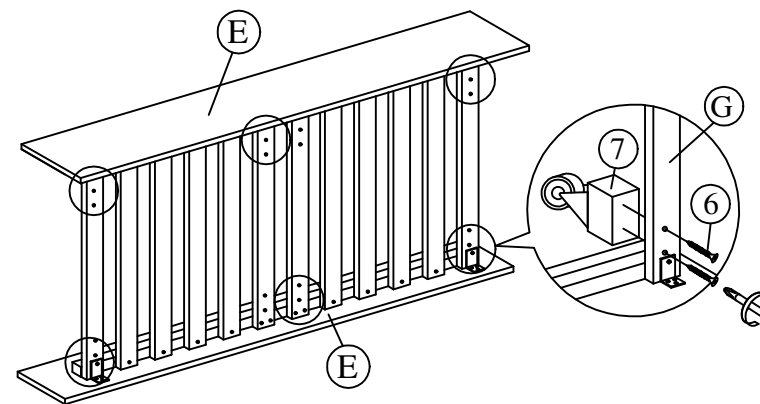

Step 7: Assembly is complete.

