



MODEL : FLAIR LIVIA DAYBED WITH TRUNDLE CREAM
FLIDBT

PARTS LIST

Carton 1 of 2:

Part	Description	Qty.
A	ARM	2
C	UPPER SLAT	13
H	BOTTOM SLAT	12
I	WOODEN BLOCK	4
HARDWARE LIST		

Carton 2 of 2:


Part	Description	Qty.
B	BACK PANEL	1
D	FRONT SIDE RAIL	1
E	BACK SIDE RAIL	1
F	TRUNDLE FRONT PANEL	1
G	TRUNDLE BACK PANEL	1

HARDWARE LIST: Carton 1 of 2


Part	Description	Qty.
1	M5 X 70mm 	1
2	M4 X 65mm 	1
3	JCBB M8 X 30mm 	8
4	JCBC M6 X 50mm 	4
5	M6 SPRING WASHER 	4
6	M6 FLAT WASHER 	4
7	ROLLER 	6
8	CSK M3.5 X 16mm 	40
9	CSK M4 X 32mm 	56
10	L-BRACKET 	4

ASSEMBLY INSTRUCTION


Step 1 : Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

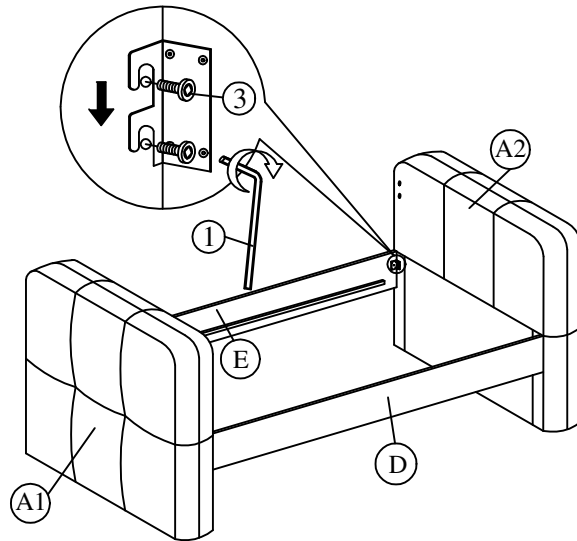


Step 2 : Attach the Back Panel (B) to the arm (A) as shown.

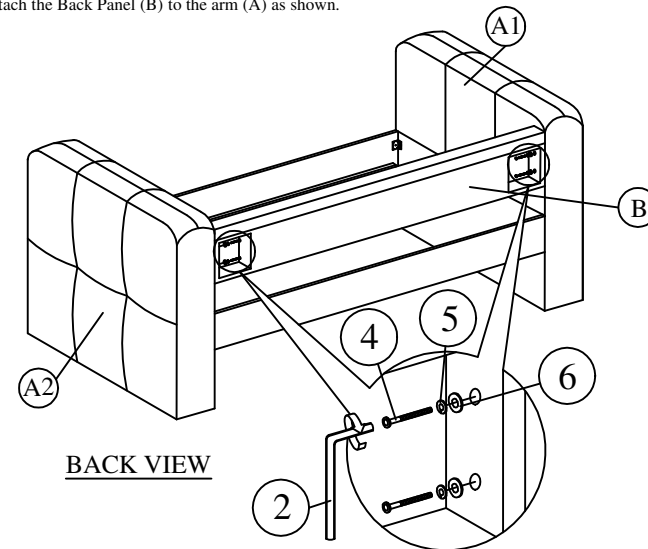


Step 3 : Tighten the 4 Corner with Allen Key (1). Install the slats to side rail. Tighten the slats with CSK screw (3). The distance of the slats should be sufficient to obtain desirable bed stability.

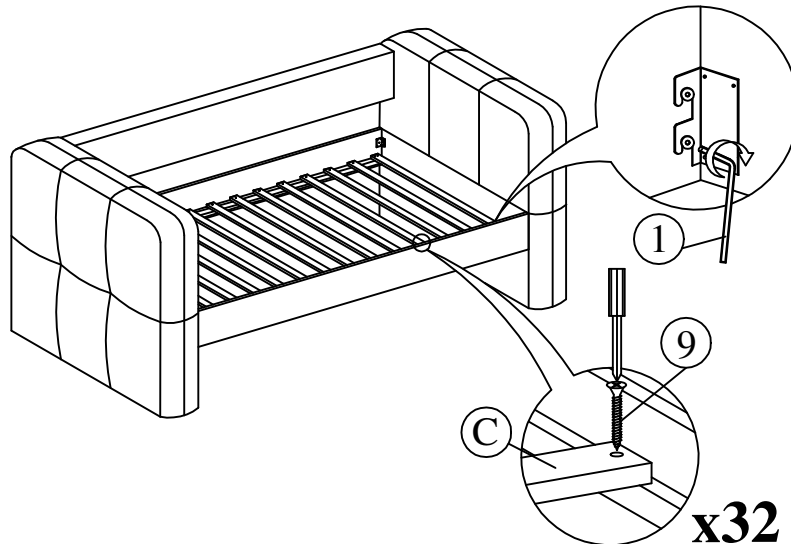


Step 4 : Affix the roller (7) to the slat (H) follow the marking on the slat (H).

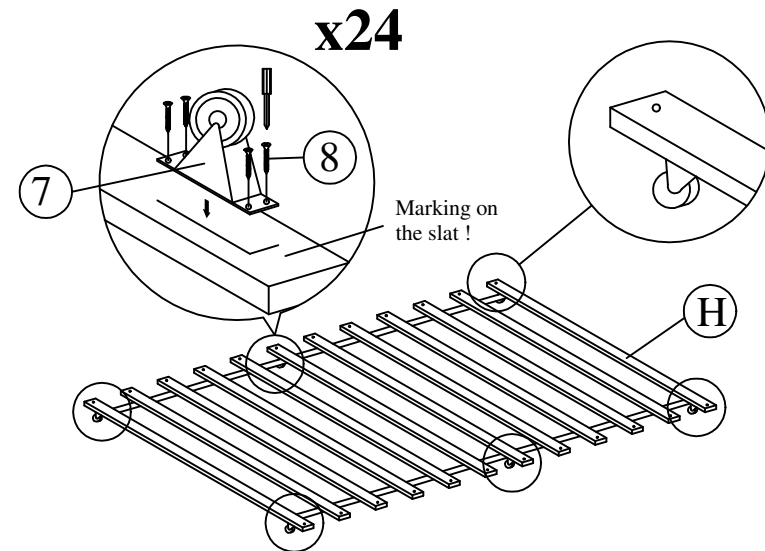

Step 5 : Place the wooden blocks (I) at the corner of the trundle and fix the slat (H) to the trundle at (F) & (G).

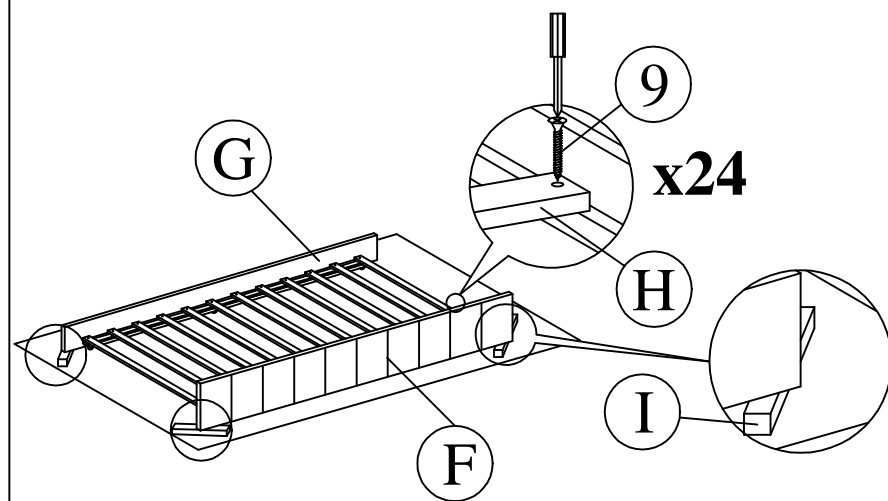

Step 6 : Attach the L-bracket (10) on the slat (H).

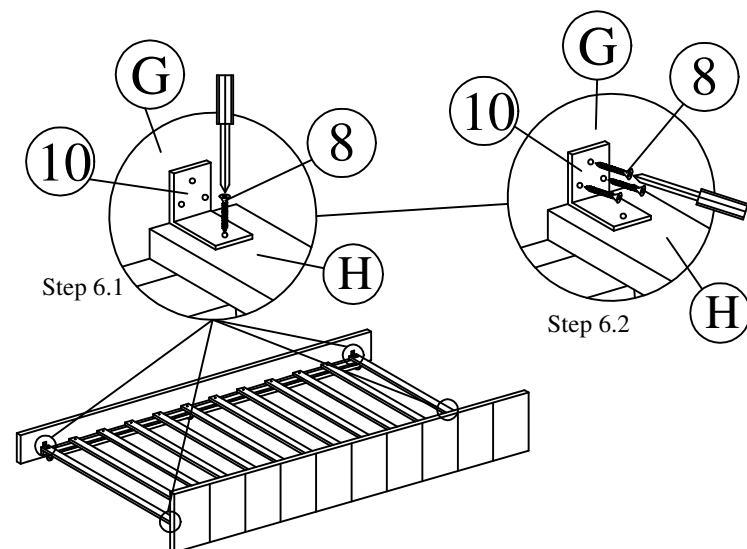

Step 7 : Assembly is complete.

