

ASSEMBLY INSTRUCTION

TIGGY STORAGE BED



IMPORTANT

Please inspect all items carefully before assembling.

If for any reason you need to return this item,
you must return in its original packaging.


Assembled item(s) cannot be returned.

Minimum no. of people
recommended to
assemble this product:

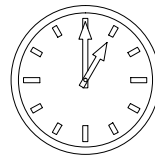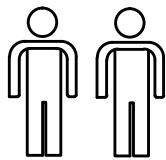


60 mins

Approximate time to
assemble this product




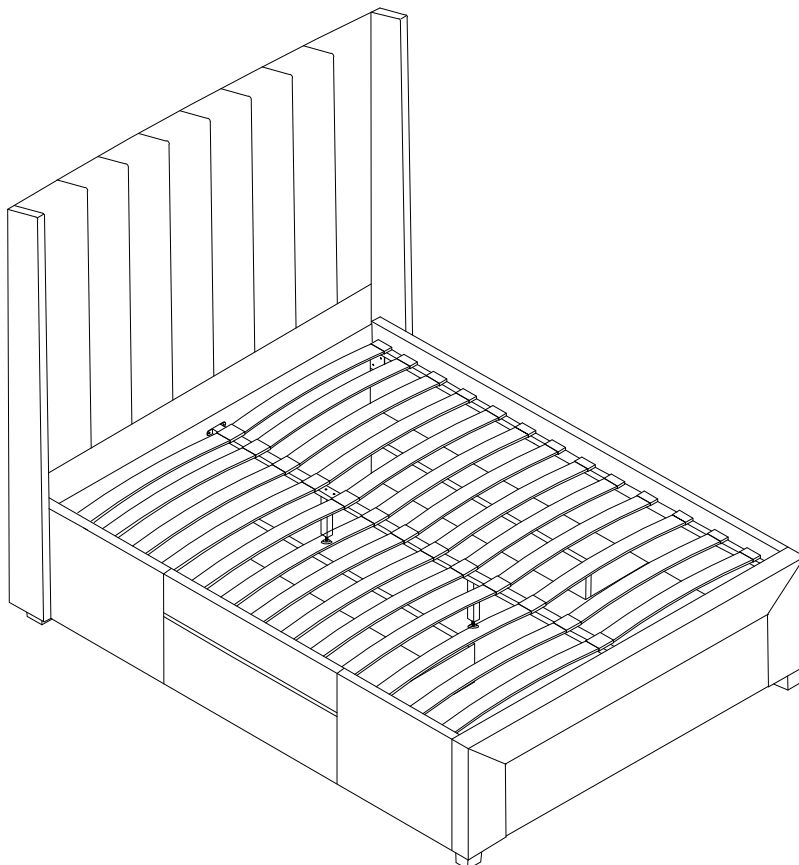


Parts

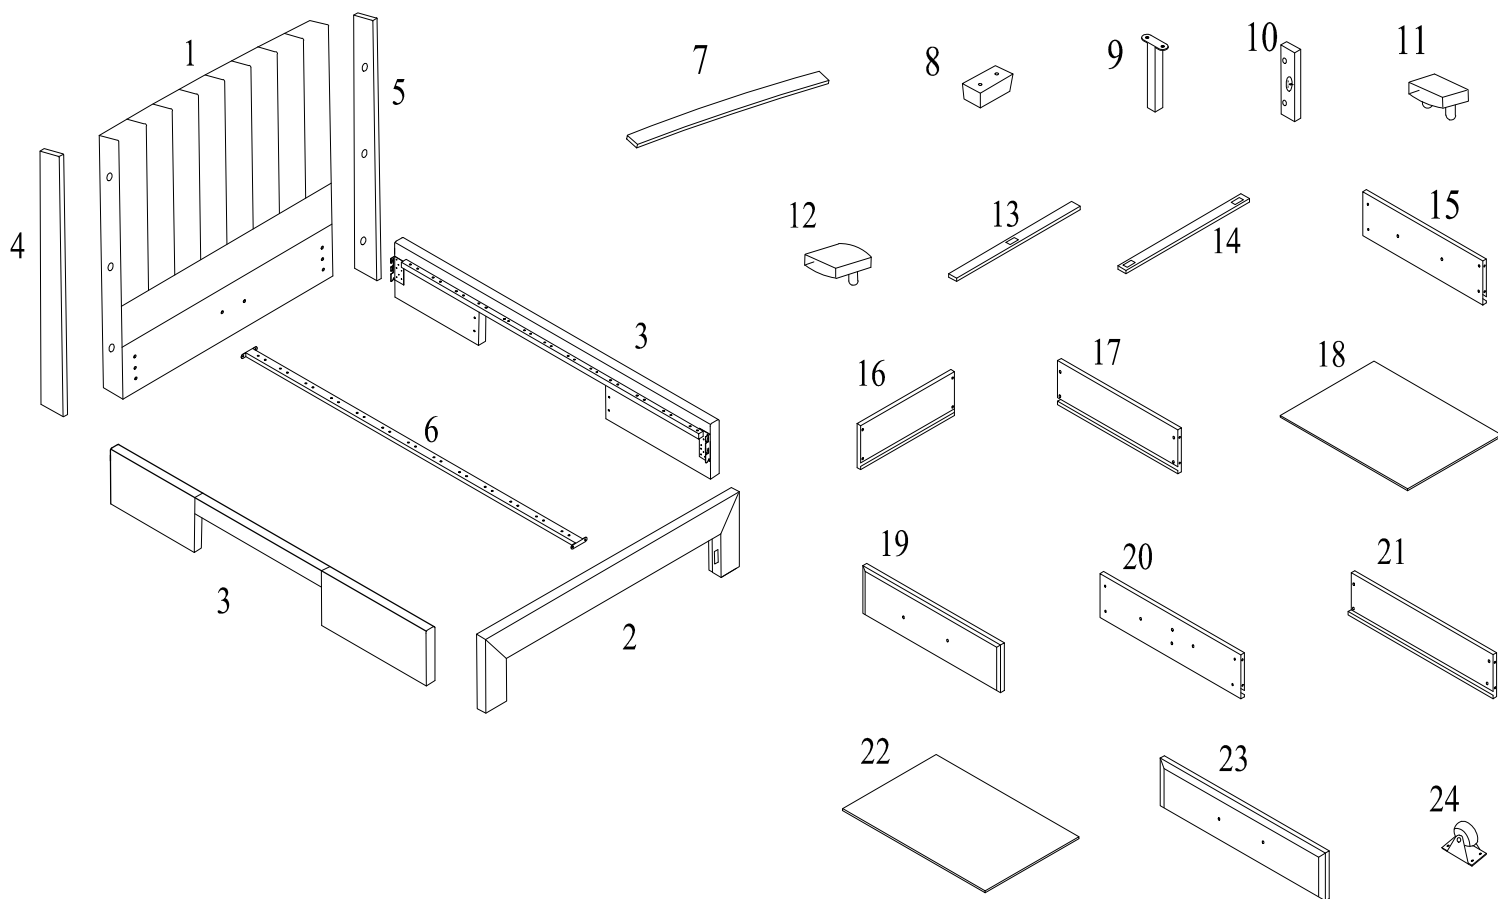


Ref.	Description	Qty	Ref.	Description	Qty
1	Headboard	1	14	Drawer Bottom Support Rail II	6
2	Footboard	1	15	Drawer Front Panel (SR)	2
3	Side Rail	2	16	Drawer Side Panel	6
4	Headboard Winged (Left)	1	17	Drawer Back Panel (SR)	2
5	Headboard Winged (Right)	1	18	Drawer Bottom Panel (SR)	2
6	Support Bar	1	19	Drawer Front Fabric Panel (SR)	2
7	Slats	26/30	20	Drawer Front Panel (FB)	1
8	Feet	4	21	Drawer Back Panel (FB)	1
9	Center Rail Support Leg	2	22	Drawer Bottom Panel (FB)	1
10	Side Panel Support Leg	4	23	Drawer Front Fabric Panel (FB)	1
11	Single Plastic Cap Side	26/30	24	Wheel	13
12	Double Plastic Cap Center	13/15			
13	Drawer Bottom Support Rail I	1			

Fittings


Ref.	Description		Qty
A	Bolt (M6x30mm)		6
B	Screw (M4x50mm)		8
C	Bolt (M8x45mm)		8
D	Bolt (M8x30mm)		16
E	Bolt (M8x40mm)		4
F	Screw (M4x20mm)		52
G	Screw (M5x50mm)		38
H	Bolt (M8x60mm)		6
I	Nut (M8x13mm)		10
J	Washer (M8x22mm)		6
K	Nut		38
L	Allen Key M4		1
M	Allen Key M5		1
N	Spanner		1
O	Adjustable Foot		6
P	Screw (M4x30mm)		2

Additional Tools Required

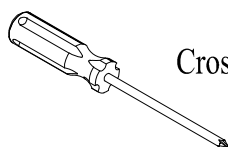

Cross-head Screwdriver


General Hints

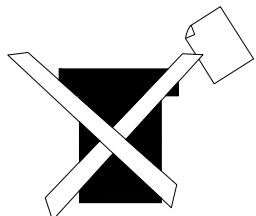

Please retain your assembly instruction and tools provided for future use.
Periodically check that all bolts are still tight.

Step 1


B
8x
Screw (M4x50mm)

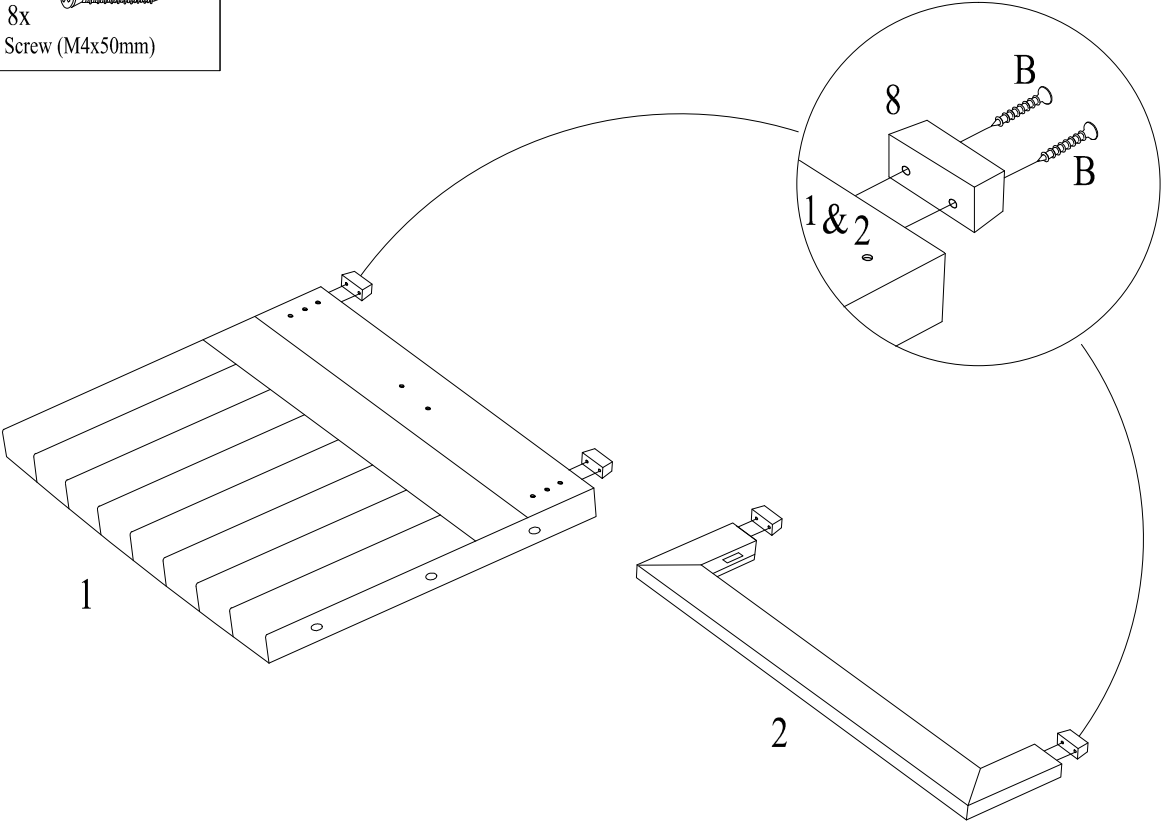

Step 2



D
12x
Bolt (M8x30mm)

M
1x
Allen Key M5

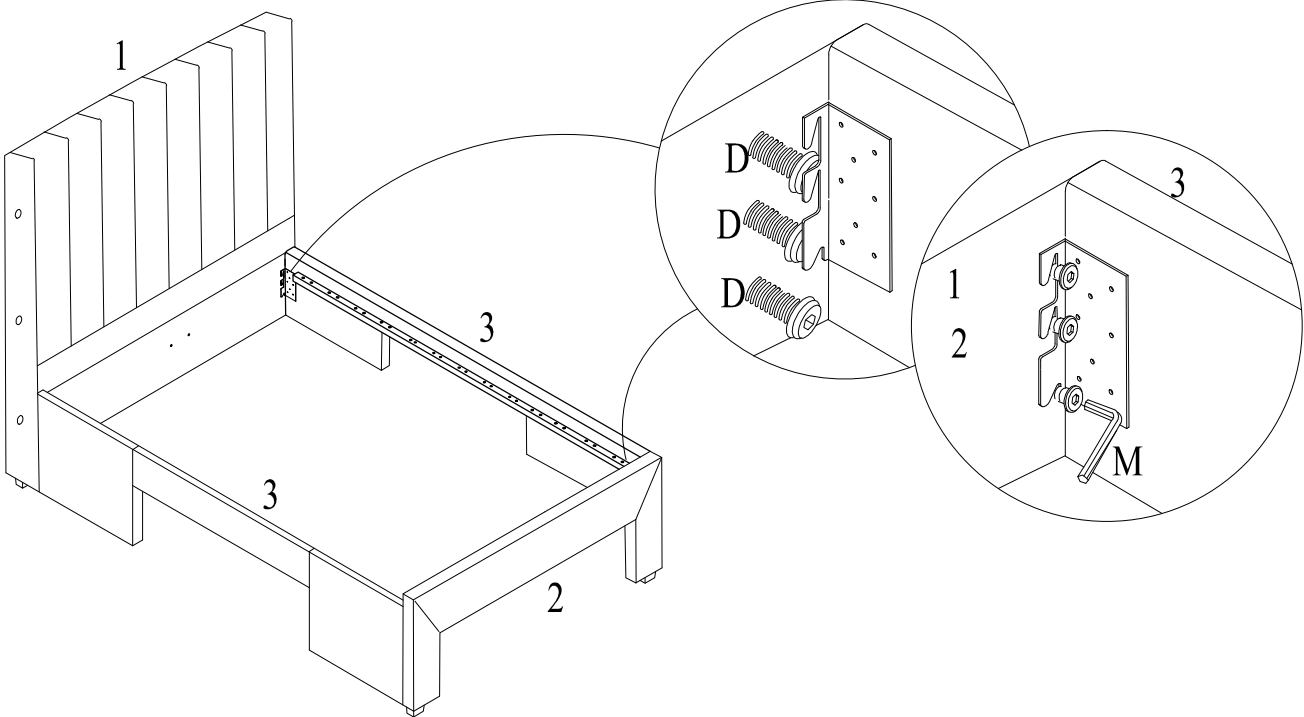



Step 3

C 8x Bolt (M8x45mm)	L 1x Allen Key M4	O 4x Adjustable Foot
----------------------------------	--------------------------------	-----------------------------------

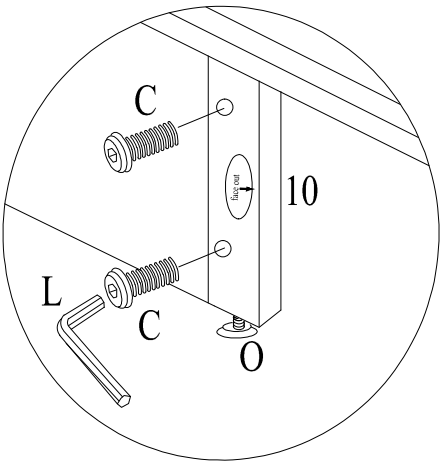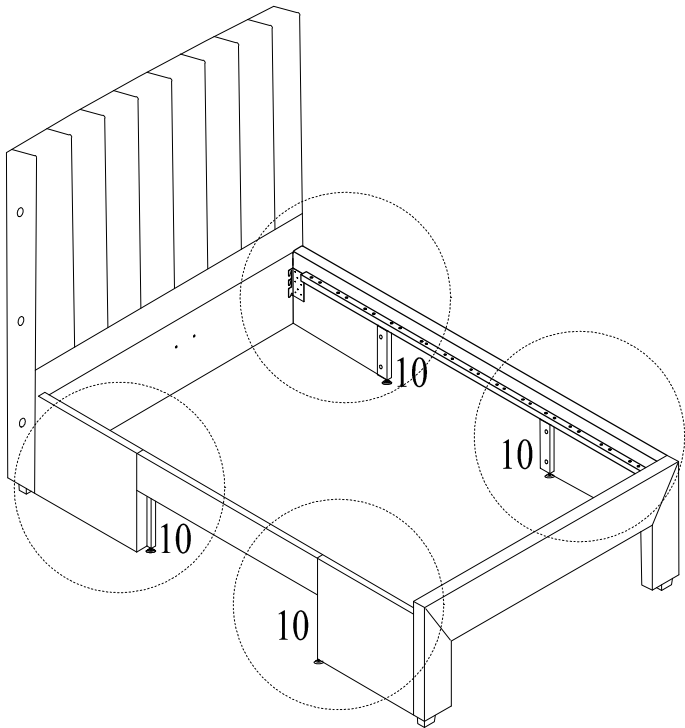



Step 4

D 4x Bolt (M8x30mm)	M 1x Allen Key M5
----------------------------------	--------------------------------


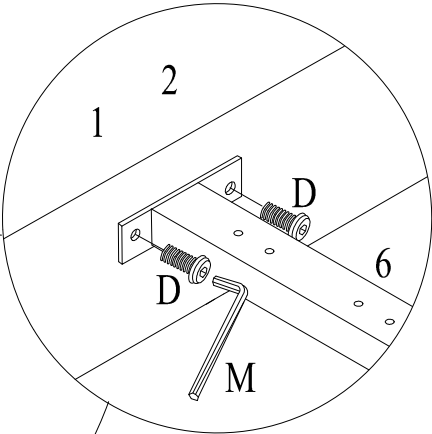
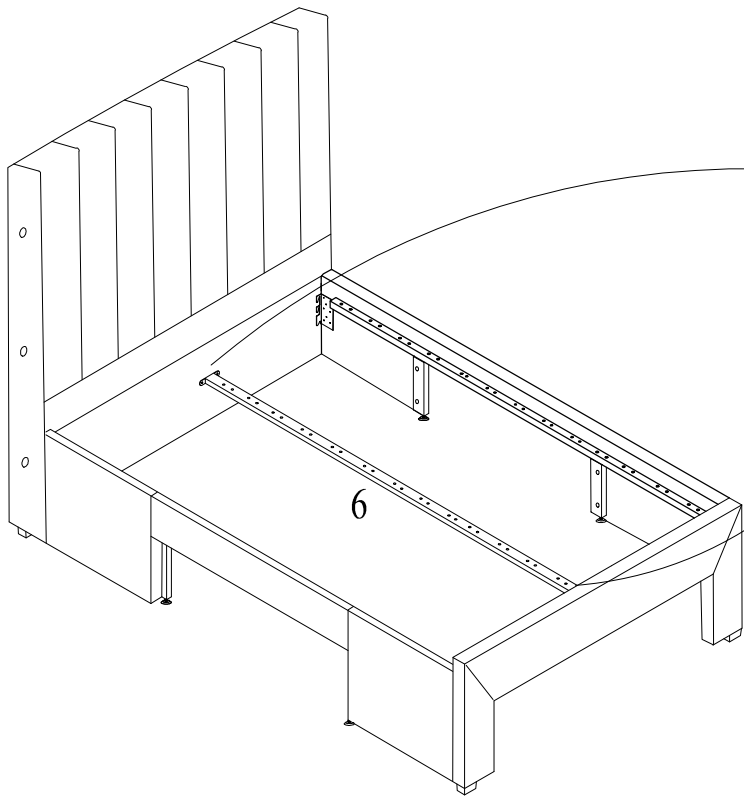


Step 5

E 4x Bolt (M8x40mm)	I 4x Nut (M8x13mm)	M 1x Allen Key M5	N 1x Spanner	O 2x Adjustable Foot
----------------------------------	---------------------------------	--------------------------------	---------------------------	-----------------------------------

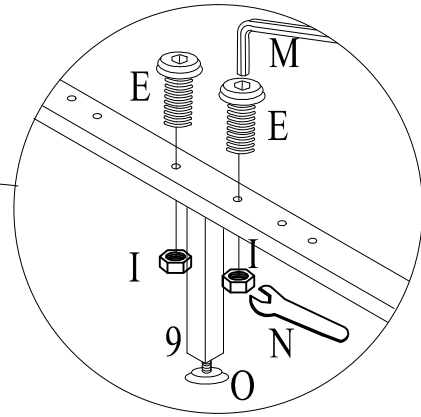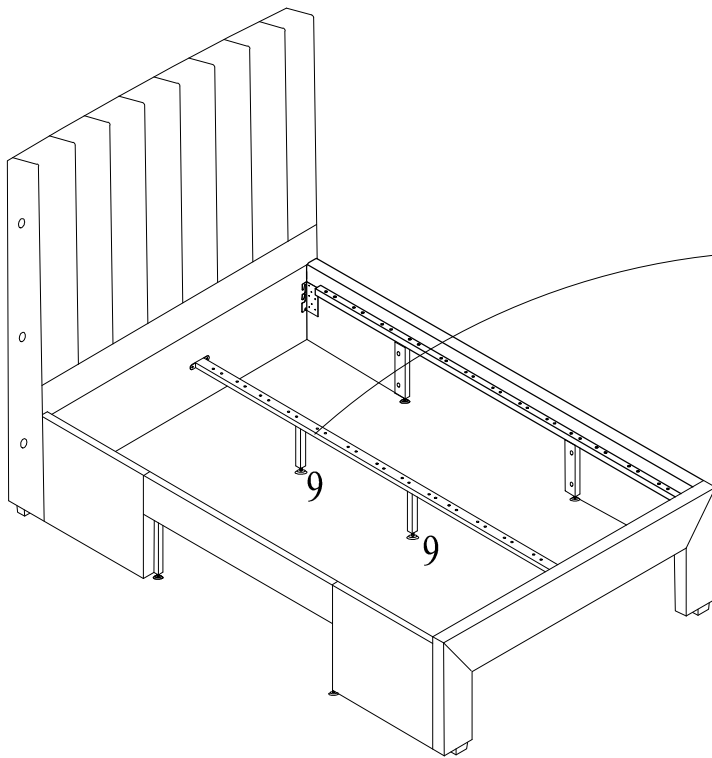

Step 6

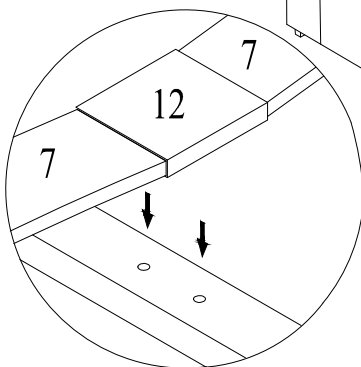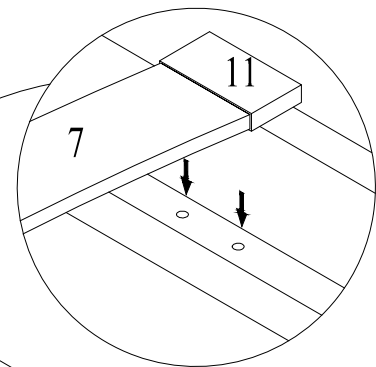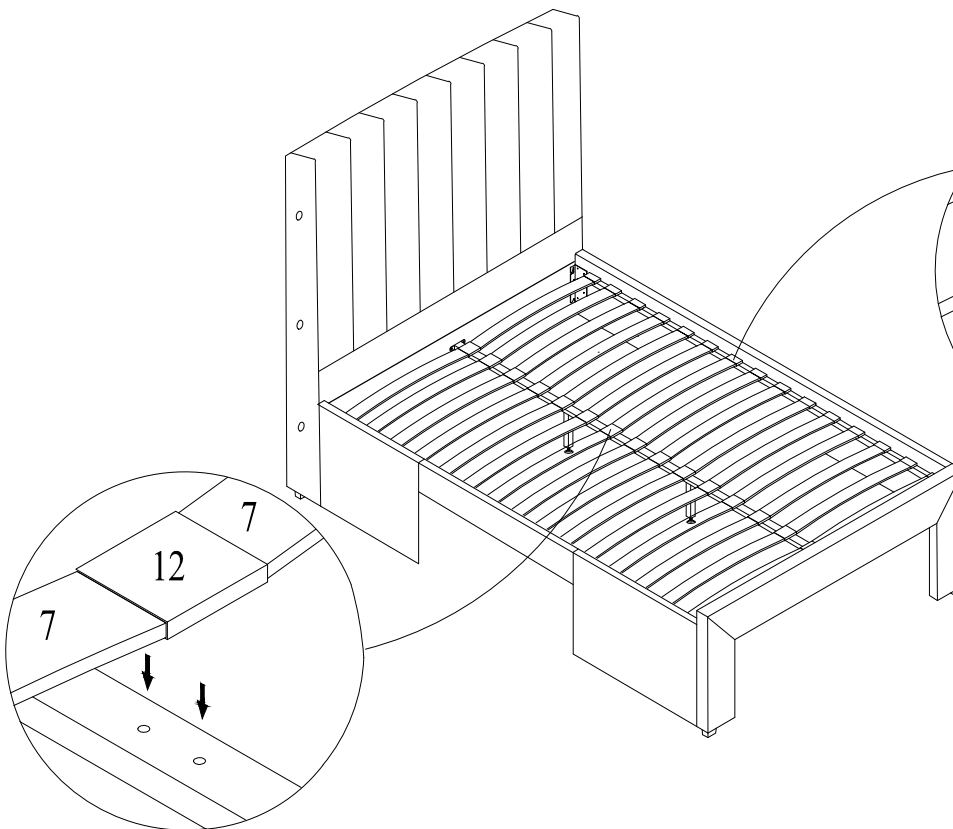


Step 7


K

24x

Nut

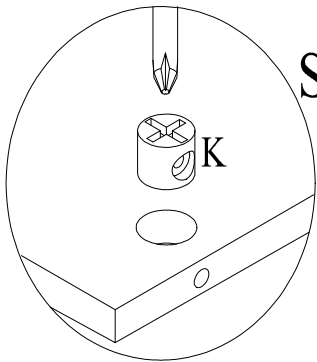

SR

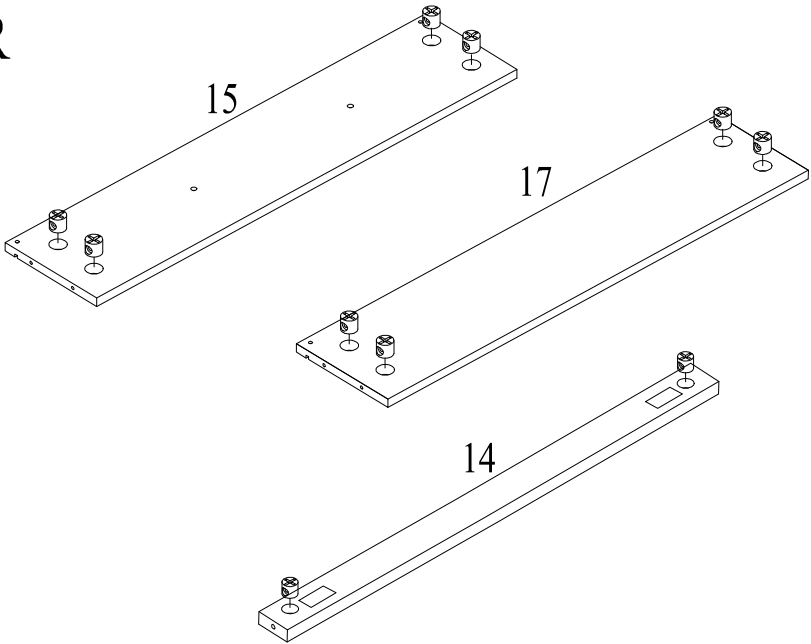


Step 8


G

8x



Screw (M5x50mm)

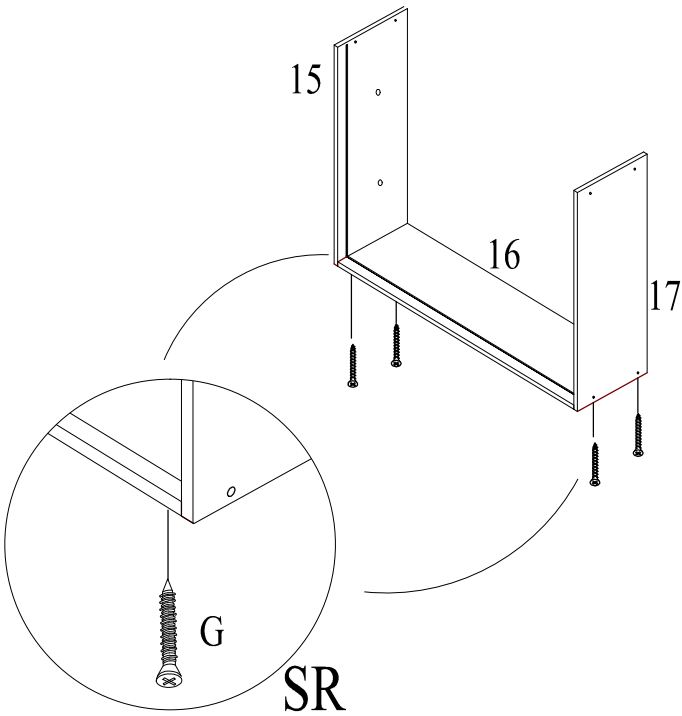



SR

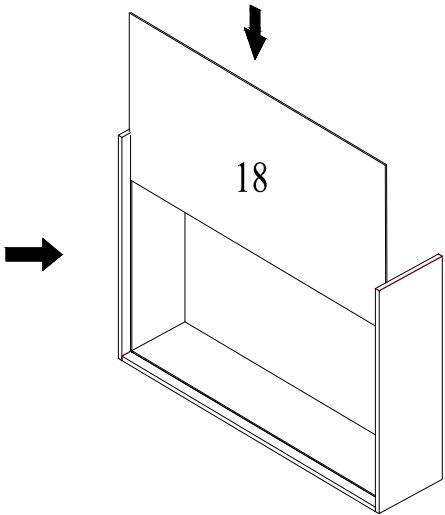

Step 9

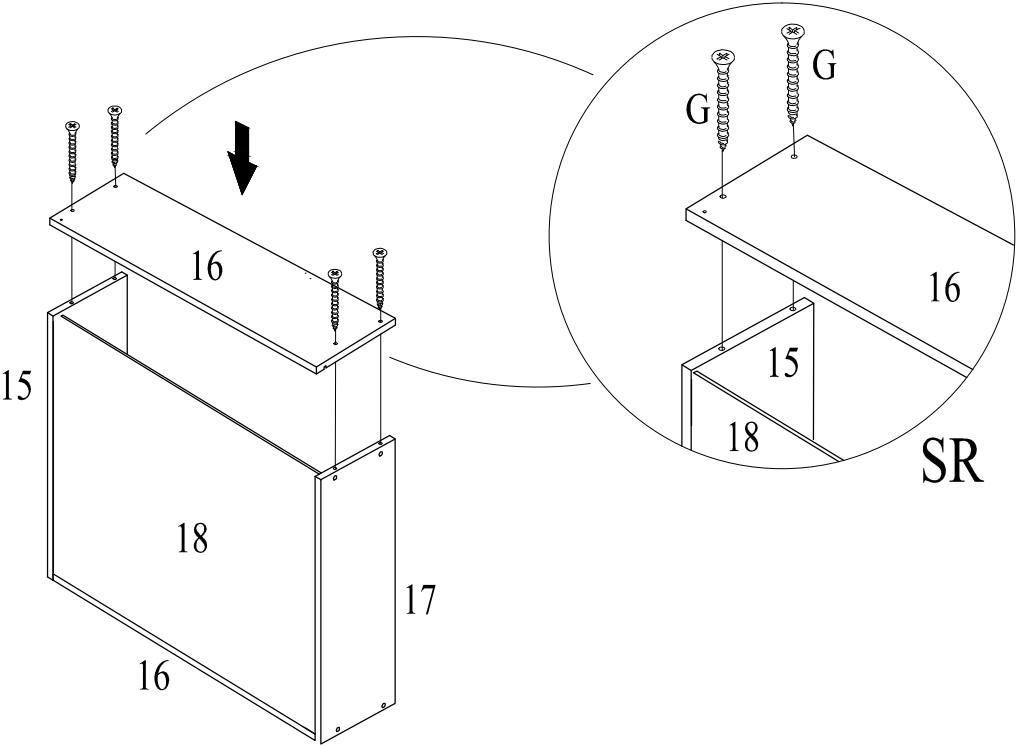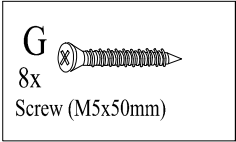

Step 10

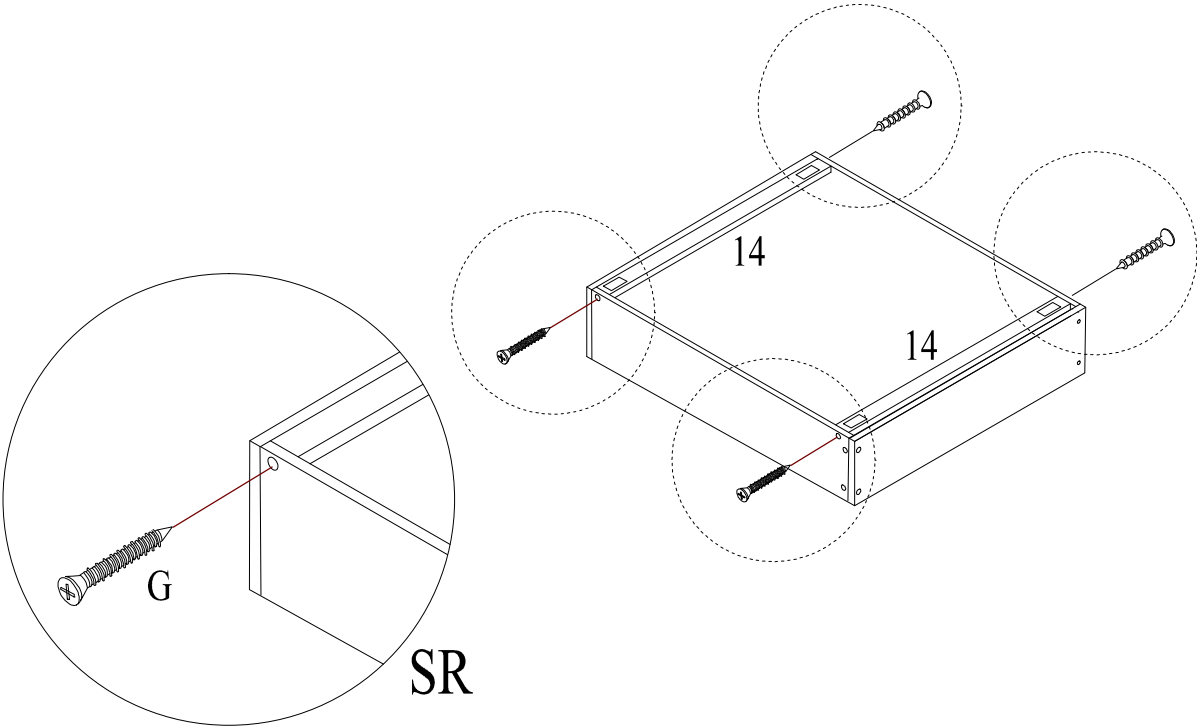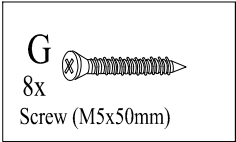


Step 11

F

32x

20mm M4 screw

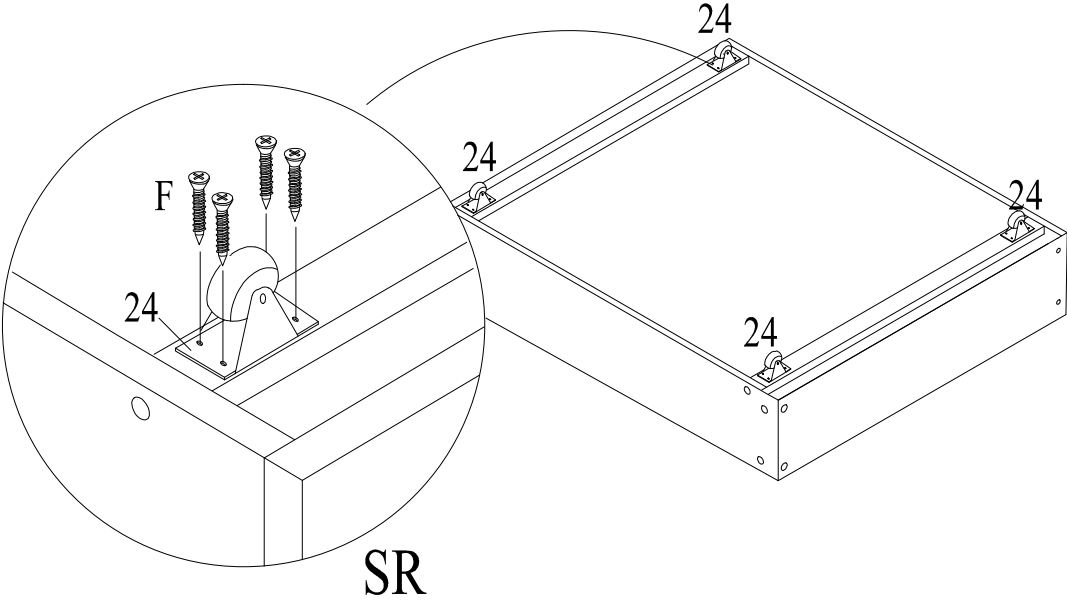


Step 12

K

14x

Nut

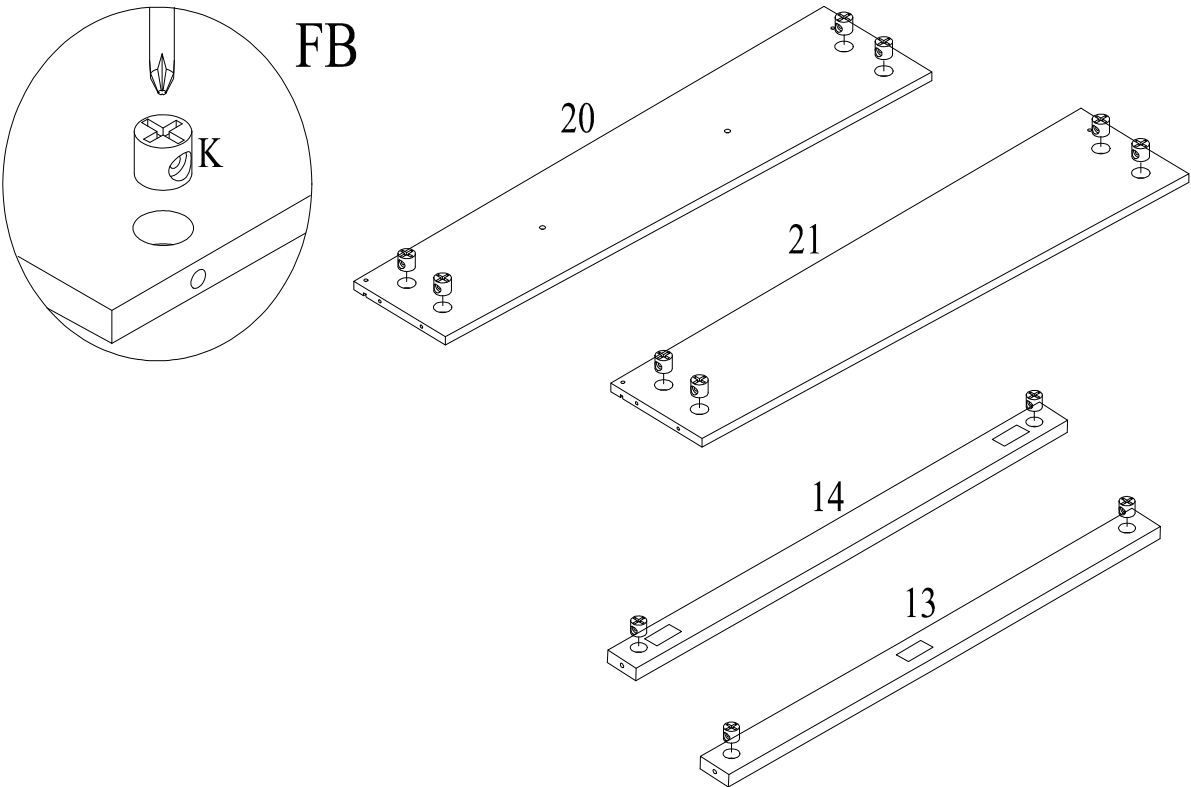


Step 13

G

4x

Screw (M5x50mm)

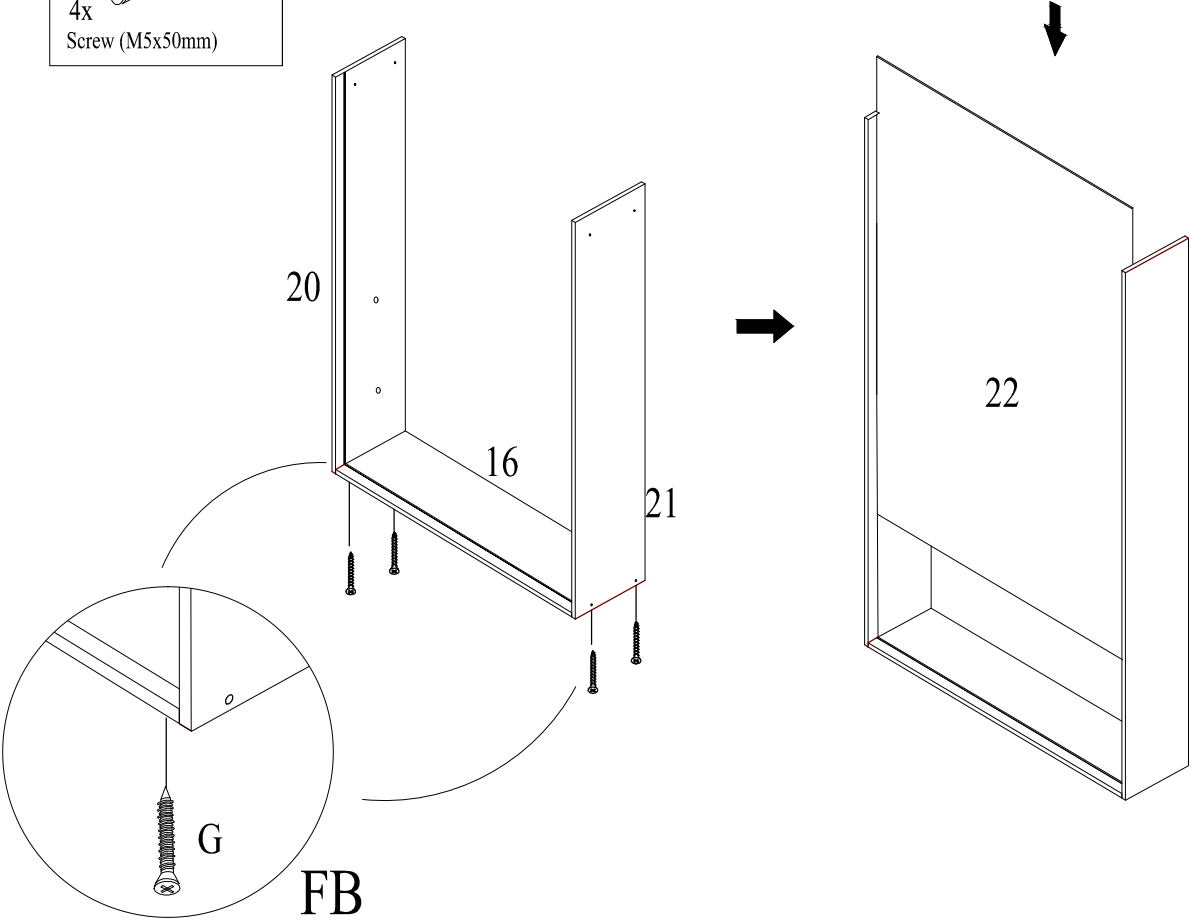


Step 14



G

4x



Screw (M5x50mm)

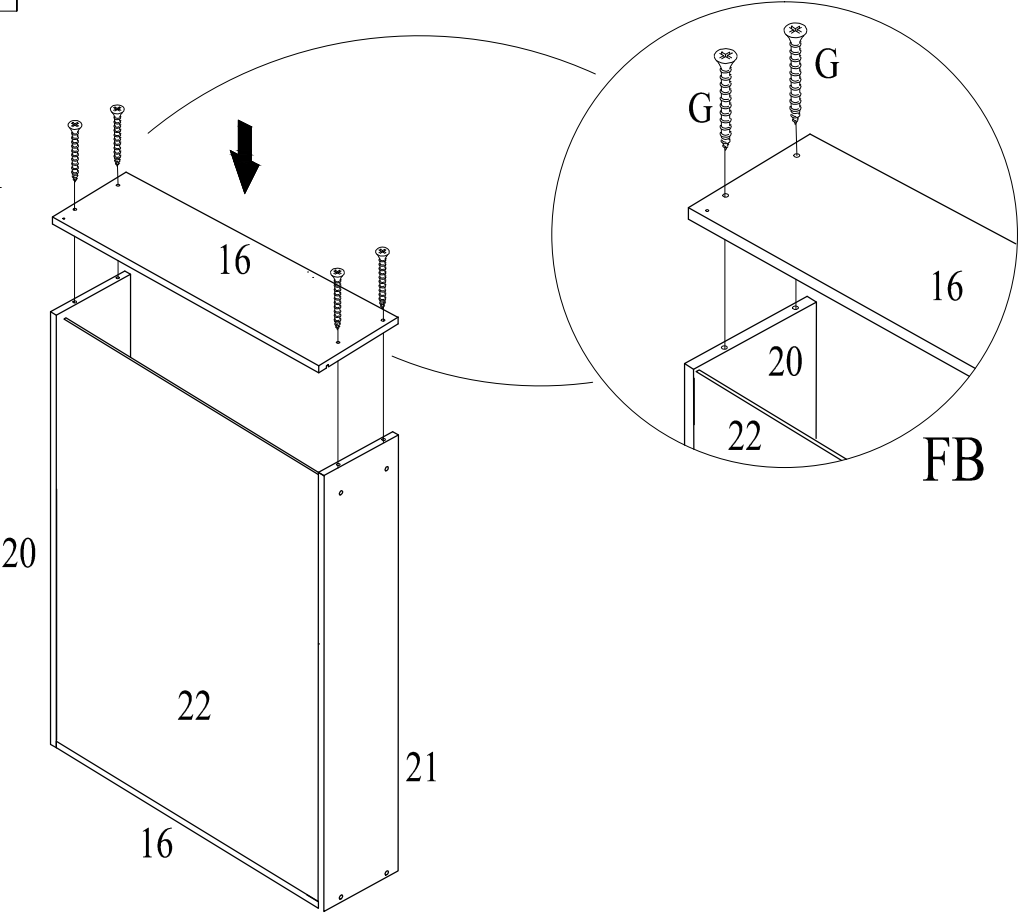

Step 15

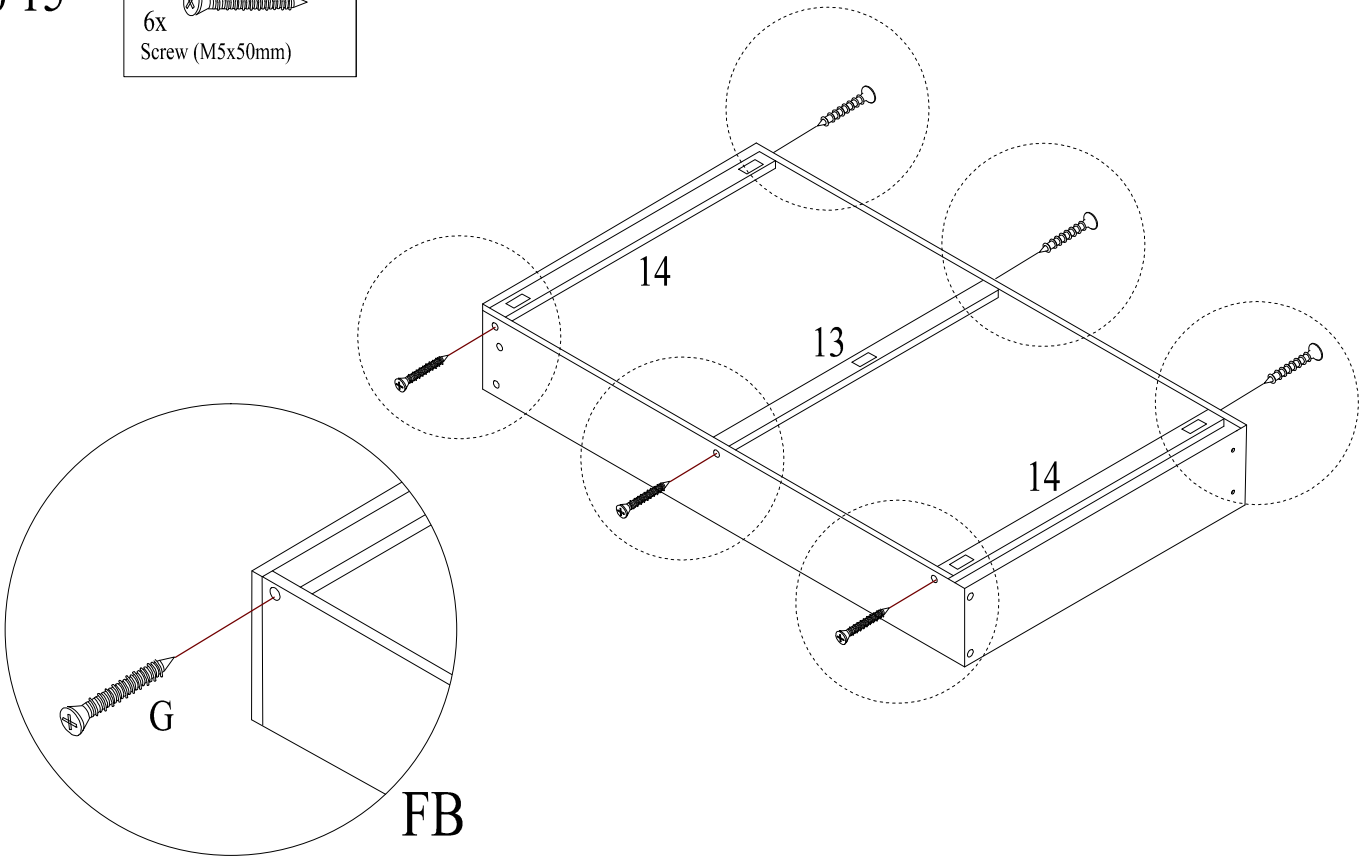
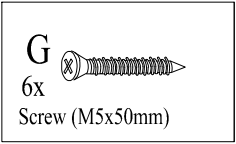


Step 16

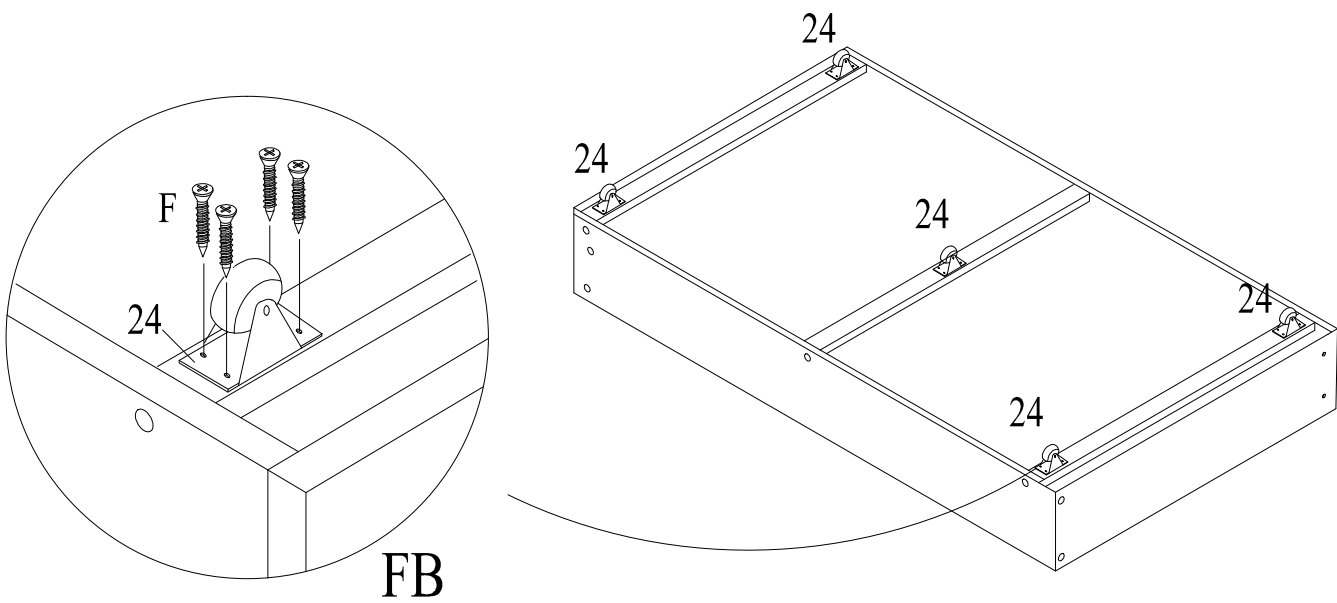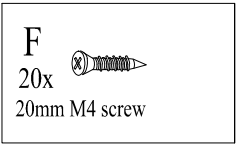



Step 17

A 4x Bolt (M6x30mm)	L 1x Allen Key M4
----------------------------------	--------------------------------

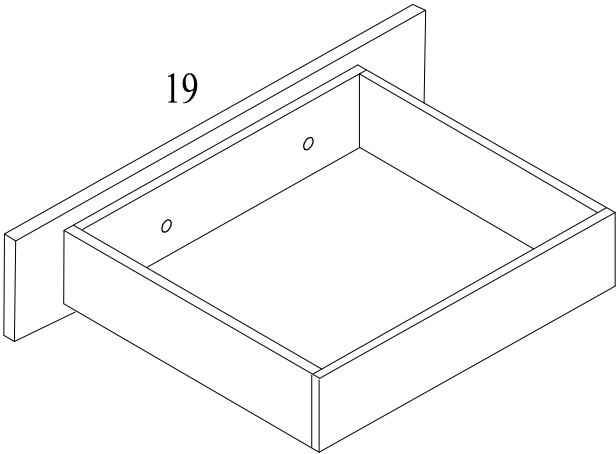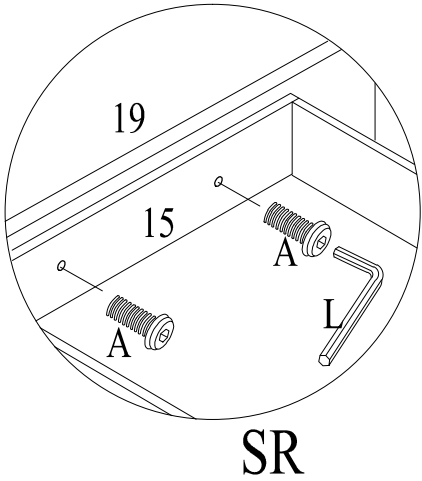


Step 18

A 2x Bolt (M6x30mm)	L 1x Allen Key M4	P 2x 30mm M4 screw
----------------------------------	--------------------------------	---------------------------------

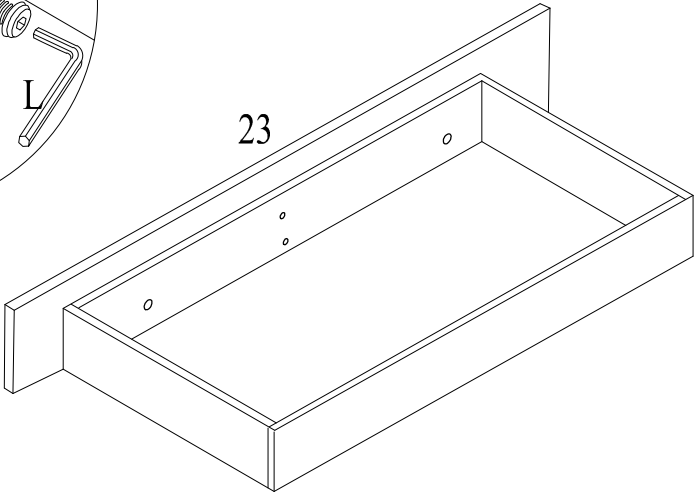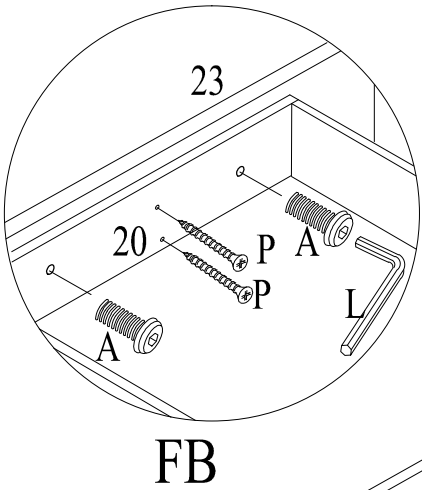

Step 19

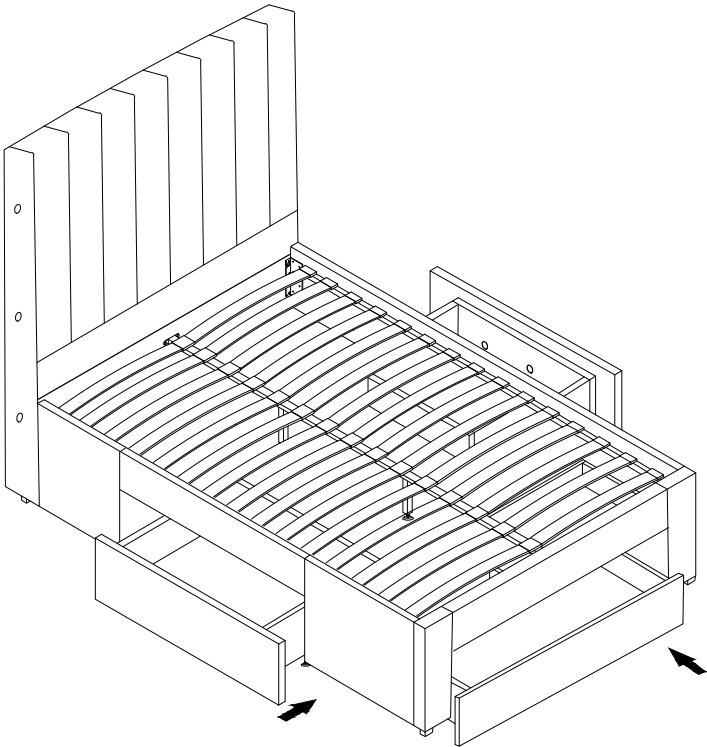

Step 20

H 6x Bolt (M8x60mm)	I 6x Nut (M8x13mm)	J 6x Washer (M8x22mm)	N 1x Spanner
----------------------------------	---------------------------------	------------------------------------	---------------------------

